

|           |   |                             |     |       |          |  |       |     |
|-----------|---|-----------------------------|-----|-------|----------|--|-------|-----|
|           |   | 1                           | 2   |       | 3        | 4                                      | 5     | 6   |
| 重点<br>校对项 | A | 项目                          |     |       |          |  |       |     |
|           |   | 库                           |     |       |          |  |       |     |
|           |   | 文件名                         |     |       |          |  |       |     |
| 1. 版面尺寸   |   |                             |     |       |          |  |       |     |
| 2. 材质标注   |   |                             |     |       |          |  |       |     |
| 3. 物料编码   | B |                             |     |       |          |  |       |     |
| 4. 颜色标注   |   |                             |     |       |          |  |       |     |
| 5. 客户型号   | C |                             |     |       |          |  |       |     |
| 6. 产品名称   |   |                             |     |       |          |  |       |     |
| 7. 重量标注   | D |                             |     |       |          |  |       |     |
| 8. 电压功率   |   |                             |     |       |          |  |       |     |
|           | E |                             |     |       |          |  |       |     |
|           | F |                             |     |       |          |  |       |     |
|           | G |                             |     |       |          |  |       |     |
|           | H |                             |     |       |          |  |       |     |
|           |   | 封面                          |     |       |          |  |       |     |
|           |   | 技术要求（版本号：2016）              |     |       |          |  |       |     |
|           |   | 1. 本页仅示意，图纸从第2页开始；          |     |       |          |  |       |     |
|           |   | 2. 印刷字体需清晰可见，文字不能粘到一起；      |     |       |          |  |       |     |
|           |   | 3. 材质：105g铜版纸；              |     |       |          |  |       |     |
|           |   | 4. 印刷颜色：单黑 Pantone Black C； |     |       |          |  |       |     |
|           |   | 5. 尺寸：145*210mm；            |     |       |          |  |       |     |
|           |   | 6. 装订方式：钉装；                 |     |       |          |  |       |     |
|           |   | 7. 客户名称出口国家：马来西亚 MIDEA。     |     |       |          |  |       |     |
|           |   | 16166000A17097              |     |       |          |  |       |     |
|           |   | 电磁炉                         |     |       |          | MIDEA-C16-RTY1619(C16-RTY1619-GL)-0501 |       |     |
|           |   | C16-RTY1619/C16-RTY1619-GL  |     |       |          |  |       |     |
|           |   | 说明书                         |     |       |          | 105g铜版纸                                |       |     |
|           |   | 标记                          | 处数  | 更改文件号 | 签 字      | 日 期                                    |       |     |
|           |   | 制 图                         | 张奇慧 | 审 核   | 贾晓慧      | 图 样 标 记                                | 重 量   | 比 例 |
|           |   | 设 计                         | ——  | 标准化   | 古广君      | K                                      | 1:1   |     |
|           |   | 校 对                         | ——  | 审 定   | 古广君      | 共 页                                    | 第 1 页 |     |
|           |   | 会 签                         | ——  | 日 期   | 20170731 | 广东美的生活电器制造有限公司                         |       |     |
|           |   | 1                           | 2   |       | 3        | 4                                      | 5     | 6   |



# Induction Cooker User's Manual

Model: C16-RTY1619-GL  
C16-RTY1619-BK

Thank you for purchasing this Midea induction cooker. Please thoroughly read through this instruction manual before use and store it carefully for future use.

The pictures are only for reference, please keep the real product as a standard.

# I.SAFETY INSTRUCTIONS

For safety reasons and to avoid damage to the appliance or injuries to people, please abide by all the safety instructions below.

Ignoring safety warnings may result in injuries.

This appliance does not take into consideration the following situations:

 
- use by children or disabled people without supervision;
- children treating it as a toy.

Symbols: ⓧ **Forbidden** ! **Mandatory** ⚠ **Warning** ⚠ **Attention**


- ⓧ Never heat foods in sealed containers, such as compressed products, cans, or coffee pots, to avoid explosion caused by heat expansion.




- ⓧ Do not directly rinse this induction cooker under water. Do not spill water or soup into the internal parts of the induction cooker.

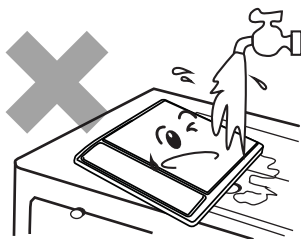

 - ⓧ To avoid affecting product performance and to prevent injury, do not heat empty pots. When in use, do not leave the appliance without supervision for a long time. When leaving the appliance without supervision, make sure there is enough water in the pot.

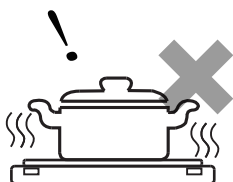


 - ⓧ To avoid accidents, do not place the induction cooker, when in use, on a gas stove (the magnetic lines can heat the metal parts of the gas stove).

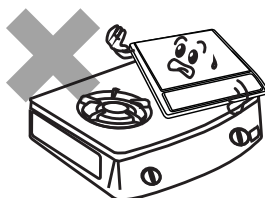


# I.SAFETY INSTRUCTIONS

 
- ⚠ Do not heat iron items on the induction cooker heating plate to avoid danger caused by high temperatures.

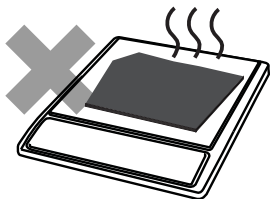

 
- ⚠ The utensils provided for the induction cooker can only be used for cooking with it. These cooking utensils cannot be used on both induction cooker and gas stove.

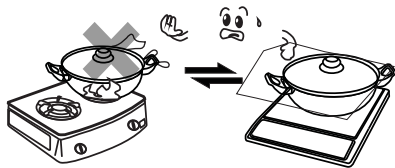

 - ⚠ To avoid injuries such as scalding, do not let children operate the appliance alone.

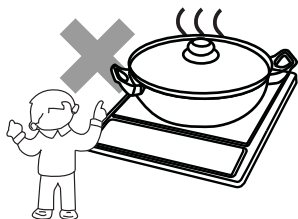

 
- ❗ Unplug the power cord from the outlet after use to avoid fire and/or damaging the electronic components, caused by prolonged electrical connection.

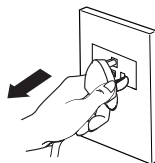

- ⚠ To avoid danger, do not insert any foreign object, such as iron wire, nor block the air ventilation opening or air entry port.




 - ❗ People with heart pacemakers should consult a doctor. Only use the appliance after confirming that it does not affect the pacemaker.

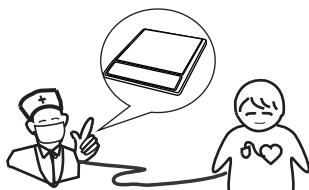


# I.SAFETY INSTRUCTIONS

 
- ❗ To avoid damage, avoid causing impacts on the heating plate.  
**WARNING:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.

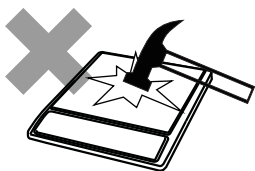

 
- ⚠ To avoid danger, do not place paper, aluminium foil, cloth or other unsuitable articles onto the induction cooker heating plate for indirect heating.

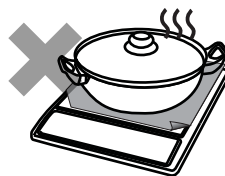

 - ⚠ When using the induction cooker, do not put it on any metal platform (such as iron, stainless steel, aluminium), or place a non-metal pad less than 10cm thick on the heating plate.

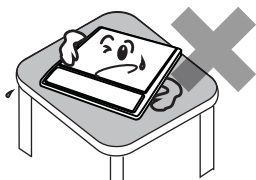

 - ❗ When using the induction cooker, place it horizontally and allow at least 10cm of free space between the sides and back of the induction cooker and the wall. Do not use the induction cooker in narrow spaces. To avoid hindering release of heat, do not cover the ventilation opening.

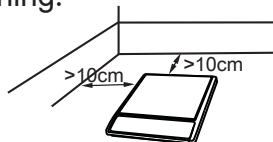

- ⚠ Please use a dedicated and high quality power outlet, with high power rating, equal to or above 13A. Do not use poor quality outlets. Do not share the power outlet with electrical appliances with high power ratings, such as air conditioners, electrical stoves etc to avoid fires caused by overburdening the outlet.




- ❗ To avoid danger, if the power cord is damaged, have it replaced by agents of the manufacturer, its maintenance department or specialized personnel from a similar department.




# I.SAFETY INSTRUCTIONS

 
- ⚠ Do not touch the cooker plate with sharp tools to avoid cracking or damaging the plate. If cracking is found on the cooker plate, turn off the appliance to avoid any electrical shock that might occur.

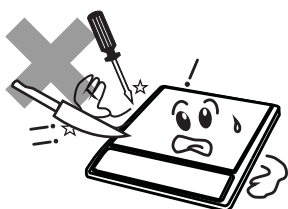

 
- ⚠ When using the induction cooker or after use, please keep it clean. Protect the induction cooker from bugs, dust and humidity. Avoid letting cockroaches etc fall into the internal parts of induction cooker and causing a short circuit of the electrical board. When not in use for a long period, please clean it and put it into a plastic bag to store it.

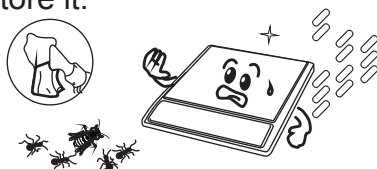

 - ⚠ The cooker cannot be overloaded. Overloading the plate may damage the plastic cover and cooker plate.

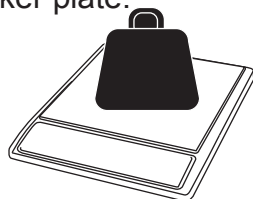

 - ⚠ Metallic objects such as knives, forks, spoons and lids should not be placed on the hotplate since they can get hot.

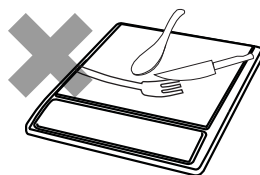

- ⚠ Do not use the induction cooker near a gas stove, kerosene stove, gas cooker or in any space with an open fire or an environment with high temperature.



- ⚠ Do not use the induction cooker by putting it onto a carpet, tablecloth or thin paper to avoid blocking the air inlet opening or air outlet opening, which results in influencing heat emission.




# I.SAFETY INSTRUCTIONS

 ⚠ Always clean the induction cooker to prevent mess from getting into the fan, which could influence the normal operation of the appliance.



⚠ When operating the appliance or after moving the pot, the cooking area will remain hot for a period of time. Do not touch it, be careful of scalding caused by the high temperature.

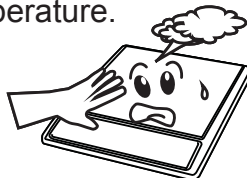

This appliance is intended to be used in household and similar applications such as:- staff kitchen areas in shops, offices and other working environments; -farm houses;-by clients in hotels, motels and other residential type environments ; -bed and breakfast type environments. Indoor use only.

**⚠ Mandatory**

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

**⚠ Mandatory**

We suggest that you should periodically check that there are no object (glass, paper, etc) that could obstruct the inlet under your induction cooker.

**⚠ Warning**

Never have the induction cooker to work without food inside, otherwise its operational performance may be affected and danger may happen.

**⚠ Mandatory**

Children should be supervised to ensure that they do not play with the appliance.

**⚠ Warning**

The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote-control system.

**⚠ Warning**

 
## II.PRODUCT INTRODUCTION

The induction cooker is able to meet various kinds of cooking demands by electromagnetic heating, high thermal efficiency, is safe and reliable, easy to clean.

### Performance Parameters

| Model                            | Applied voltage/frequency | Rated power | Dimension (mm) | Weight (kg) |
|----------------------------------|---------------------------|-------------|----------------|-------------|
| C16-RTY1619-GL<br>C16-RTY1619-BK | 220-240V~ 50/60Hz         | 1600W       | 280x280x65     | 2.1         |

### Product Sketch Map

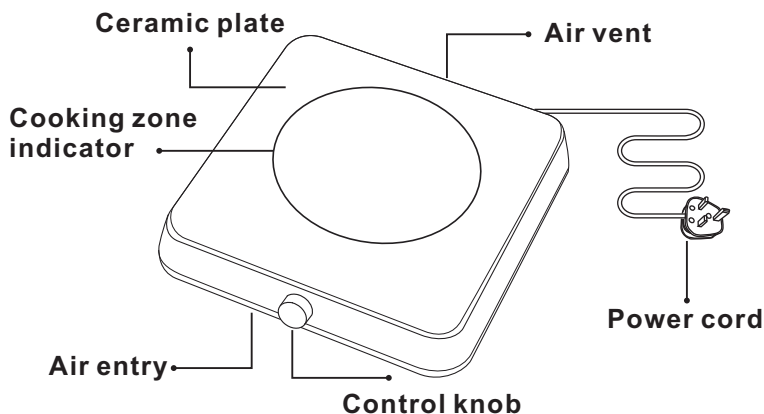

### Control knob

- ↺ Counter clockwise direction: decrease power setting
- ↻ Clockwise direction: increase power setting



## II.PRODUCT INTRODUCTION

### Before using New Induction cooker

- Read this guide, taking special note of the “Safety Instructions” section.
- Remove any protective film that may still be on your ceramic plate.

### Put the pot on the ceramic plate

- Make sure the air vents are not blocked and keep utensils away from the immediate surrounds of the ceramic plate.
- Make sure the cookware which has food or liquid is placed in the center of ceramic plate.

### III. OPERATION INSTRUCTIONS

#### Plug in

- After the power supply is connected, a beep will be heard. The LED flash, indicating that the induction cooker is in standby mode.

#### Heating

- Turn the control knob clockwise, a beep will be heard, the LED will light, the power setting from 1 to 5 level, the induction cooker starts heating.
- The default heating time is 2 hours. After 2 hours, the induction cooker will stop heating automatically, the LED will flash indicating that induction cooker is return in standby mode.

#### Switch Off

- Turn the control knob counter clockwise to the left, a beep will be heard, the induction cooker switches off.

## IV. COMPATIBLE COOKWARE



Iron oil frying  
pan



Stainless steel pot



Iron pan



Iron kettle



Enamel stainless  
steel kettle



Enamel cooking  
utensil



Iron plate

- Requirement for pot materials: containing magnetic inducing materials.
- Shape requirement: flat bottom, with the diameter more than 14.5 cm and less than 18 cm.
- After the first use, some white spots would appear at the bottom of the pot. This is normal.
- Please pour some vinegar into the pot, heat it at about 60-80 °C, then wipe the spots away with brush.
- Incompatible pots material: glass, ceramic, aluminium, copper and other non magnetic material.
- If the pot removed, the induction cooker will stop heating immediately. After the buzzer sounds for 1 minute, it will go into standby mode automatically.

## V. CLEANING AND MAINTENANCE

- Before cleaning, please switch off the appliance first and then disconnect the power plug from the power outlet. Wait till the cooker plate of the induction cooker is not hot and start cleaning.
- After using the induction cooker for a long time, the opening of air inlet/air outlet will pile up with dust or other dirt, please wipe it with a soft dry cloth. Dust in the air inlet and outlet can be cleaned by using a soft brush or a mini vacuum cleaner.

**Note: Please do not rinse it with water.**

## V. CLEANING AND MAINTENANCE

For oil spots on the cooker plate, wipe the cooker plate by using a soft moist cloth with a little tooth paste or mild detergent. And then use a soft moist cloth to wipe it until no stain remains.

When not using it for a long time, please disconnect the power plug from the power outlet and protect the induction cooker from any dust or bugs.

## VI. TROUBLESHOOTING

| Abnormalities  | Key checking points and trouble shooting  |
|--|---|
| After plugging in the power cord and pressing the "ON/STANDBY" key, the indicator and display do not light up. | <ul style="list-style-type: none"><li>• Is the power plug properly connected?</li><li>• Is the switch, power outlet, fuse or power cord damaged?</li></ul>  |
| The "ON/STANDBY" indicator lights up and the display works normally, but heating does not start.               | <ul style="list-style-type: none"><li>• Is the pot material proper?</li><li>• Is the appliance in a "Preset" working status?</li><li>• For other causes, please take the appliance to a repairing and maintenance site to be fixed.</li></ul>   |
| Heating suddenly stops during the process.   | <ul style="list-style-type: none"><li>• Is the temperature of the oil too high when frying dishes?</li><li>• Is the temperature of the surroundings very high?</li><li>• Is the air inlet or air outlet of the induction cooker blocked?</li><li>• Is the default heating time of the induction cooker over?</li><li>• The self-safety protection of the induction cooker starts, wait for several minutes and connect power to use it.</li></ul> |

### Emergency

During using, if there are some abnormal cases, please unplug immediately and disconnect power.

For any failure of the product, please contact the special maintenance department or the customer service center.

