

This quick reference guide is provided for informational purposes only and does not replace, modify or change in any manner the user Manual & Installation Instructions.

Warning

- To reduce the risk of fire, electric shock, or injury to persons when using or installing the product, read and obey all safety information provided in the User Manual & Installation Instructions that accompanied the product.
- Do not install or store appliance in an area where it will be exposed to dripping water or outside weather conditions. See Location of Your Washer section in the User Manual & Installation Instructions.
- NOTE: This appliance must be properly grounded and installed as described in these steps and the User Manual & Installation Instructions. Electrical service to the washer must conform with local codes and ordinances and the latest edition of the national Electrical Code, ANSI/NFPA 70.

Gather the required tools and parts before starting installation. The parts supplied are in the washer drum.

- 1/4" nut driver
- 3/8" socket with ratchet
- 3/8" open-end wrench
- Adjustable wrench or 7/16" socket with ratchet
- Adjustable wrench or 9/16" open-end wrench
- Channel-lock adjustable pliers
- Carpenter's level



Water Hoses(2) Transport Hole Plug


REMOVE SHIPPING HARDWARE ASSEMBLIES BEFORE USE

1

WARNING: Failure to remove all shipping hardware may result in violent vibrations, severe damages to the machine and void any warranties you may have.

- Once the machine is within 4 feet of its final installation location, use an adjustable or 1/2" socket wrench to remove the following parts from the back of your machine:


- Shipping Bolts (x4)
- Washers (x4)
- Power Cord Retainers (x4)
- Rubber Grommet Spacers (x4)

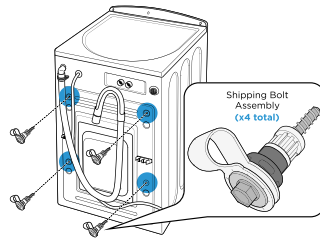

- Insert the provided hole caps into the open bolt holes after the shipping bolts and spacer assemblies have been removed.

- Save the four shipping bolt assemblies in a safe place for any future shipping/moving needs.

Make sure the small triangle foam is removed with the bottom one together. If not, lay the unit down with side surface, then remove the small foam from the unit bottom manually.

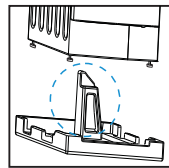

2 Select the location


Before installing the washing machine, the location characterized as follows shall be selected:

- Rigid, dry, and level surface (if not level, please make it level with reference to the following figure "Adjust Leg")
- Avoid direct sunlight
- Sufficient ventilation
- Room temperature is above 0°C
- Keep far away from the heat resources such as coal or gas.

Make sure that the washing machine will not stand on power cord.
Do not install the washing machine on the carpet floor.


3 Connect inlet pipe

Connect the inlet pipe as indicated in the figure. For the model which has hot valve, please connect the hot valve to hot water tap.

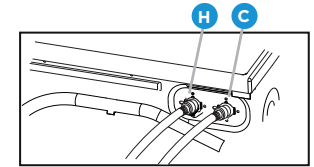

4 Install inlet pipe



- Connect the elbow to tap and fasten it clockwise.
- Connect the other end of inlet pipe to the inlet valve at the backside of washing machine and fasten the pipe tightly clockwise.

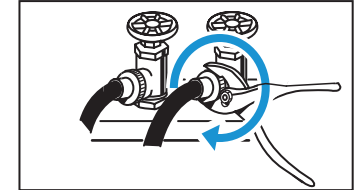


Note: after connection, if there is any leakage with hose, then repeat the steps to connect inlet pipe. The most common type of tap shall be used to supply water. If tap is square or too big, then standard tap shall be changed.

5 Drain system options


Standpipe drain system-wall or floor (views A & B):
The standpipe drain requires a minimum diameter standpipe of 2" (50 mm). The minimum carry-away capacity can be no less than 17 gal. (64 L) per minute. The top of the standpipe must be at least 60cm high and no higher than 100cm from the bottom of the washer.

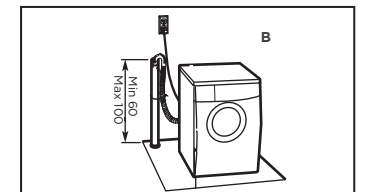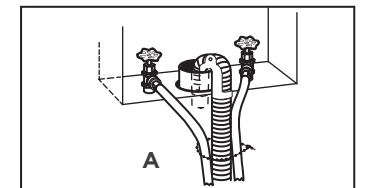

Laundry tub drain system (view C):
The laundry tub needs a minimum 20 gal. (76 L) capacity. The top of the laundry tub must be at least 60cm above the floor.




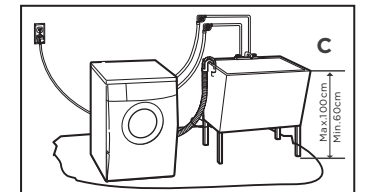


Floor drain system (view D):
The floor drain system requires a siphon break that may be purchased separately. See "Tools and Parts". The siphon break must be a minimum of 28" (710 mm) from the bottom of the washer. Additional hoses might be needed.

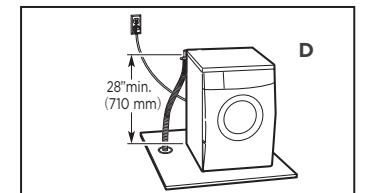

6 IMPORTANT : Level your machine before use!

TIP : Most smartphones have an integrated level app
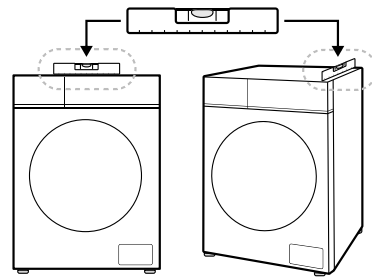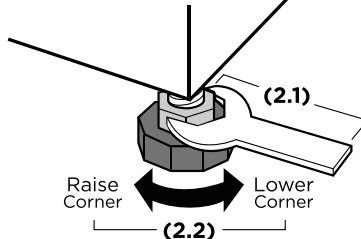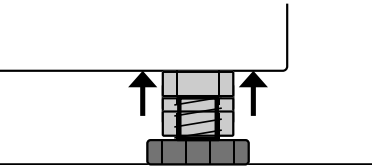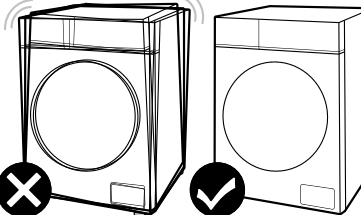
<p>1 Use a level to check the top side-to side and then front-to-back. Note which leg(s) need to be adjusted.</p> 	<p>2 (2.1) Use a wrench to loosen the lock nuts on any uneven legs, then adjust the rubber feet (2.2) to raise or lower that corner.</p>  <p>After adjustment, refer back to step 1. Repeat until fully level</p>
<p>3 After leveling, firmly tighten the Lock Nuts on all four legs up to the bottom of your machine.</p> 	<p>4 Test the stability of your machine by gently rocking it side to side. If it is unstable, revisit steps 1-3.</p> 


CARE AND CLEANING

Remove the remaining water in drain pump

Warning To avoid burning, it shall be done after the hot water inside the machine cools down.

Remove the remaining water in inlet pipe:

1. Close the tap.
2. Screw off the inlet pipe from tap and put its end into the container.
3. Start up any procedure except single Wash or Drain procedure. Water will be drained out of inlet pipe if any for about 40 seconds.
4. Reconnect the inlet pipe to tap.

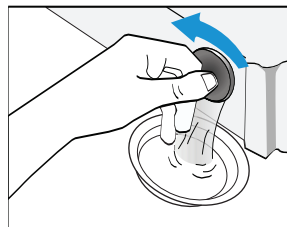

The start of the appliance does not work or it stops during operation. First try to find a solution to the problem, if not, contact the service centre.

Description	Reason	Solution
Washing machine cannot start up	Door is not closed properly	Restart after the door is closed Check if the clothes is stuck
Door can't be opened	Washer's safety protection design is working	Disconnect the power, restart the product
Water leakage	The connection between inlet pipe or outlet hose is not tight	Check and fasten water pipes Clean up outlet hose
Detergent residues in the box	Detergent is dampened or agglomerated	Clean and wipe the detergent box
Indicator or display does not light	Disconnect the power PC board or harness has connection problem	Check if the power is shut down and the power plug is connected correctly
Abnormal noise		Check if the fixing (bolts) have been removed Check it's installed on a solid and level floor

Description	Reason	Solution
E30	Door is not closed properly	Restart after the door is closed Check if the clothes is stuck
E10	Water injecting problem while washing	Check if the water pressure is too low Straighten the water pipe Check if the inlet valve filter is blocked
E21	Overtime water draining	Check if the drain hose is blocked
E12	Water overflow	Restart the washer
EXX	Others	Please try again first, call up service line if there are still troubles

Note!

- After the check, activate the appliance. If the problem occurs or the display shows other alarm codes again, contact the service.