


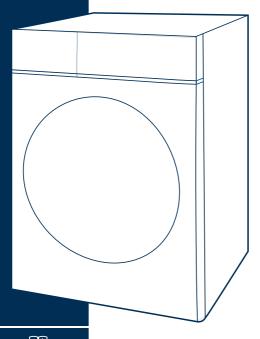

WASHER DRYER

Front Loading





Read This Manual [1]
Read all instructions and explanations for the installation before use. Follow the instructions carefully. Keep the operation instructions handy for later use. If the appliance is sold or passed on, ensure that the new owner always receives this operation instructions.

CAUTION: HOT SURFACE!



CAUTION: RISK OF FIRE!

MODEL: MF200D100WB/T MF200D120WB/T

THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

CONTENTS

THANK YOU LETTER	01
SAFETY INSTRUCTIONS	02
SPECIFICATIONS	06
PRODUCT OVERVIEW	07
QUICK START GUIDE	08
PRODUCT INSTALLATION	10
OPERATION INSTRUCTIONS	14
APP SETUP AND OPERATION	24
CLEANING AND MAINTENANCE	26
TROUBLE SHOOTING	31
TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT	32
DISPOSAL AND RECYCLING	33
DATA PROTECTION NOTICE	34
WARRANTY CARD	35



CAUTION: HOT SURFACE!



CAUTION: RISK OF FIRE!



Read all instructions and explanations before use. Follow the instructions carefully. Keep the operation instructions handy for later use. if the appliance is sold or passed on then ensure that the new owner always receives these operation instructions.

SAFETY INSTRUCTIONS

- This appliance is not intended for use by persons(including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- The openings must not be obstructed by a carpet.
- This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices and other working environments;
- farm houses:
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- The maximum permissible inlet water pressure, 1 MPa, for appliances intended to be connected to the water mains.
 - The minimum permissible inlet water pressure, 0.05 MPa, if this is necessary for the correct operation of the appliance.
- That the appliance is not to be used if industrial chemicals have been used for cleaning.
- That the lint trap has to be cleaned frequently, if applicable.
- That lint must not to be allowed to accumulate around the appliance.
- Do not dry unwashed items in the appliance.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the appliance.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the appliance.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Remove all objects from pockets such as lighters and matches.
- WARNING: Never stop a appliance before the end of the drying cycle unless all items are guickly removed and spread out so that the heat is dissipated.
- WARNING: The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.
- The appliance must not be installed behind a lockable door, a sliding door or a door
 with a hinge on the opposite side to that of the appliance, in such a way that a full
 opening of the appliance door is restricted.

Model	Washing/Drying Capacity
MF200D100WB/T	10.0/7.0kg
MF200D120WB/T	12.0/8.0kg

The product is intended only for home use and for textiles in household amounts suitable for washing. This appliance is for indoor use only and not intended for built in use. Only use according to these instructions. The appliance is not intended for commercial use.

Any other use is considered as improper use. The producer is not responsible for any damage or injury that may result from it.

Explanation of Symbols



DANGER

This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.



WARNING OF ELECTRICAL VOLTAGE

This symbol indicates that there is a danger to life and health of persons due to voltage.



WARNING

The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.



CAUTION

The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



NOTE

The signal word indicates important information (e.g. damage to property), but not danger.



OBSERVE INSTRUCTIONS

This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

Please read the following safety information thoroughly and follow it strictly to minimize the risk of fire or explosion, electric shock and to prevent property damage, personal injury or loss of life. Failing to follow these instructions shall void any warranty.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

▲ WARNING: Electric Shock Hazard

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- If the machine is damaged, it must not be operated unless repaired by the manufacturer, its service agent or similarly qualified persons.
- · Risk of electric shock!
- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised that they do not play with the appliance.
- Children of less than 3 years should be kept away unless continuously supervised.
- Animals and children may climb into the machine. Check the machine before every operation.
- Do not climb or sit on the appliance.

Installation Location and Surrounding

- All washing and additional substances are to be kept in a safe place out of the reach
 of children.
- Do not install the machine on a carpet floor.
- The obstruction of the openings by a carpet can damage the machine.
- Keep the appliance clear from heating sources and direct sunlight to avoid plastic and rubber parts to corrode.
- Do not use the appliance in humid environments or rooms containing explosive or caustic gas. In case of water leakage or water splashes, let the appliance dry in the open air.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the machine.
- Do not operate the machine in rooms with a temperature of below 5°C. This can cause damages to parts of it. If it is unavoidable, make sure to drain the water completely from the appliance after every use (see"Maintenance - Cleaning of drain pump filter") to avoid damages caused by frost.
- Never use flammable sprays or substances in the immediate proximity of the appliance.
- That lint must not to be allowed to accumulate around the washer dryer (not applicable for appliances intended to be vented to the exterior of the building).

Installation

- Remove all packaging material and transport bolts before using the appliance.
 Otherwise, serious damage may result.
- This appliance is equipped with a single inlet valve and can be connected to the cold water supply only.
- Mains plug must be accessible after installation.
- Before washing clothes for the first time, the product shall be operated once throughout all the procedures without any clothes inside.
- Before using the machine, the product shall be calibrated.
- Do not put any excessively heavy objects on the appliance, like water containers or heating devices.

Electrical Connection

- Make sure the supply cable is not trapped by the machine, or it can get damaged.
- Connect the product to a grounded outlet protected by a fuse complying with the
 values in the "Technical specifications" table. The grounding installation has to be
 made by a qualified electrician. Ensure that the machine is installed in accordance
 with the local regulations.
- Water and electrical connections must be carried out by a qualified technician in accordance with the manufacturer's instructions and local safety regulations.

MARNING:

- · Don't use multiple plugs or extension cords.
- The appliance must not have an external switching device such as a timer or connected to a circuit that is regularly switched on and off.
- Do not pull the plug out of the mains outlet if there is flammable gas around.
- Never pull out power plug with wet hands.
- Always pull at the plug, not at the cable.
- · Always unplug the appliance if it is not being used.

Water Connections

- Check the connections of the water inlet tubes, the water tap and the outlet hose for
 possible problems due to changes of water pressure. If the connections loosen or leak,
 close the water tap and get it repaired.
- Do not use the appliance before the pipes and hoses are installed properly by qualified persons.
- Glass door may become very hot during the operation. Keep children and pets far away from the machine while it is operating.
- The water inlet and outlet hoses have to be safely installed and remain undamaged.
- · Otherwise, water leakage can occur.
- Do not remove the drain pump filter while there is still water in the appliance. Big quantities of water can leak out, and there is a risk of scalding due to hot water.


Operation and Maintenance

WARNING:

- Never stop the machine before the end of the drying cycle unless all items are quickly removed and spread out so that the heat can dissipate.
- The machine is not to be used if industrial chemicals have been used for cleaning. Risk of explosion.

SPECIFICATIONS


G

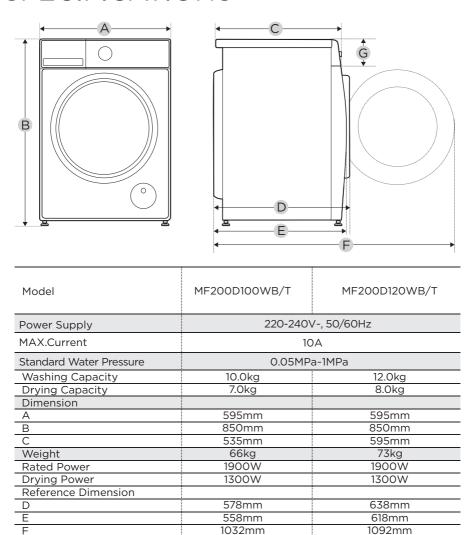

135mm

135mm

PRODUCT OVERVIEW

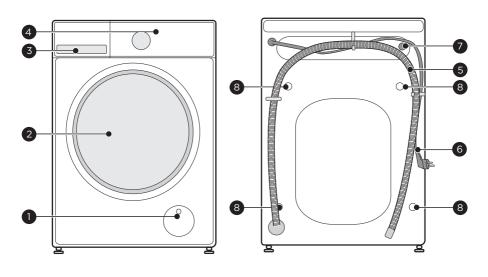

0	Service flap	5	Drain hose
2	Door	6	Power supply cord
3	Detergent dispenser	7	Inlet valve
4	Control panel	8	Transport bolts

■ NOTE

The product picture is for illustration only, please refer to real product as reference.

Accessories			
4 x Cover caps	1 x Supply hose cold water	1 x Owner's manual	Acoustic sponge (optional)


QUICK START GUIDE

A CAUTION

- · Before washing, please make sure the machine is installed properly.
- Your appliance was thoroughly checked before it left the factory. To remove any
 residual water and to neutralize potential odors, it's recommended to clean your
 appliance before first use. For this reason, recommended to clean the inner drum by
 running the "Drum Clean" or other program with the optional high temperature. Be
 careful not to put laundry and detergent in the machine.

1. Before Washing


1. Plug in

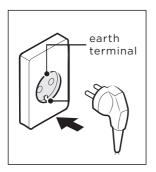

2. Open tap




3. Load

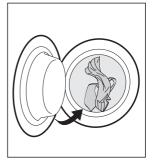

4. Close door



5. Add detergent

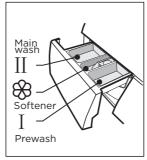


NOTE


- Detergent need to be added in compartment I if the pre-wash function is selected.
- When closing the door, please make sure that your clothes are not caught between the sealing ring and the machine door to prevent water leakage caused by pulling and damaging the sealing ring during operation.

2. Washing


1.Power on

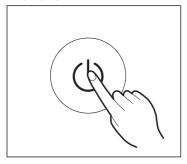


3. Select function or remain default settings

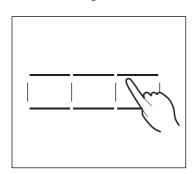

2. Select programme

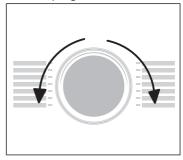

4.Press Start/Pause to start the program

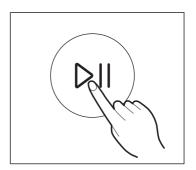

NOTE

 
- 1: If default is selected, step 3 can be skipped.
- 2: The function button line chart is for reference only, please refer to real product as standard.

3. After Washing

Buzzer beep and "End" on display.

PRODUCT INSTALLATION


Tools Needed If Installation By Yourself (not include)




Installation Area

MARNING

- Stability is important to prevent the product from wandering!
- Make sure the machine is standing leveled and stable.
- Make sure that the product does not stand onto the power cord.
- Make sure to maintain the minimum distances from the walls as shown in the picture.

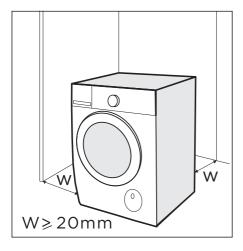


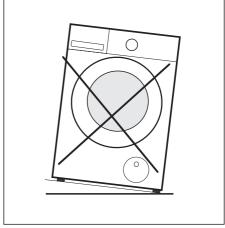

Before installing the machine, the location characterized as follows shall be selected:

- 1. Rigid, dry, and level surface.
- 2. Avoid direct sunlight.
- 3. Sufficient ventilation.
- 4.Room temperature is above 5 °C.
- 5.Keep far away from the heat sources such as coal or gas burning appliances.

Unpacking the Machine

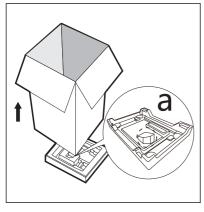

M WARNING

- Packaging material (e.g. Films, Styrofoam) can be dangerous for children.
- There is a risk of suffocation! Keep all packaging well away from children.

- 1. Remove the cardboard box and styrofoam packing.
- 2. Lift the machine and remove the base packaging. Make sure the small triangle foam (a) is removed with the bottom packaging together. If not, lay the unit down on the side surface and remove it manually.
- 3. Remove the tape securing the power supply cord and drain hose.
- 4. Remove the inlet hose from the drum.

Remove Transport Bolts



 
MARNING

You must remove the transport bolts from the backside before using the product.

1. Loosen the 4 transport bolts with a spanner.



2. Remove the bolts including the rubber parts and keep them for future use.

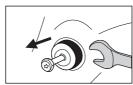


3. Close the holes using the cover caps.



Levelling the Machine



 The lock nuts on all four feet must be screwed tightly against the housing.

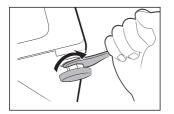

- 1. Loosen the lock nut.
- 2. Turn the foot until it reaches the floor.
- 3. Adjust the legs and lock the nuts with a spanner. Make sure the machine is level using a spirit level.

Connect the Water Supply Hose

 


To prevent leakage or water damage, follow the instructions in this chapter.

• Do not kink, crush or modify water inlet hose.



Connect the water supply hose to the water inlet valve and a water tap with cold water as indicated.

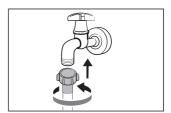

■ NOTE

• Connect manually, do not use tools. Check if the connections are tight.


Drain Hose




- Do not kink or protract the drain hose.
- Position drain hose properly otherwise damage might result in water leakage.
- It is not allowed to remove the buckle of drain pipe.

There are two ways to place the end of drain hose:

1.Put it into the water trough.

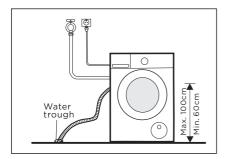


2.Connect it to the branch drain pipe of the trough.

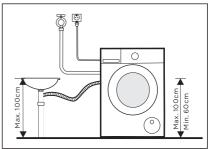


Acoustic Sponge

NOTE

 Please make sure to assemble the acoustic sponges, which can effectively reduce the noise caused by the machine while working, in order to provide you with a more peaceful and quiet living environment.

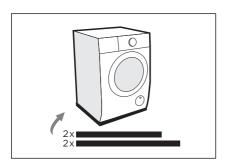

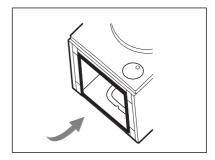


- 1. Get the machine laid on the floor, using some soft material like foam or clothes between the machine and floor for a protection;
- 2. Stick the 2x longer sponges to the longer bottom edges of machine, and the 2x shorter sponges to the shorter bottom edges.


OPERATION INSTRUCTIONS

Before Each Washing


- The ambient temperature of the machine should be 5°C-40°C. If used under 0°C, the inlet valve and draining system may be damaged. If the machine is installed under freezing conditions, it should be transferred to normal ambient temperature to ensure the water supply hose and drain hose can unfreeze before use.
- Please check your laundry care labels and the detergent use instructions before wash. Use non-foaming or less-foaming detergent suitable for machine properly.
 - Take all items out of the pockets

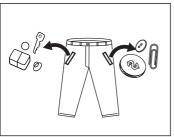


3. Tie together long textile strips and belts, close zips and button

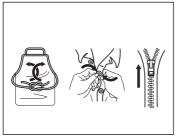

2. Sort laundry according to color and textile type

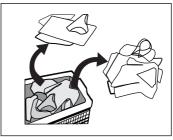

4. Put small items into a laundry bag

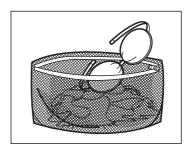


A WARNING

- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or dabbed with combustible or explosive substances like wax, oil, paint, gasoline, alcohol, kerosene, and other flammable materials.
- Washing single clothes items may easily create big eccentricity. Therefore it is suggested to add one or two more laundry items to the wash so that spin can be done smoothly.
- Do not wash, spin or dry water-proof seats, mats or clothing.

Detergent Dispenser

- I Pre Wash
- II Main Wash
- ⊗ Softener
- Release button to pull out the dispenser

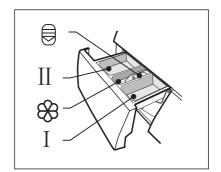



• Detergent only need to be added in "compartment I "after selecting Pre Wash function.


Programme	:	II/0	₩	Programme	-	II/0	₩
Quick 15'		•	0	Auto Dry			
1h WD		•	0	Wash and Dry			0
20 °C			0	Mix	0		0
Cotton	0		0	Intensive	0		0
Wool			0	Drum Clean			
Bulky	0		0	Sportwear	0	•	0
Rinse & Spin			0	Baby Care	0		0
Spin Only				Duvet		•	0
Steam Care	0		0	Shirt	0	•	0
Allergy Care	0		0	Delicate		•	0
Time Dry							

- Means must
 O Means must
- Means optional

NOTE

The programs (Sportwear / Baby Care/Duvet / Shirt / Delicate) can only be selected by SmartHome App on mobile phones.

Control Panel

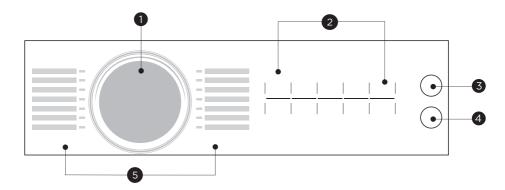

1 Display

The display shows settings, estimated remaining time, options and status messages.

2 Option

Press buttons to change program parameters or select additional functions.

3 On/Off

Power on or off machine.


4 Start/Pause

Start or pause your program.

5 Program

Choose appropriate program according to the laundry type.

Display

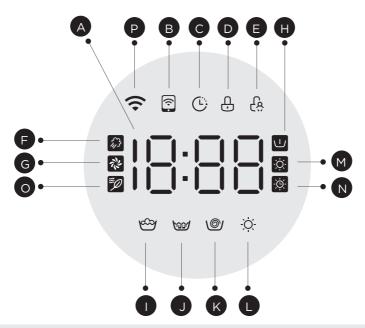

A	Display
	Wash Ti

Wash Time

1:25

Speed

400

End End Delay Time

5H

Error

E30

Temp.

- **B** Remote Control
- **D** Door Lock
- **F** Steam Care
- Pre Wash
- Rinse
- Dry
- N Time Dry
- Wireless Network

- C Delay
- **■** Child Lock
- **G** AutoClean
- Wash
- K Spin
- M Dry
- Airfresh

Programmes

	Programme	Wash/Dry Load (kg)		Default Temp. (°C)	Default Time (h:min)	
		10.0/7.0	12.0/8.0	Default		
	Quick 15'	2.0/	2.0/	Cold	0:15	
X	1h WD	1.0/1.0	1.0/1.0	Cold	0:58	
	20°C	5.0/	6.0/	20	1:11	
	Cotton	10.0/	12.0/	40	1:38	
	Wool	2.0/	2.0/	Cold	0:59	
	Bulky	10.0/	12.0/	40	1:48	
	Rinse & Spin	10.0/	12.0/		0:20	
	Spin Only	10.0/	12.0/		0:12	
	Steam Care	5.0/	6.0/	40	1:58	
	Allergy Care	5.0/	6.0/	60	2:38	
)Ŏ.	Time Dry	/0.5	/0.5		0:40	
)O(Auto Dry	/7.0	/8.0		3:00	
X	Wash and Dry	7.0/7.0	8.0/8.0	40	4:07	
X	Mix	10.0/7.0	12.0/8.0	40	1:08	
Ø	Intensive	10.0/7.0	12.0/8.0	40	3:58	
	Drum Clean			90	1:18	
	Sportwear	5.0/	6.0/	20	0:57	
)Ŏ.	Baby Care	10.0/7.0	12.0/8.0	60	2:11	
	Duvet	2.5/	2.5/	40	1:27	
X	Shirt	5.0/3.5	6.0/4.0	30	1:00	
	Delicate	3.0/	3.0/	30	0:50	

Energy test program for washing: Cotton, Temp.: 60°C, Speed: 1400 rpm, other as the default.
 Energy test program for drying: Auto Dry, Dry Level: Extra Dry(d-3), Speed: 1400 rpm, other as the default.

NOTE

- The parameters in this table are only for user's reference. The actual parameters maybe different with the parameters in above mentioned table.
- The programs (Sportwear / Baby Care/Duvet / Shirt / Delicate) can only be selected by SmartHome App on mobile phones.

Programmes are available according to the laundry type.

Programme	s
Cotton	Hard-wearing textiles, heat-resistant textiles made of cotton or linen.
Mix	Mixed load consisting of textiles made of cotton and synthetics.
Allergy Care	This program applies high temperature sterilization to make the clothes washing more clean to achieve the anti-allergy effect.
20°C	Able to clean lightly soiled cotton laundry, at a nominal temperature of 20 °C.
Spin Only	Spins and drains the water.
Rinse & Spin	Rinses and then spins the laundry, and then drains the water.
Drum Clean	Specially set in this machine to clean the drum and tube. It applys high temperature sterilization to make the clothes washing more green. When this programme is performed, the clothes or other washing cannot be added.
	The customer can use this programme regularly according to the need.
Intensive	To increase the washing effects, washing time is increased.
Bulky	This program is specially designed for washing bulky coats.
Wool	Hand or machine-washable wool or richwool textiles. Especially gentle wash programme to prevent shrinkage, longer programme pauses (textiles rest in wash liquor).
Steam Care	Steam Care is applicable for daily laundries like cotton and synthetics. The steam can deeply penetrate the fiber, which effectively eliminate bacterias and germs, preventing odors and protecting your health.
Sportwear	Washing the activewear.
Quick 15' /1h WD	This procedure defaults to Quick 15', press the "Dry" to switch to 1h WD.
Quick 15'	Extra short programme approx, suitable for lightly soiled washing as a small amounts of laundry.
1h WD	For small synthetic clothes or shirts, load limitation is 1 kg (about 4 shirts). When you have an urgent appointment but no more clean shirt left in your cupboard, this program will help you. Time duration is only 58 minutes including wash and dry. Remark: Big towels or jeans is not suitable for this program, they will enlarge the time duration and affect the moisture content.
Duvet	This program is specially designed for washing duvet coats.
Baby Care	Washing the baby's clothes, it can make the baby's wear cleaner and make the rinse performance better to protect the baby skin.
Shirt	Especially for washing the Shirts.
Delicate	For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics.
Auto Dry	This program is designed for drying clothes automatically to achieve the best dry performance.
Time Dry	Can select drying as set time.
Wash and Dry	The standard energy program for washing and drying.



The programs (Sportwear / Baby Care/Duvet / Shirt / Delicate) can only be selected by SmartHome App on mobile phones.

Option

Cycle	Default Temp.(℃)	Default spin speed (rpm)	Additional functions
		1400	
Quick 15'	Cold	800	O, 9
1h WD	Cold		O, X
20°C	20	1000	○, ※, ୭, »
Cotton	40	1000	⑤, 稔, ⑴, ୭, ▶
Wool	Cold	600	O, 9
Bulky	40	1000	©, U, D , »
Rinse & Spin		1000	©, *p
Spin Only		1000	O, D
Steam Care	40	1000	©, 秒, Ѱ, Đ, », 紛
Allergy Care	60	1000	©, ≉, Ѱ, Đ, », 紛
Time Dry		1200	O, O
Auto Dry		1200	©, 🌣
Wash and Dry	40		©, Ö
Mix	40	1000	⊙, 祕, 苡, ⊔, ୭, ▶
Intensive	40	1000	©, ॡ, ∅, ⊔, ⋑, »
Drum Clean	90		©
Sportwear	20	800	(), 秋, 山, 沙
Baby Care	60	1000	©, ℀, Ծ, ⊔, Ð, »
Duvet	40	800	O, D
Shirt	30	800	©, Ď, Ѱ, ⋑
Delicate	30	800	O, 9



The programs (Sportwear / Baby Care/Duvet / Shirt / Delicate) can only be selected by SmartHome App on mobile phones.

Temp.

Temp.

When needed, the washing temperature can be adjusted by pressing the temperature button in the following steps: Cold-20°C-30°C-40°C-60°C-90°C.



Spin

When needed, the spinning speed can be adjusted pressing the speed button in the following steps: 0-400-600-800-1000-1200-1400.



Delay

- 1. Select a programme.
- 2.Press the [Delay] button to choose the delaying time 0-24H.
- 3.Press [Start/Pause] to start the delay operation.



>



>



Choose programme

Setting time

Start

To cancel the Delay function, press the [Delay] button before starting the program until the display shows O H. If the program has already started, switch the appliance off and afterwards on and select a new programme.



Pre Wash

Extra washing function before the main washing cycle starts to increase the washing performance.

Note: Detergent needs to be added to the compartment I.

Turbo 🔊

Turbo

The function can decrease the washing time.

Spin/

Remote Control

After hold [Spin/@] 3 seconds, the mobile phone icon will light up in the machine knob display, indicating that it has entered the remote control state.

Smartphone remote control should meet the following conditions:

- 1. The appliance should connect to the internet.
- 2. The door of drum should be closed.

Remark:

- -. If the door is open in anytime, the remote control function will be failure.
- -. The remote control function is turned off at the end of each cycle automatically.

if you want to use remote control function again, you need turn on it again.



SteamCare

SteamCare is the function added before main wash, which will generate warm steam to sterilization and greater washing performance.



Wireless Network

Press [$\Pr_{/\!\!\!\!/\!\!\!\!/}^{PreWash}$] 3 seconds ,the machine will be connected to the internet on your smartphone, you can go to the settings and turn on the wireless connection and select an AP (Access Point). Press [Temp.] 3 seconds, the wireless will be turned off.

3s for Child Lock Child Lock

This function is meant to keep children from misusing the controls.



Press [3s for Child Lock] for 3 sec until the buzzer beep. The child lock indicator switches on.



CAUTION

When the Child Lock is activated, the display will alternately show "CL" and the remaining time.

Pressing any other button will cause the Child Lock indicator to flash. When the program ends, "CL" and "End" will alternate on the display.

The Child Lock deactivates the function of all buttons except the On/Off button and the Child lock button! Only the simultaneous pressing of the button can deactivate the Child Lock! Please deactivate the Child Lock before selecting a new program!



Reload

This operation can be executed during the washing progress. When the drum is still rolling and there is large amount of water with high temperature in the drum.

The state is unsafe and the door cannot be opened forcefully. To Press [3s for Reload]3sec. to reload, and start the clothes adding in the midway function.

Please follow the steps as bellow:

- 1. Wait until the drum stops rotation.
- 2.The door lock is unlocked.
- 3.Close the door when the clothes are reloaded and press the [Start/Pause] button.

Start



Press [3s for Reload] 3 Sec. Reload the clothes



CAUTION

 Don't use the Reload function when the water level over the edge of the inner tub or the temperature is higher.



AutoClean

Auto Clean is used to clean the drum as a default function and is only applicable to the following programs 20°C, Cotton, Steam Care, Allergy Care, Mix, Intensive, Sportwear, Baby Care. It will happen between first and second rinse. A small amount of water is fed and the drum will be rinsed.



Airfresh

Drum will rotate every half hour, shaking up the clothes to avoid laundry left in washing machine. The fan will also circulate air through the washer to prevent odors and keep clothes scent fresh.

The maximum runtime is 8 hours. Of course, you can turn it off at any time during the process to remove the clothes.

-¤-

Dry

Press the Dry button continuously to choose the dry level: Gentle Dry(Soft)/Normal Dry(Normal)/ Extra Dry and Time Dry.

- d-1 Gentle Dry(Soft): Clothes are dried to damp state for ironing.
- d-2 Normal Dry(Normal): Clothes are ready for storing in the wardrobe.
- d-3 Extra Dry: Clothes are dried complete to be worn directly.
- Time Dry: Drying your laundry and finish within given time (30/60/90/120/180 minutes). This program contains 10 minutes of default dehydration time, so the actual display time is 40/70/100/130/190 minutes.

■ NOTE

- Drying hints
 - Thoroughly spin you laundry before drying.
 - To ensure proper drying, please sort your laundry according to the fabric type and drying temperature.
- Clothes not suitable for drying
 - Particularly delicate items such as synthetic curtains, woolen and silk, clothes with metal inserts, nylon stockings, bulky clothes, such as anoraks, bed covers, quilts, sleeping bags and duvets must not be dried.
 - Clothes padded with foam-rubber or materials similar to foam-rubber must not be machine dried.
 - Fabrics containing residues of setting lotions or hair sprays, nail solvents or similar solutions must not be machine dried in order to avoid the formation of harmful vapours.

APP SETUP AND OPERATION

Use Your Appliance With the SmartHome App

Before you start, make sure that:

- Your smartphone is connected to home wireless network, and you know the network password.
- 2. Make sure you are near the home appliance.
- 3. The 2.4GHz band wireless signal is enabled on your wireless router.

Follow the below steps to enter the remote control state

Download the SmartHome App

On an app market (Google Play Store, Apple App Store), search for **SmartHome*** and find the SmartHome app. Download and install it on your phone. You can also download the app by scanning the QR code below.



Register and Log In

Open the SmartHome app, and create a new account to start (you can also register through a third-party account). If you already have an existing account, use the account to log in.

Connect Your Devices to SmartHome

- Please make sure your mobile phone is connected to a wireless network. If it is not, go to settings and enable wireless networks and bluetooth.
- 2. Please power on your devices.
- 3. Open SmartHome app on your phone.
- If a message of "Smart devices discovered nearby" appears, click to add.
- 5. If no message appears, select "+" on the page and select your device in the list of nearby devices available. If your device is not listed, please add your device manually by the device category and device model.
- 6. Connect your device to the wireless network according to instructions on app. If the connection fails, please follow the instructions provided by the app to continue with the operation.









Start the Remote Control

Rotate the knob randomly to indicate one of the programs, and press [Spin/] continuously until the remote control icon light up in the knob display, which means it has entered the remote control state and you can start to control remotely.

Wireless Network Status Light

Slowly flashing	Waiting for connection		
Quickly flashing	Connecting		
Quickly flashing solid	Connected to your wireless router		

● NOTE

- 1. Make sure your devices are powered on.
- Keep your mobile phone close enough to your device when you are connecting your device to the network.
- 3.Connect your mobile phone to the wireless network at home, and make sure you know the password of the wireless network.
- 4.Check if your wireless router supports 2.4 GHz band and turn it on. If you are not sure whether the router supports 2.4 GHz band, please contact the router manufacturer.
- 5. The device cannot connect to the wireless network that requires authentication, and it usually appears in public areas such as hotels, restaurants, etc. Please connect to a wireless network that does not require authentication.
- 6. Turn off the WLAN+ (Android) or WLAN Assistant (iOS) function of your mobile phone when connecting your device to the network.
- 7. In the case that your device connected to a wireless network before but it needs to reconnect, please click "+" on the app Home page, and add your device again by the device category and model according to the instructions on app.

The Max RF Output Power: Wireless Network: E.I.R.P.: 18dBm.

Bluetooth LE: 8dBm

Frequency band of operation:2400-2483.5MHz

CLEANING AND MAINTENANCE

Cleaning and Care

WARNING

· Always unplug the appliance and close the water tap before cleaning and maintenance.

Cleaning the Cabinet

Proper maintenance on the machine can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use a towel to wipe it off immediately. Never use sharp items to clean the appliance.



A CAUTION

 Never use abrasive or caustic agents. Such as formic acids or its diluted solvents or similar substances, like alcohol or chemical products.

Cleaning the Drum

Any rust stains left inside the drum by metal articles must be removed immediately using chlorine-free detergents. Never use steel wool for cleaning the drum!



· Keep any laundry away from the machine while cleaning the drum.

Cleaning the Door Seal and Glass

Wipe the glass and seal after each wash to remove lint and stains. If lint builds up it can cause leakages.

Remove any coins, buttons and other objects from the seal after each wash.


Clean the door seal and glass every month to ensure the normal operation of the appliance.



Cleaning the Inlet Filter

NOTE


- Diminishing water flow is a sign that the filter needs to be cleaned.
 - 1. Close the tap and remove the water supply hose from it.

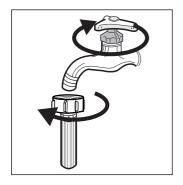

 Unscrew the water supply hose from the backside of the machine.
 Pull out the filter with long nose pliers.



2. Clean the filter with a brush.

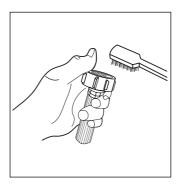


4. Use a brush to clean the filter.




- 5. Reinstall the filter to the water inlet and reconnect the water supply hose.
- 6. Clean the Inlet filter every 3 months to ensure the normal operation of the appliance.

Cleaning the Detergent Dispenser

- Lift the softener cover off the dispenser drawer and wash both items with water.
- · Clean the inside of the recess with a brush.
- Restore the softener cover and push the drawer back into the recess.
 - Press the release and remove the dispenser drawer

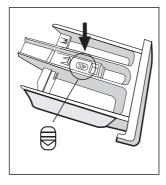


3. Clean the recess with a soft brush

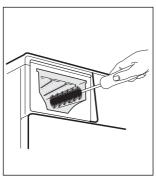

2. Clean the dispenser drawer and the softener cover under water



4. Insert the dispenser drawer

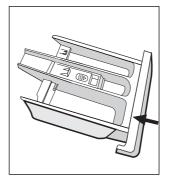


■ NOTE

- Do not use abrasive or caustic agents to clean plastic parts.
- Clean the detergent dispenser every 3 months to ensure the normal operation of the appliance.


Cleaning the Drain Pump Filter

WARNING

- · Make sure that the machine has finished the washing cycle and is empty. Switch it off and unplug it before cleaning the drain pump filter.
- Be careful of hot water. Wait for water cooling down. Risk of scalding!
- Clean the filter periodically every 3 months to ensure the normal operation of the appliance.

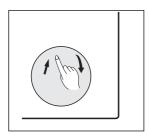


1.Open the lower cover cap

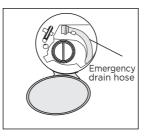


drain hose, and take off the hose cap




2.Pull out the emergency 3.After water runs out, reset the drain hose

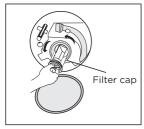

4. Open the filter by turning to the counter clockwise

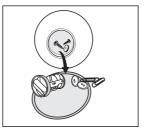

5.Remove extraneous matter

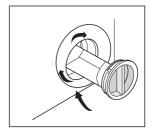

6.Carefully reinsert the filter and screw the lower cover cap in clockwise




/!\ CAUTION

- Make sure that valve cap and emergency drain hose are reinstalled properly, cap plates should be inserted aligning to hole plates otherwise water may leak.
- Some machines don't have emergency drain hose, so step 2 and step 3 can be skipped. Rotate lower cover cap directly to make water run into basin.
- When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely re-tightened.


Emergency Door Release

In case of power failure or other circumstances and door cannot be opened. If it is necessary to open the door under this circumstances, please pull down the pull cord inside emergency door and restore the pull cord after opening the door.


Emergency door pull cord

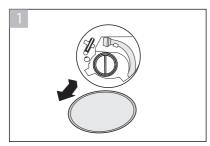

1.Open filter door.

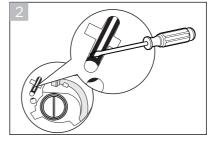

2.Using a straight screwdriver (or other non-sharp tool), insert into the emergency door pull cord.

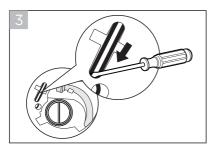

3.Pull down the emergency door pull cord (refer to direction of the arrow in the picture). If unlocked successfully, you will find the door lock icon will go out.



The machine is not allowed to use the emergency switch pull cord during washing. If need to run machine urgently, it is recommended to open door after water is cooled, to avoid getting burn caused by high temperature residual water outflow from the machine tub.

TROUBLE SHOOTING

Whenever there is a problem with the appliance, check if you can solve it following the tables below. If the problem persists, please contact the customer service.

Description	Possible Cause	Solution
Appliance does not start	Door is not closed properly.Clothes are stuck.	Close the door properly and restart. Check the laundry.
Door can't be opened	Safety protection is activated.	Disconnect the power and restart.
Water leakage	Connections are not tight enough.	Check and fasten the water inlet pipe. Check and clean the outlet hose.
Detergent residues in the detergent dispenser	Detergent is damp and/or clotted.	Clean and wipe the detergent dispenser dry.
Indicator or display does not work	PC board or harness have connection problems.	Switch off the power and check if the mains plug is connected properly.
Abnormal noise	Fixing bolts are still in place. Floor is not solid or level.	Check if the fixing bolts have been removed. Make sure the appliance is installed on a solid and level floor.

Error Codes

Description	Possible Cause	Solution
E30	Door is not closed properly.	Close the door properly and restart.
E10	Water injecting problem during wash cycle.	Check if the water pressure is high enough. Straighten the water pipe. Clean the inlet valve filter.
E21	Overtime water draining	Check the drain hose for blockage.
E12	Water overflow	Restart the appliance.
EXX	Others	Restart the appliance. If problem persists, please contact the customer service.

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT

Midealogo, word marks, trade name, trade dress and all versions thereof are valuable assets of Midea Group and/or its affiliates ("Midea"), to which Midea owns trademarks, copyrights and other intellectual property rights, and all good will derived from using any part of an Midea trademark. Use of Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws.

This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea.

All the described functions and instructions were up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.

DISPOSAL AND RECYCLING

Important Instructions for Environment

Compliance with the WEEE Directive and Disposing of the Waster Product: This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waster electrical and electronic equipment (WEEE).

This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.



Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

Package Information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.



DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR).

Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area.

Further information are provided on request. You can contact our Data Protection Officer via **MideaDPO@midea.com.** To exercise your rights such as right to object your personal date being processed for direct marketing purposes, please contact us via **MideaDPO@midea.com.** To find further information, please follow the QR Code.

WARRANTY CARD

NOTES

We provide a guarantee for this machine in accordance with the following conditions: You have a manufacturer's warranty of _____ years from the date of purchase (proof of purchase must be provided). Our General Terms and Conditions apply.

Your device / serial number
Purchase date:
Place of purchase:

Do you have any questions?
We are happy to support you!

http://www.midea.com

Customer Service

Spare parts for your appliance are available for a minimum of 10 years following EU COMMISSION REGULATION 2019/2023 ANNEX II Ecodesign requirements.

In case of questions, please contact our local customer service center.



Risk of electric shock

- Never try to repair an appliance which is defective or presumed to defective. You may put your own and future users' lives in danger.
 Only authorised specialists are allowed to carry out this repair work.
- Improper repair will void the warranty and subsequent damages can't be recognized!

Transport

IMPORTANT STEPS WHEN MOVING THE APPLIANCE

- Unplug the appliance and close the water inlet tap.
- Check if the door and the detergent dispenser are closed properly.
- Remove the water inlet pipe and the outlet hose from the house installations.
- Let the water drain completely from the appliance (see "Cleaning the Drain Pump Filter")
- Important: Re-install the 4 transport bolts in the back of the appliance.
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door can not be used as a handle.

