




MANUALE PER L'UTENTE

STUFA A CONVEZIONE
MODELLO: NDK15-15MRE

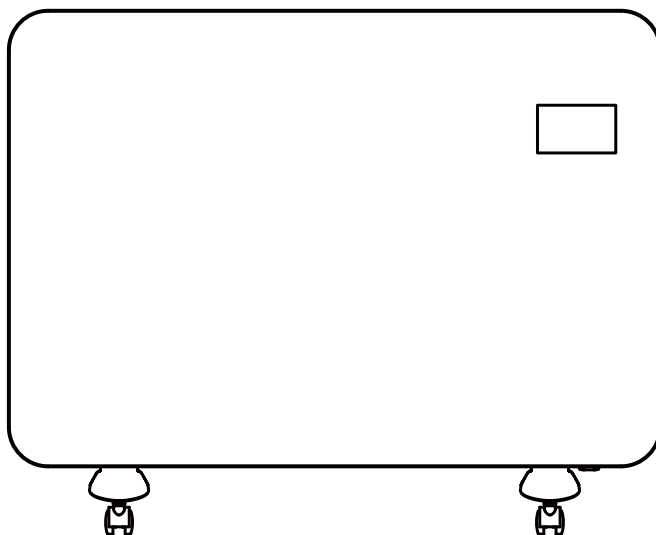

Questo prodotto è adatto solo per spazi ben coibentati o per un uso occasionale.



Midea Italia S.r.l. a socio unico
Viale Luigi Bodio 29/37
20158 Milano Italia
midea.com/it

ISTRUZIONI DI SICUREZZA




1. **Attenzione:** per evitare il surriscaldamento, non coprire il radiatore.
2. Se il cavo di alimentazione è danneggiato, deve essere sostituito dal produttore o presso un centro assistenza o da una persona qualificata per evitare rischi.
3. Questo apparecchio può essere utilizzato da bambini dagli 8 anni in su e da persone con ridotte capacità fisiche, sensoriali o mentali o con scarsa esperienza e conoscenza, a condizione che siano stati supervisionati o istruiti sull'uso dell'apparecchio in modo sicuro e che ne comprendano i pericoli. I bambini non devono giocare con l'apparecchio. La pulizia e la manutenzione da parte dell'utente non devono essere effettuate da bambini senza supervisione.
4. L'apparecchio non deve trovarsi immediatamente sotto una presa di corrente.
5. Utilizzare esclusivamente come apparecchio portatile. Non utilizzare l'apparecchio nelle immediate vicinanze di un bagno, di una doccia o di una piscina.
6. I bambini di età inferiore a 3 anni devono essere tenuti lontani, a meno che non siano continuamente sorvegliati. I bambini di età compresa tra i 3 anni e gli 8 anni possono accendere/spegnere l'apparecchio solo a condizione che sia stato collocato o installato nella normale posizione di funzionamento prevista e che siano stati sorvegliati o istruiti sull'uso dell'apparecchio in modo sicuro e che ne comprendano i pericoli. I bambini di età compresa tra i 3 anni e gli 8 anni non devono collegare, regolare e pulire l'apparecchio o eseguire la manutenzione.

7. ATTENZIONE - Alcune parti di questo prodotto possono diventare molto calde e causare ustioni. Particolare attenzione deve essere prestata quando sono presenti bambini e persone vulnerabili.


8.  **IL CORRETTO SMALTIMENTO DEL PRODOTTO**
Questa marcatura indica che il prodotto non deve essere smaltito insieme ad altri rifiuti domestici in tutta l'UE. Per evitare possibili danni all'ambiente o alla salute umana derivanti da uno smaltimento incontrollato dei rifiuti, riciclarlo responsabilmente per promuovere il riutilizzo sostenibile delle risorse materiali. Per restituire il dispositivo usato, utilizzare i sistemi di raccolta o contattare il rivenditore presso il quale il prodotto è stato acquistato. Il prodotto può essere riciclato in modo sicuro per l'ambiente.

COMPONENTI

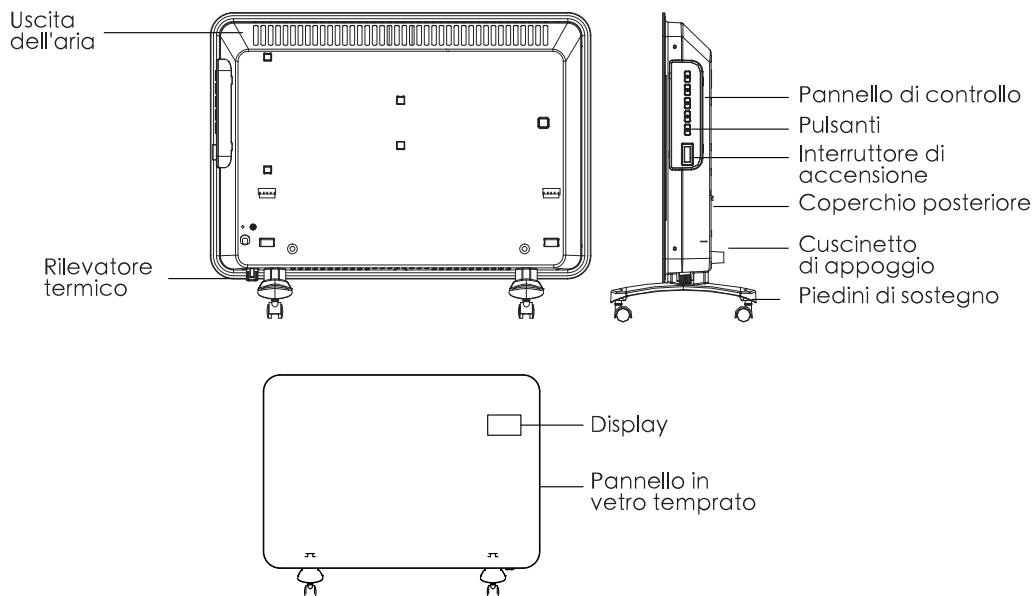

Installazione dei piedini di sostegno

1. Girare la macchina per far sì che il fondo sia rivolto verso l'alto, estrarre i due bulloni e le gambe di supporto.
2. Allineare il foro circolare dei piedini di sostegno con il foro posizionato sul fondo. Inserire il bullone nel foro e fissarlo.
3. Dopo l'installazione, rigirare la macchina.

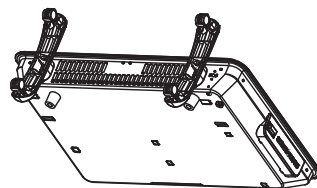

ISTRUZIONI PER L'USO

【Preparazione dell'apparecchio imballato】

1. Estrarre l' apparecchio dall' imballaggio e installare i piedi di supporto.
2. Rimuovere la pellicola dal vetro.

【Cosa controllare prima della messa in funzione】

Controllare che il cavo di alimentazione sia in buone condizioni; prima dell'uso, verificare che la corrente della presa di alimentazione soddisfi i requisiti e se è installato un dispositivo di messa a terra di sicurezza, altrimenti la presa deve essere sostituita.

【Selezione dell'avviamento e della potenza】

< Start-up > : Collegare la macchina e portare l'interruttore di accensione su "ON"; verrà emesso un lungo segnale scustico e il display rimarrà spento;

< Gear selection > Premere il tasto "ON/OFF" per accenderlo, la stufa entrerà in modalità normale, a bassa potenza (600W), le icone  e  si illumineranno. Premere il tasto "+" o "-" per entrare nelle impostazioni: quando il valore della temperatura inizia a lampeggiare, si potrà impostare la temperatura premendo in modo continuo il tasto "+" o "-", nell'intervallo di 5 - 35°C. Quando la temperatura è impostata a 35°C, premendo il tasto "+", la temperatura tornerà a 5°C. Quando la temperatura è impostata a 5°C, premendo il tasto "-", la temperatura diventerà 35°C. Dopo 5 secondi di inattività la macchina esce automaticamente dalle impostazioni, il valore della temperatura smetterà di lampeggiare e verrà visualizzato il valore impostato.

Premendo il tasto "MODE", la stufa funziona con la potenza media di 900W e l'icona  si illumina.

Premendo di nuovo il tasto "MODE", la stufa funziona con la potenza elevata di 1500W e l'icona  si illumina.

Premere il tasto "ON/OFF" per spegnere l' apparecchio.

【Modalità di lavoro】

Dopo l'accensione, il riscaldatore entra in modalità normale. Premendo ripetutamente il tasto "MODE" si può passare tra le varie modalità: bassa potenza, media potenza, alta potenza, riscaldamento rapido, risparmio energetico e antigelo. Quando si imposta una qualsiasi di queste modalità, entro 2 minuti entrerà in azione. Dopo 2 minuti, si avvia lo stato di controllo della temperatura.

R: Quando la temperatura interna Th è inferiore o uguale a Ts (Set Temperature), la stufa funziona secondo il dispositivo di regolazione e l'icona  si illumina.

B: Quando la temperatura interna Th è maggiore o uguale a Ts (Set Temperature), la stufa smette di funzionare e l'icona  si spegne; la temperatura visualizzata lampeggia per 10 secondi.

Continuando a premere il tasto "MODE", la stufa entra in modalità di riscaldamento rapido e l'icona  si illumina. In questa condizione, non è possibile cambiare modalità, ma accendere/spegnere l'apparecchio premendo il tasto "ON/OFF". La temperatura non può essere impostata premendo il tasto "+" o "-" e la stufa funziona ad alta potenza, indipendentemente dalle impostazioni precedenti.

Quando la temperatura interna TH è superiore o uguale a 35 °C, gli elementi riscaldanti smettono di funzionare, l'icona  si spegne e la temperatura visualizzata a 35 °C lampeggia per 10 secondi. Quando la temperatura interna TH è inferiore o uguale a 33 °C, gli elementi riscaldanti ritornano a funzionare e l'icona  sarà nuovamente illuminata.

Continuando a premere il tasto "MODE", la stufa entra in modalità risparmio energetico, l'icona ECO  si illumina e imposta automaticamente la temperatura a 22 °C. In questa condizione, non è possibile cambiare modalità, ma accendere/spegnere l'apparecchio premendo il tasto "ON/OFF". La temperatura non può essere impostata premendo il tasto "+" o "-" e l' apparecchio funziona nello modo seguente :

A: Il riscaldatore funziona ad alta potenza quando la temperatura interna Th è inferiore a 20°C;

B: Il riscaldatore funziona con potenza media quando Th è maggiore o uguale a 20°C ma inferiore a 22°C;

C: Il riscaldatore funziona a bassa potenza quando Th è maggiore o uguale a 22°C ma inferiore a 24°C;

D: Il riscaldatore smette di funzionare quando Th è maggiore o uguale a 24°C, in questa condizione, l'icona  si spegne e la temperatura visualizzata 22°C lampeggia per 10 secondi.

Tenendo premuto il tasto "MODE", la stufa entra in modalità antigelo, l'icona  si illumina e imposta automaticamente la temperatura a 5°C. In questa condizione, non è possibile cambiare modalità ma accendere/spegnere l'apparecchio premendo il tasto "ON/OFF". La temperatura non può essere impostata premendo il tasto "+" o "-", e l'apparecchio funziona sempre a bassa potenza.

R: Gli elementi riscaldanti smettono di funzionare quando la temperatura interna TH è superiore o uguale a 5°C, l'icona  si spegne e la temperatura visualizzata lampeggia per 10 second.

B: Gli elementi riscaldanti continuano a funzionare e l'icona sarà  nuovamente illuminata quando TH è inferiore o uguale a 3°C.

Continuando a premere il tasto "MODE", la stufa ritorna alla modalità normale ed è possibile cambiare la modalità di funzionamento, premendo ripetutamente il tasto "MODE".

【 Impostazione del timer 】

Accendere l'apparecchio, premere il tasto "TIMER" e la stufa entrerà nell'interfaccia di impostazione del timer. È possibile premere il tasto "+" o "-" per impostare l'ora di spegnimento. In questa condizione, l'icona  si illumina e l'impostazione del timer inizia a lampeggiare. Il timer può essere impostato in qualsiasi modalità. L'icona corrispondente e la modalità selezionata devono essere visualizzati durante il periodo di funzionamento del timer. L'intervallo di impostazione del timer è 0-24H e il passo di regolazione è di 1H. Quando il valore selezionato è 0H, premendo "-", verrà impostato 24H; quando il valore selezionato è 24H, premendo il tasto "+", verrà impostato 0H. Quando il valore è impostato su 0H, il timer viene annullato; quando il valore impostato è 1H o superiore, il timer entra in funzione. L'impostazione del timer sarà regolare, se il dispositivo si spegne entro il tempo impostato.

Quando la stufa è spenta, premere il tasto "TIMER" e la stufa entrerà nell'interfaccia di impostazione del timer. È possibile premere il tasto "+" o "-" per impostare l'ora di avvio. In questa condizione, l'icona  si illumina e l'impostazione del timer inizia a lampeggiare. Dopo aver raggiunto il tempo di impostazione, la stufa si accende ed entra nella modalità selezionata prima dell'ultimo spegnimento, tuttavia non verrà emesso alcun "beep".

【 Funzione di memoria 】

Dopo che il dispositivo si è spento normalmente, resterà in memoria l'ultima modalità di lavoro impostata prima dello spegnimento.

Spegnendo e riaccendendo nuovamente il dispositivo, funzionerà nella modalità normale.

【 Funzione di protezione per il cortocircuito e per il circuito del sensore di temperatura 】

In qualsiasi modalità, se la protezione da cortocircuito si attiva, il display visualizza la temperatura ambiente e "E1", continuando a lampeggiare; qualsiasi tasto non è fruibile.

In qualsiasi modalità, se la protezione da cortocircuito del sensore di temperatura si attiva, il display visualizza la temperatura ambiente e "E2", continuando a lampeggiare; qualsiasi tasto non è fruibile.

【 Funzione di protezione di sicurezza 】

Quando la stufa è accesa e la temperatura interna Th supera i 50 °C, tutta la potenza sarà disattivata e le luci a LED lampeggiano "FF" con una frequenza di 1/s. In questa condizione, il dispositivo non può essere acceso e tutte le operazioni non saranno valide anche se la temperatura interna è inferiore a 50 °C.

【 Funzione di compensazione della temperatura 】

La temperatura costante della compensazione è di 7 °C: la temperatura di riscaldamento è di 29 °C mentre la temperatura percepita è di 22 °C.

【 Funzione di spegnimento del display 】

Se la funzione di spegnimento del display è attiva, dopo l'accensione è possibile premere "UP" e "DOWN" per 2 secondi per disattivare la funzione.

Se la funzione di spegnimento del display è disattiva, dopo l'accensione è possibile premere "UP" e "DOWN" per 2 secondi per attivare la funzione.

L'icona  si illuminerà solo se la funzione di spegnimento del display è attiva e gli elementi riscaldanti funzionano.

L'icona  si illuminerà solo se la funzione di spegnimento del display è attiva e il timer è impostato.

ISTRUZIONI PER IL CONTROLLO A DISTANZA

1. L'interruttore, + e -, Timer e Mode sono equivalenti a quelli del pannello di controllo.
2. Timer: premere il tasto TIMER per entrare nelle impostazioni del timer. Impostare il tempo con i tasti + e -, nessuna operazione entro 5 secondi dopo l'impostazione indica conferma.
3. Mode: premere ripetutamente fino alla selezione della modalità desiderata (potenza alta, media, bassa, riscaldamento rapido, risparmio energetico e antigelo).

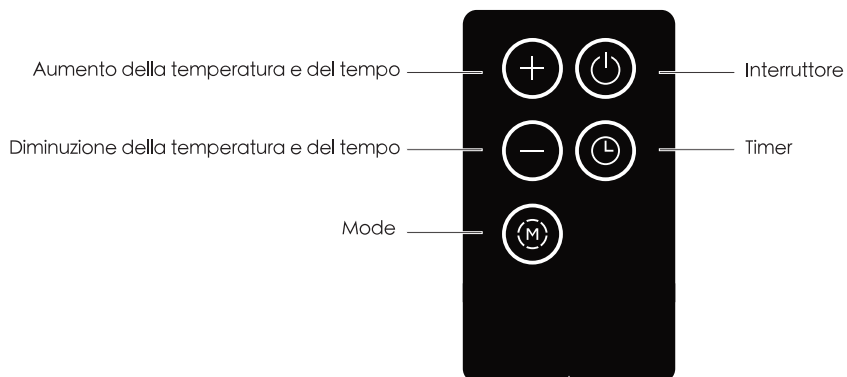


Tabella per i requisiti informativi per i radiatori elettrici ad uso locale					P
Identificazione del modello o dei modelli: NDK15-15MRE					
Articolo	Simbolo	Valore	Unità	Descrizione	
Potenza Calore			Tipo di apporto termico		
Potenza termica nominale	Pnom	1,5	kW	Regolazione manuale della carica termica con termostato integrato	[no]
Potenza termica minima (indicativa)	Pmin	0,6	kW	Regolazione manuale della carica termica con retroazione della temperatura ambiente e/o esterna	[no]
	Pmax	1,5	kW		[no]
Consumo di energia elettrica ausiliaria			Potenza termica assistita dal ventilatore		[no]
Potenza termica nominale	elmax	1,428	kW	Tipo di potenza termica/controllo della temperatura ambiente (selezionarne uno)	
Potenza termica minima (indicativa)	elmin	0,583	kW	Potenza termica a stadio singolo e nessun controllo della temperatura ambiente	[no]
In modalità standby	eISB	0,32	W	Due o più fasi manuali, nessun controllo della temperatura ambiente	[no]
				Con termostato meccanico per il controllo della temperatura ambiente	[no]
				Con controllo elettronico della temperatura ambiente	[no]
				Controllo elettronico della temperatura ambiente più timer diurno	[yes]
				Controllo elettronico della temperatura ambiente più timer settimanale	[no]
				Altre opzioni di controllo (sono possibili selezioni multiple)	
				Regolazione della temperatura ambiente, con rilevamento presenza	[no]
				Controllo della temperatura ambiente, con rilevamento finestra aperta	[no]
				Con opzione di controllo della distanza	[no]
				Con controllo di avvio adattivo	[no]
				Con limitazione del tempo di lavoro	[no]
				Con sensore a bulbo nero	[no]
Contatti:		Midea Italia S.r.l. a socio unico Viale Luigi Bodio 29/37 20158 Milano Italia midea.com/it			
Nota: Per gli apparecchi elettrici di riscaldamento locale, l'efficienza energetica stagionale misurata per il riscaldamento degli ambienti non può essere inferiore al valore dichiarato alla potenza termica nominale dell'unità.					
L'efficienza energetica per il riscaldamento stagionale di tutti i dispositivi di riscaldamento locale, ad eccezione dei riscaldatori locali commerciali, η_s (%)					38

PULIZIA, MANUTENZIONE E STOCCAGGIO

Attenzione: scollegare sempre l'alimentazione di rete prima di pulire l'apparecchio.

1. Utilizzare un panno morbido e asciutto per pulire la superficie del prodotto. Asciugare con un panno pulito.

2. Utilizzare acqua calda con un detergente delicato e un panno morbido e umido per pulire il prodotto. Asciugare con un panno pulito. Non versare acqua sopra o all'interno dell'unità.


Per conservare il prodotto fuori stagione, si consiglia di utilizzare la scatola originale (o di dimensioni adeguate). È importante conservarlo in un luogo sicuro e asciutto.





OWNER'S MANUAL

CONVECTION HEATER MODEL: NDK15-15MRE

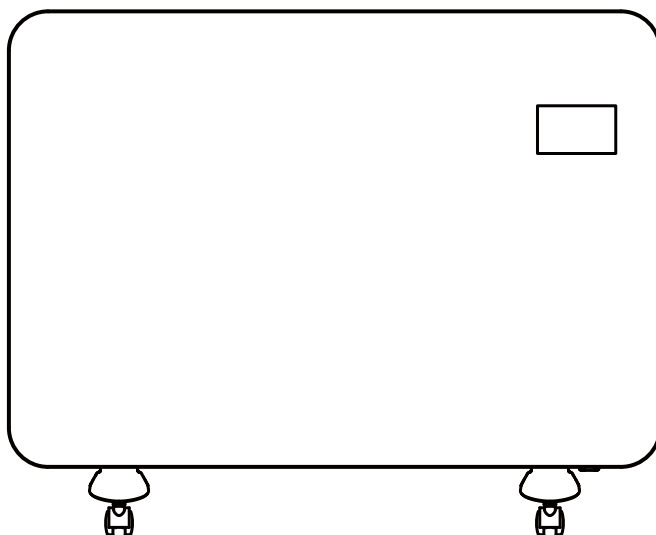

This product is only suitable for well insulated spaces or occasional use.



Midea Italia S.r.l. a socio unico
Viale Luigi Bodio 29/37
20158 Milano Italia
midea.com/it

SAFETY INSTRUCTION



1. **Warning:** In order to avoid overheating, do not cover the heater.
2. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
4. The heater must not be located immediately below a socket-outlet.
5. Only used as portable appliance. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
6. Children of less than 3 years should be kept away unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.


7. **CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.**



8.  Correct Disposal of this product


This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

IMPORTANT SAFEGUARDS

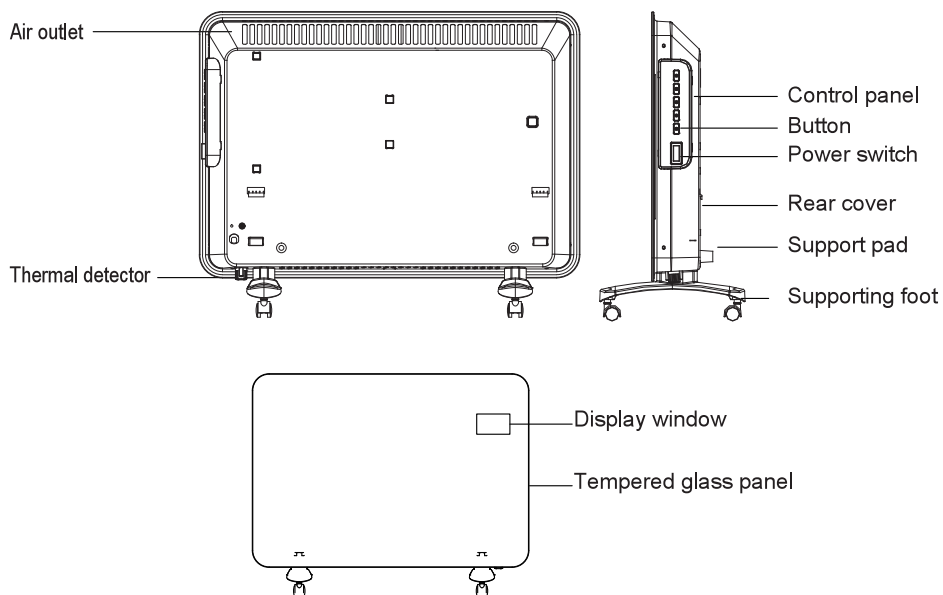

【 Installation of supporting leg 】

1. Turn over the machine to make the bottom up, take out two bolts and supporting legs out;
2. Align the round hole on supporting leg with the location hole on the bottom, make the bolt pass through the round hold on seat and then fasten it;
3. After installation, turn over the machine.

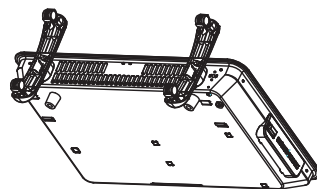

OPERATING INSTRUCTION

【 Preparation before starting up 】

1. Take out the whole machine and install the supporting feet.
2. Remove the film on the glass.

【 Check before starting up 】

Check whether the power cord is in good condition; before use, please confirm whether the rated current of the power socket meets the requirements and a safety grounding device is installed, otherwise the socket shall be replaced.

【 Selection of start-up and power 】

< Start-up > : Plug in the machine/heater, and turn the power switch to "ON" identification location; the buzzer gives a long voice of "bee", and there isn't any display on the digital screen;

< Gear selection > : Press the "ON/OFF" key to start up, the heater enters into the Normal Mode, works with the low power of 600W, the icons  and  are brightened. Press the "+" or "-" key to enter into the setting interface, when the setting temperature value starts flickering, the temperature can be set by continuously pressing the "+" or "-" key, in the range of 5 – 35℃. When the temperature is set to 35℃, press the "+", and the setting temperature becomes 5℃. When the temperature is set to 5℃, press the "-", and the setting temperature becomes 35℃. No operation within 5 seconds and exit the setting interface, the set temperature value stops flickering, and displays the corresponding set value.

Press the "mode" key, the heater works with the middle power of 900W, the icon  is brightened, other settings are the same as the low power gear.

Press the "mode" key again, the heater works with the high power of 1500W, the icon  is brightened.

Continue to press the "ON/OFF" key to shutdown.

【 Working mode 】

After power on, the heater enters into the Normal Mode. Under Normal Mode, you can repeatedly press the "mode" key to switch between Low Power Mode—Middle Power Mode—High Power Mode—Fast-Heating Mode—Energy-Saving Mode—Anti-Freezing Mode. When any gear (high power gear, middle power gear, low power gear) is set, the heater works according to the setting gear within 2 minutes. After 2 minutes, the temperature control state starts.

A: When the indoor temperature T_h is less than or equal to $T_s - 2^\circ\text{C}$ (the set temperature), the heater works according to the setting gear, and the icon  is brightened.

B: When the indoor temperature T_h is greater than or equal to T_s (the set temperature), the heating elements stop working and the icon  turns off; the displayed temperature flickers for 10 seconds then stops flickering, and the displayed set temperature is always brighten (in non-extinguishing condition).

Keep pressing the "mode" key, the heater enters into the Fast-Heating Mode and the icon  is brightened. In this condition, you can't shift gears but switch between shutdown and start-up by pressing the "ON/OFF" key, and the temperature can't be set by pressing the "+" or "-" key, and the heater always works with high power. When the working mode switched from Normal Mode to the Fast-Heating Mode, the heater works with high power no matter what condition it used to be.

When the indoor temperature T_h is higher than or equal to 35°C , the heating elements stop working, and the icon  turns off, the displayed temperature 35°C flickers for 10 seconds then stops flickering, and the displayed temperature is always brighten (in non-extinguishing condition). When the indoor temperature T_h is less than or equal to 33°C , the heating elements keep working and the icon  will be brightened again.

Keep pressing the "mode" key, the heater enters into the Energy-Saving Mode, the icon ECO is brightened and automatically set the temperature at 22°C . In this condition, you can't shift gears but switch between shutdown and start-up by pressing the "ON/OFF" key, and the temperature can't be set by pressing the "+" or "-" key, and the heater works with at the following state under the Energy-Saving Mode:

A: The heater works with high power when the indoor temperature T_h is less than 20°C ;

B: The heater works with middle power when T_h is greater than or equal to 20°C but less than 22°C ;

C: The heater works with low power when T_h is greater than or equal to 22°C but less than 24°C ;

D: The heater stops working when T_h is greater than or equal to 24°C , in this condition, the icon  turns off and the displayed temperature 22°C flickers for 10 seconds then stops flickering, and the displayed temperature is always brighten (in non-extinguishing condition).

Keep pressing the "mode" key, the heater enters into the Anti-Freezing Mode, the icon  is brightened and

automatically set the temperature at 5°C. In this condition, you can't shift gears but switch between shutdown and start-up by pressing the "ON/OFF" key, and the temperature can't be set by pressing the "+" or "-" key, and the heater always works with low power. The heater works at the following state under the Anti-Freezing Mode.

A: The heating elements stop working when the indoor temperature TH is higher than or equal to 5 °C,

the icon  turns off and the displayed temperature 5°C flickers for 10 seconds then stops flickering, and the displayed temperature is always brighten (in non-extinguishing condition).

B: The heating elements keep working and the icon  will be brightened again when TH is lower or equal to 3°C.

Keep pressing the "mode" key, the heater returns to the Normal Mode, and you can switch the working mode circularly by pressing the "mode" key repeatedly.

【 Time setting 】

Under power on state, press the "TIMER" key, the heater enters into the timer setting interface. You can press the "+" or "-" key to set the time shutdown. In this condition, the icon  is brightened and the timer setting begins to flickering. The timer can be performed in any mode. The corresponding icon and gear shall be displayed during the time setting. The time setting range is 0–24H, and the adjustment step is 1H. When the set value is 0H, press "-" key and set time as 24H; when the set value is 24H, press the "+" key and set the time as 0H. When the value is set as 0H, the timing is canceled; when the set value is not 0H, the timing works. The time setting will be regularly reset if the heater turns off within the setting time. Under power off state, press the "TIMER" key, the heater enters into the timer setting interface. You can press the "+" or "-" key to set the time start-up. In this condition, the icon  is brightened and the timer setting begins to flickering. Other icons are not brightened and the other functions are the same as the power on state.

After reaching the setting time, the heater turns on and enters into the working mode before it last shutdown, but the buzzer does not ring.

【 Memory function 】

Power on the heater again after it is shut down normally, the heater will work as the latest working mode state before shutdown. Shut down under the normal working mode, the heater will work as the normal working mode after power on.

Power off, power on again, the heater works under the normal working mode.

【 Protection function for the short circuit and open circuit of the temperature sensor 】

Under any mode, if the short circuit protection occurs to the temperature sensor, the digital screen displays the room temperature and the digital tubes display E1 and flicker continuously, any keystroke operation is invalid.

Under any mode, if the short circuit protection occurs to the temperature sensor, the digital screen displays the room temperature and the digital tubes display E2 and flicker continuously; any keystroke operation is invalid.

【 Safety protection function 】

When the heater is turned on, and the indoor temperature Th exceeds 50 °C, all the output will be closed, and all LED lights flicker "FF" by frequently of 1/s. In this condition, the heater can't be turned on and all operations will be invalid even if the indoor temperature is less than 50 °C.

【 Temperature compensation function 】

The compensation constant temperature is 7 °C, i.e., the induction temperature is 29 °C while the actual control temperature is 22 °C.

【 Function for turning off the screen 】

If the function for turning off the screen is turned on after starting up, you can press "UP" and "DOWN" for 2 seconds to turn off the function. All the indicating lights are on.

When the function for turning off the screen is off under power on state, you can press the "UP" and "DOWN" for 2 seconds to turn on the function.

the icon  will be brightened only if the function for turning off the screen is turned on and the heating elements work, and the icon  will be brightened only if the function for turning off the screen is turned on and the timer function is opened.

<Remote control instructions>

Key list: Switch, timing/appointment, +, -, Mode .

Key description:

1. Switch key, + key, and - key are respectively equivalent to those on the control panel; shift key and mode key are equivalent to mode key on the control panel.
2. Timing/appointment key: Press the Timing/reservation key to enter the timing /appointment mode. Set the target time by + key and - key, no operation within 5 seconds after the setting indicates confirmation.
3. Remote control mode button switching: High Power Mode – Middle Power Mode – Low Power Mode – Fast Heating Mode – energy saving mode – Anti Freezing Mode

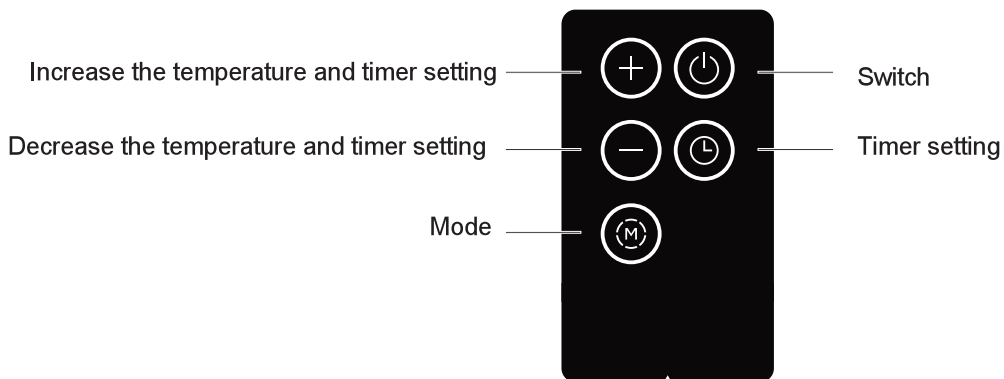


Table for information requirements for electric local space heaters					P	
Model identifier(s): NDK15-15MRE						
Item	Symbo l	Value	Unit	Item	Unit	
Heat output				Type of heat input, for electric local space heaters only (select one)		
Nominal heat output	Pnom	1,5	kW	Manual heat charge control with integrated thermostat	[no]	
Minimum heat output (indicative)	Pmin	0,6	kW	Manual heat charge control with room and/or outdoor temperature feedback	[no]	
Maximum continuous heat output	Pmax	1,5	kW	Electronic heat charge control with room and/or outdoor temperature feedback	[no]	
Auxiliary electricity consumption				Fan assisted heat output		[no]
At nominal heat output	elmax	1,428	kW	Type of heat output/room temperature control (select one)		
At minimum heat output	elmin	0,583	kW	Single stage heat output and no room temperature control	[no]	
In standby mode	eISB	0,32	W	Two or more manual stages, no room temperature control	[no]	
				With mechanic thermostat room temperature control	[no]	
				With electronic room temperature control	[no]	
				Electronic room temperature control plus day timer	[yes]	
				Electronic room temperature control plus week timer	[no]	
				Other control options (multiple selections possible)		
				Room temperature control, with presence detection	[no]	
				Room temperature control, with open window detection	[no]	
				With distance control option	[no]	
				With adaptive start control	[no]	
				With working time limitation	[no]	
				With black bulb sensor	[no]	
Contact details:	Midea Italia S.r.l. a socio unico Viale Luigi Bodio 29/37 20158 Milano Italia midea.com/it					
Remark: For electric local space heaters, the measured seasonal space heating energy efficiency η_s cannot be worse than the declared value at the nominal heat output of the unit.						
The seasonal space heating energy efficiency of all local space heaters except commercial local space heaters, η_s (%)					38	

CLEANING MAINTENANCE & STORAGE

Warning: Always disconnect the mains power supply before cleaning the Unit.

1. Use a soft dry cloth to clean the surface of the product. Wipe dry with a clean cloth.
2. Use warm water with a mild detergent and a soft damp cloth to clean the product. Wipe dry with a clean cloth. Do not pour water onto or into the unit.

To store your product in the off-season, we recommend using the original (or appropriately sized) box. It is important to keep it in a safe, dry location.

