



# Quick Installation Guide

## 1. Check Installaton Kit

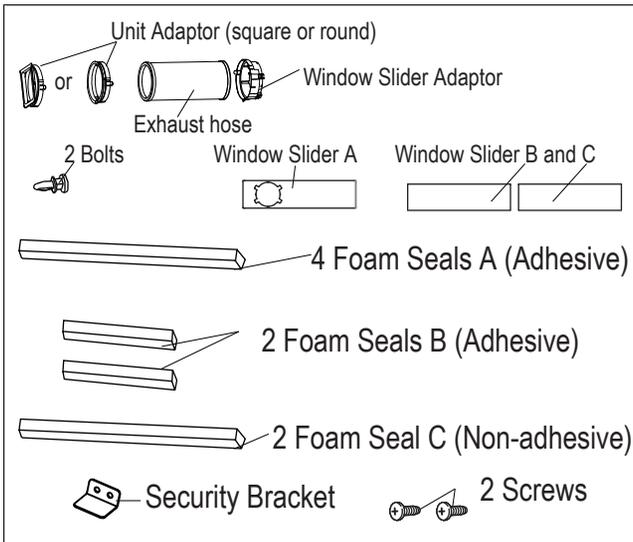


## 2. Check your window length and type.


Check your window length and choose the fit window slider. If your window length need two window sliders, after adjust the length, use the bolt to fasten them.

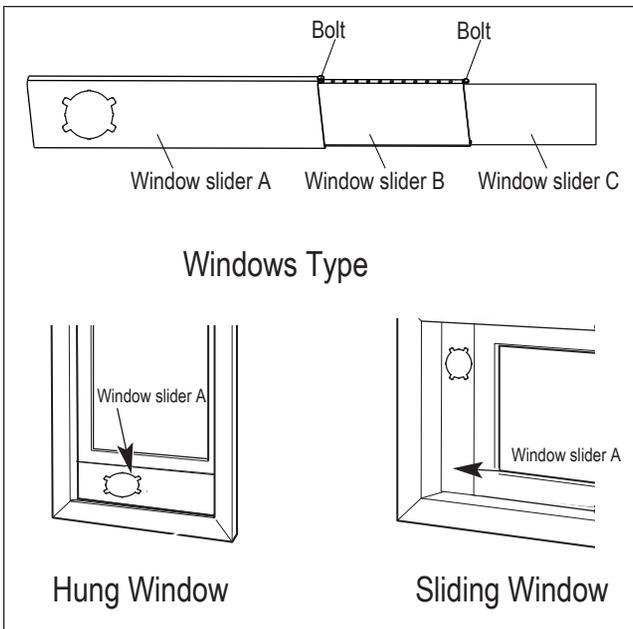


## 3. Preparing the Exhaust Hose assembly

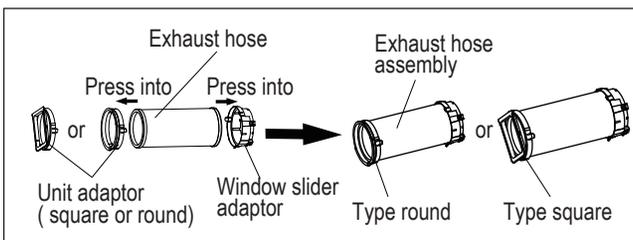

## 4. Install the Exhaust hose assembly to the unit .

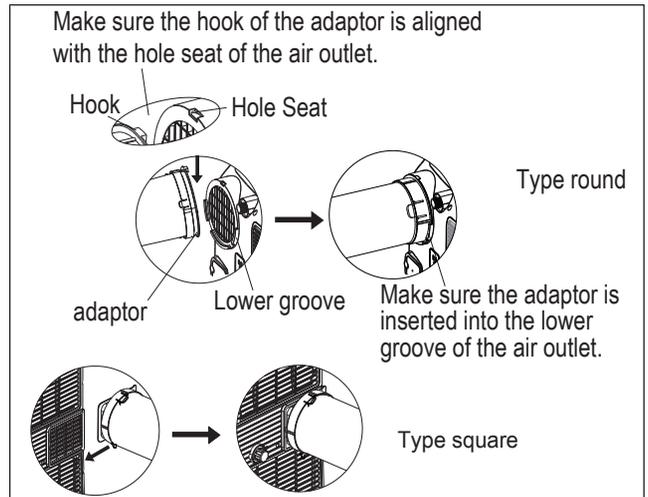


## 5.

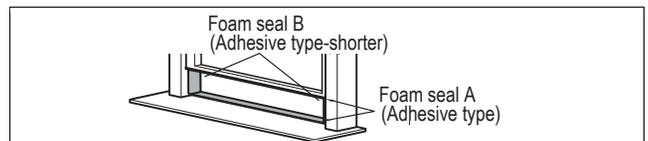


Cut the adhesive foam seal A and B strips to the proper lengths, and attach them to the window sash and frame as shown.

## 6.

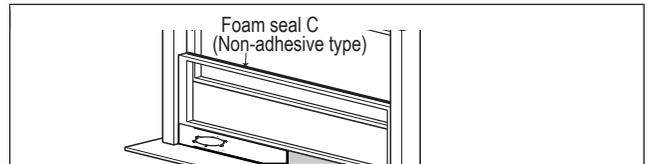


Cut the non-adhesive foam seal C strip to match the width of the window. Insert the seal between the glass and the window frame to prevent air and insects from getting into the room.

## 7.

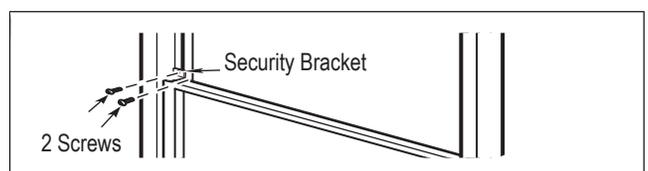

If desired, install the security bracket with 2 screws as shown.

## 8.

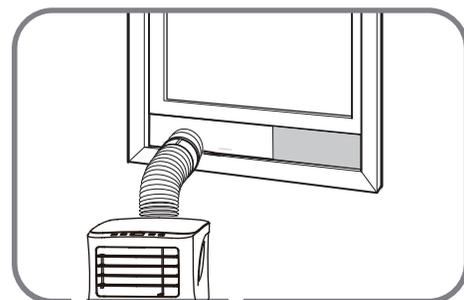


Insert the window slider adaptor into the hole of the window slider.

NOTE: If you need more detail information for installation, refer to the " Installation " in the instruction manual. All the illustrations are for explanation purpose only. Your machine may be slightly different. The actual shape shall prevail.


# Guide d'installation rapide

## 1. Vérifier l'ensemble d'installation

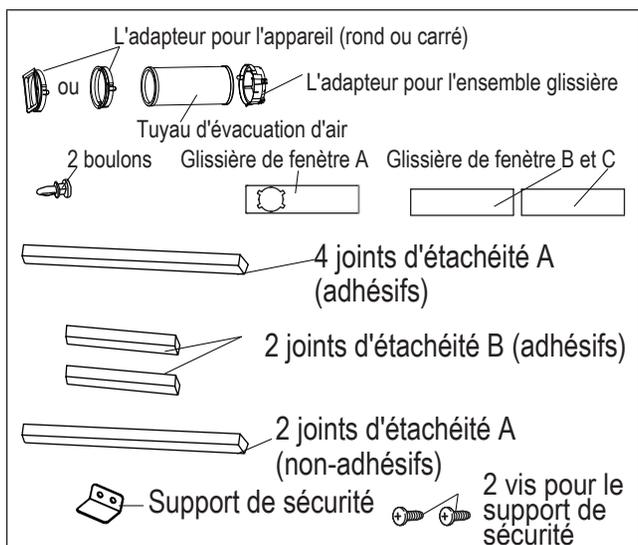


## 2. Vérifier le type et la longueur de votre fenêtre.


Vérifier la longueur de votre fenêtre et choisir le numéro de glissières qui suffiront. Si la longueur de votre fenêtre requiert deux glissières de fenêtre, après avoir ajuster la longueur, utiliser les boulons pour les fixer.

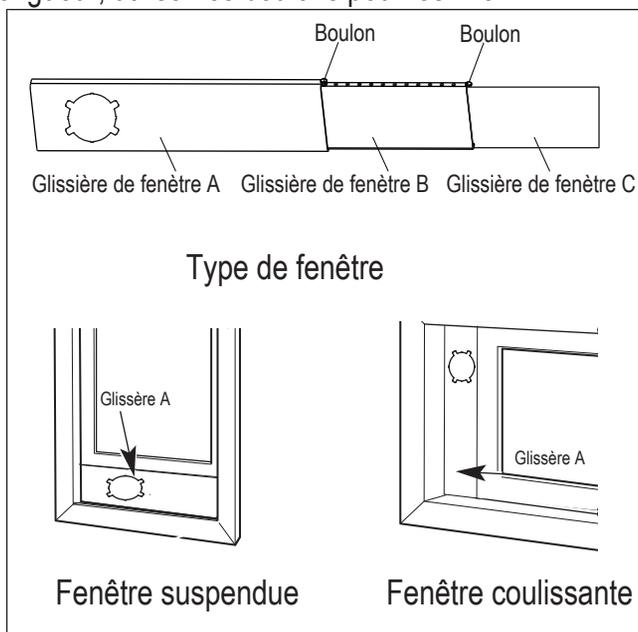


## 3. Préparation de l'ensemble d'évacuation d'air

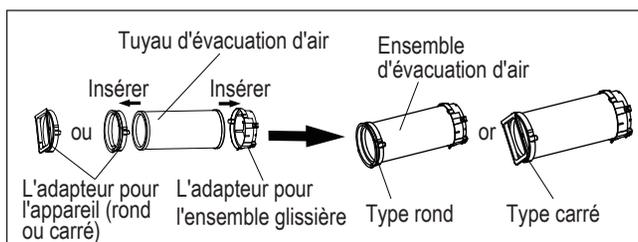

## 4. Installer l'ensemble d'évacuation d'air à l'appareil.

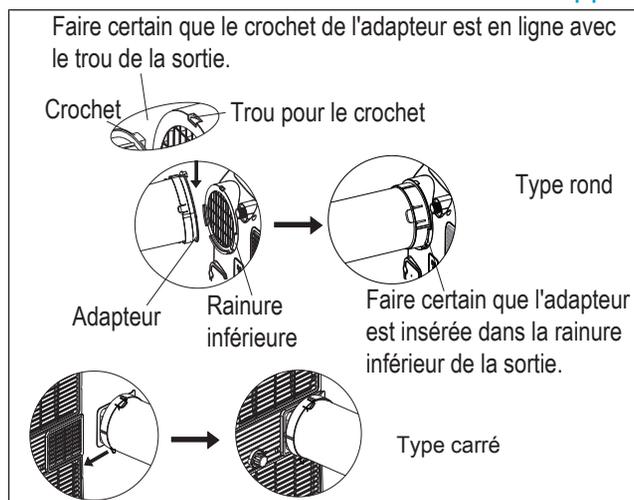


5.

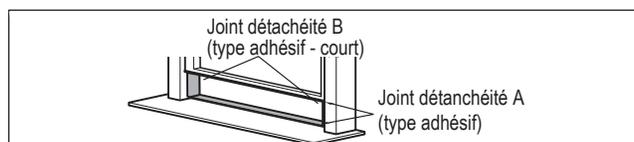


Couper les joints d'étanchéités adhésifs A et B à la bonne longueur, et affixer-les au châssis et au cadre de la fenêtre comme indiqué.

6.

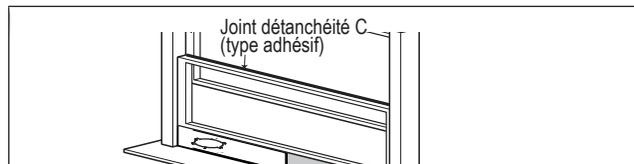


Couper le joint d'étanchéité non-adhésif C pour correspondre à la largeur de la fenêtre. Insérer le joint entre le verre et le cadre de la fenêtre pour empêcher l'air et les insectes d'entre dans la pièce.

7.

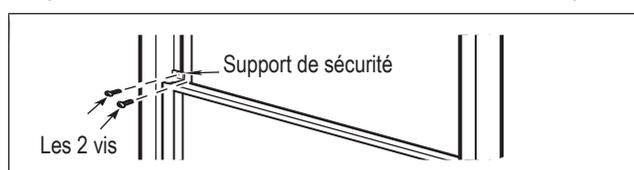

Si c'est désiré, installer le support de sécurité avec les deux vis comme indiqué.

8.

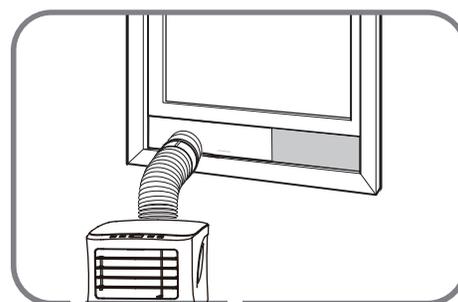

Insérer l'adaptateur pour l'ensemble glissière dans le trou de la glissière A.

NOTER: Si vous avez besoin de plus d'informations détaillées pour l'installation, voir la section "Installation" du manuel d'instructions. Toutes les illustrations sont à des fins explicatives seulement. Votre machine peut être un peu différente. La forme actuelle prévaudra.