


# Product Overview

## Product Introduction

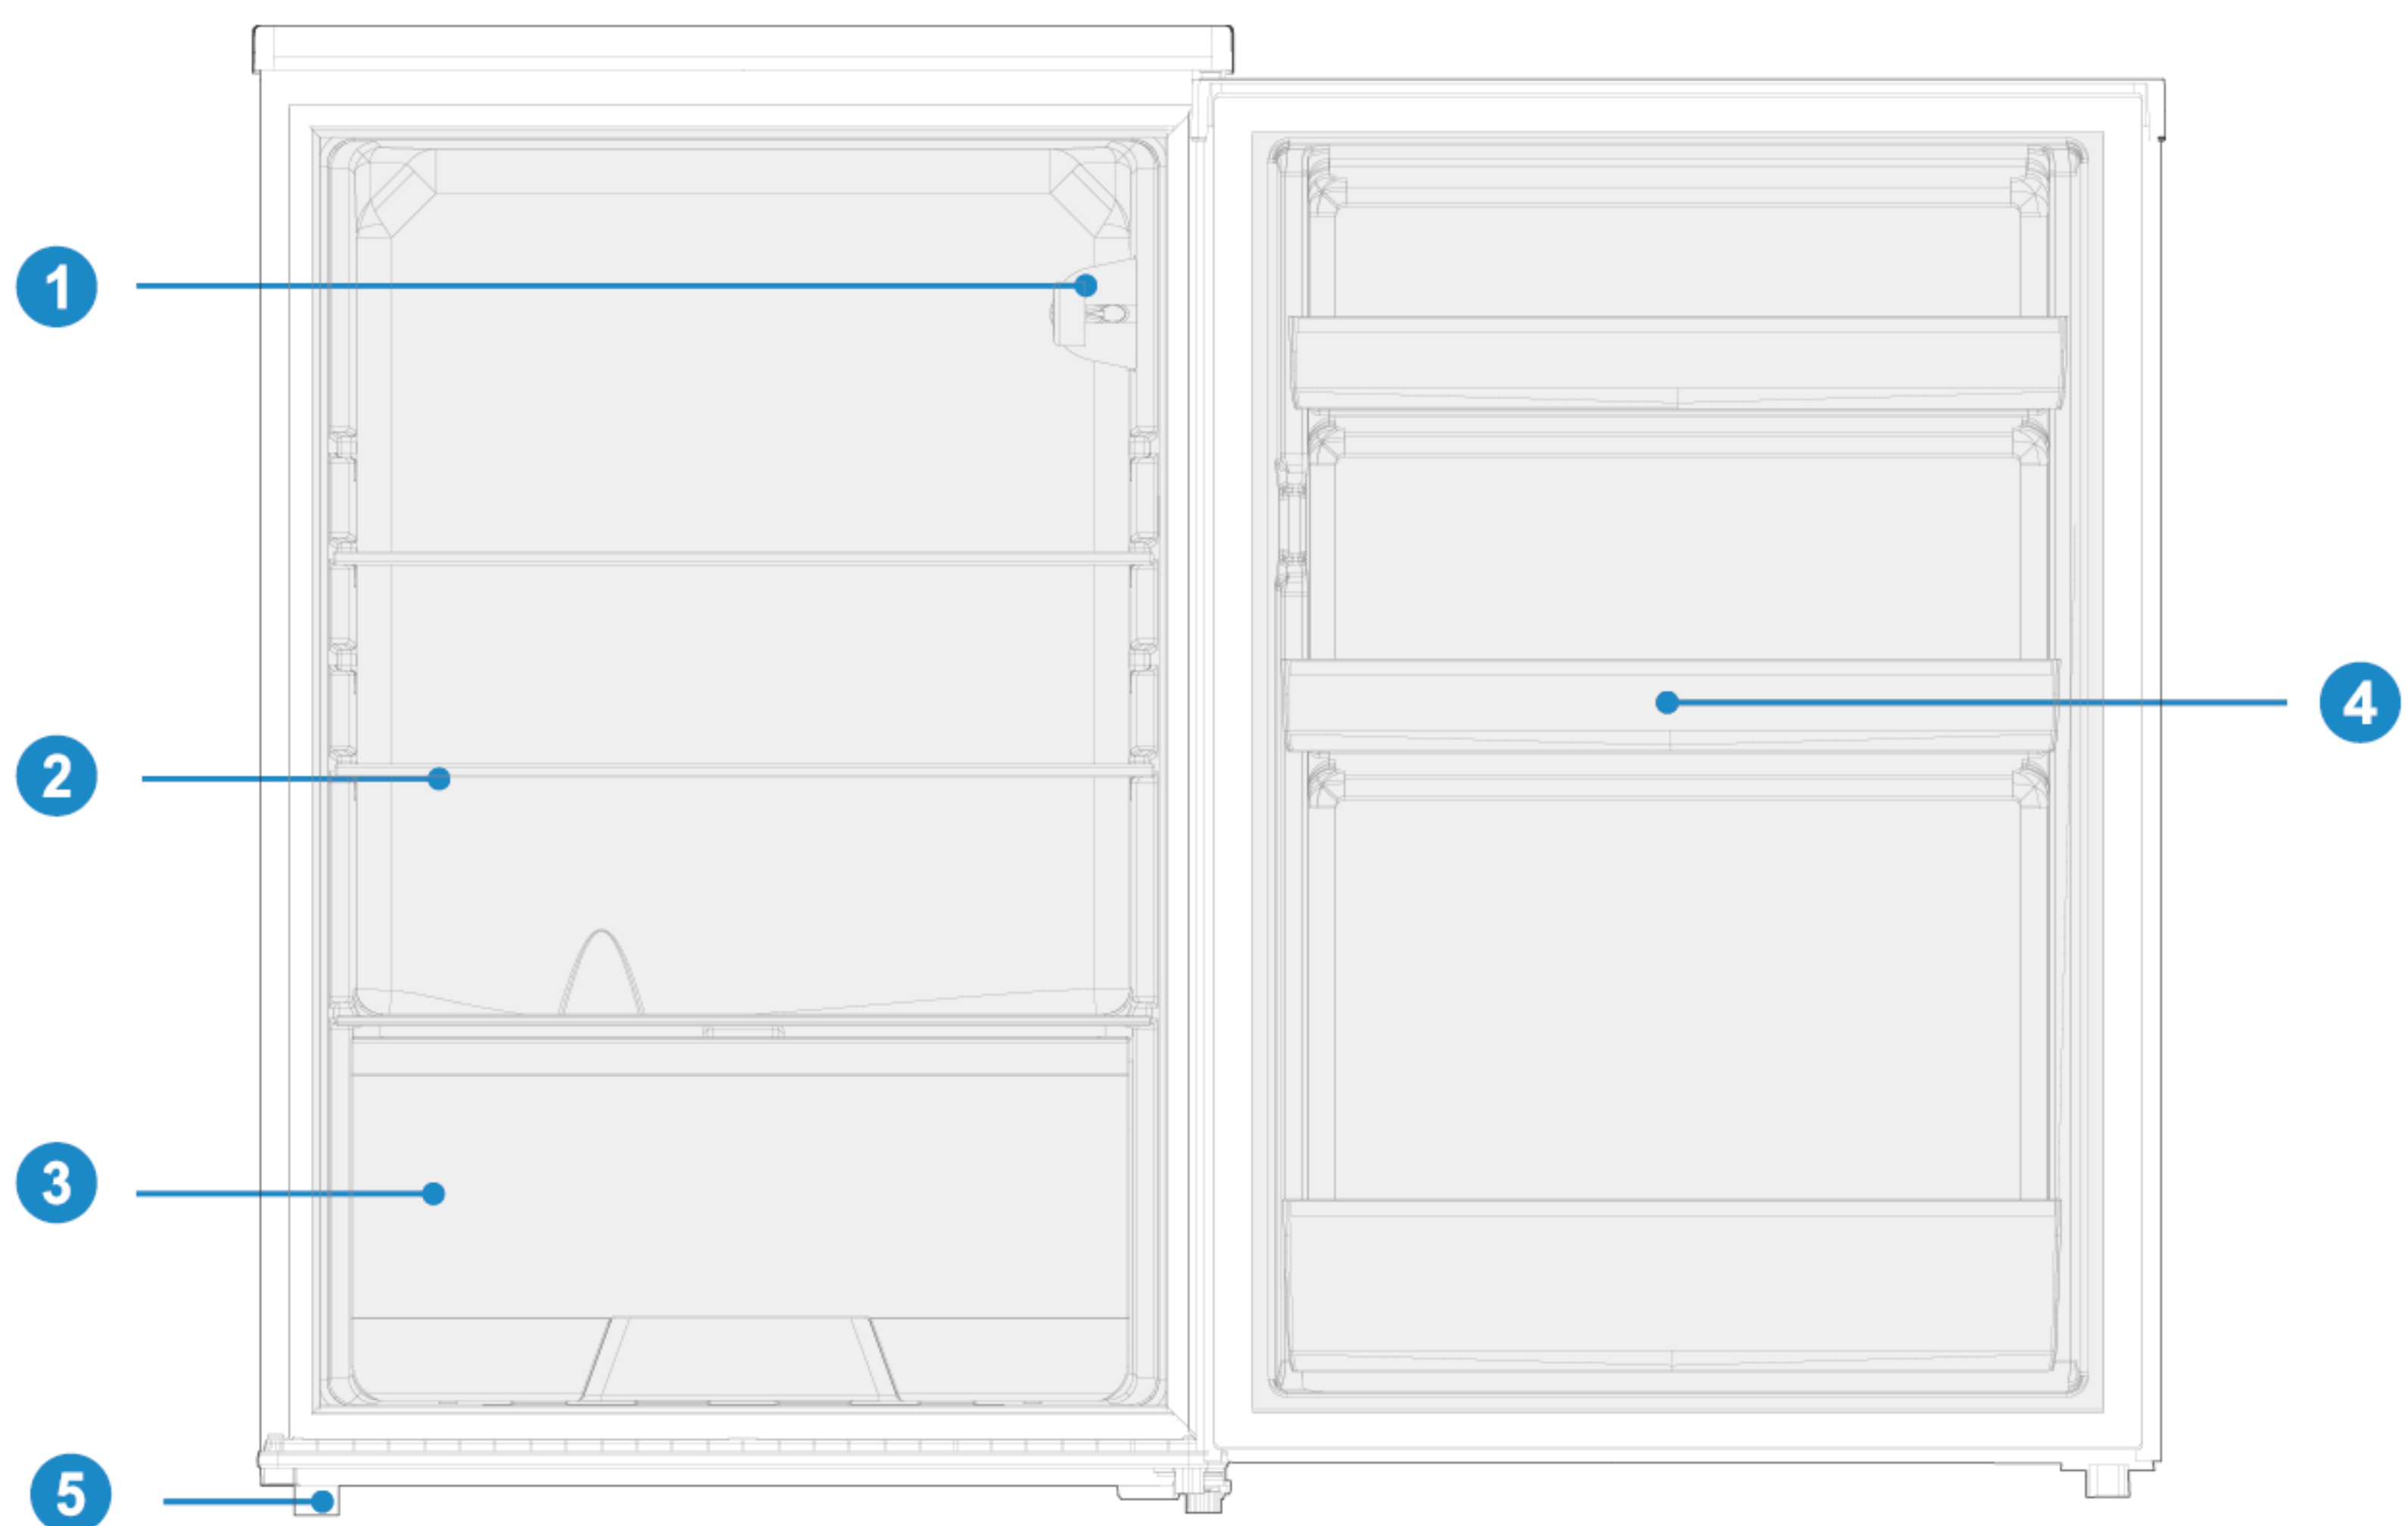

- |                                    |                      |
|------------------------------------|----------------------|
| <b>1</b> Temperature control knob  | <b>2</b> Glass shelf |
| <b>3</b> Fruits and vegetables box | <b>4</b> Bottle box  |
| <b>5</b> Leveling feet             |                      |

- For the most efficient use of energy, please keep the all internal items such as trays, drawers, shelves and ice cube box on the position supplied by manufacturer.
- This refrigerating appliance needs to be installed independently and cannot be used as a built-in. Otherwise, it will cause problems such the performance and life of the appliance are reduced. And the manufacturer does not provide basic appliance warrant.

### • | Attention


**Differences:** Due to technical changes and different models, some of the illustrations in this manual may differ from your model.



# Product Installation

## Space requirement diagram

Keep the air circulation free around the cabinet. When installing the unit, ensure 10cm of free space at both sides, 10cm at the top of the unit, and not more than 7.5cm at the rear of the unit.

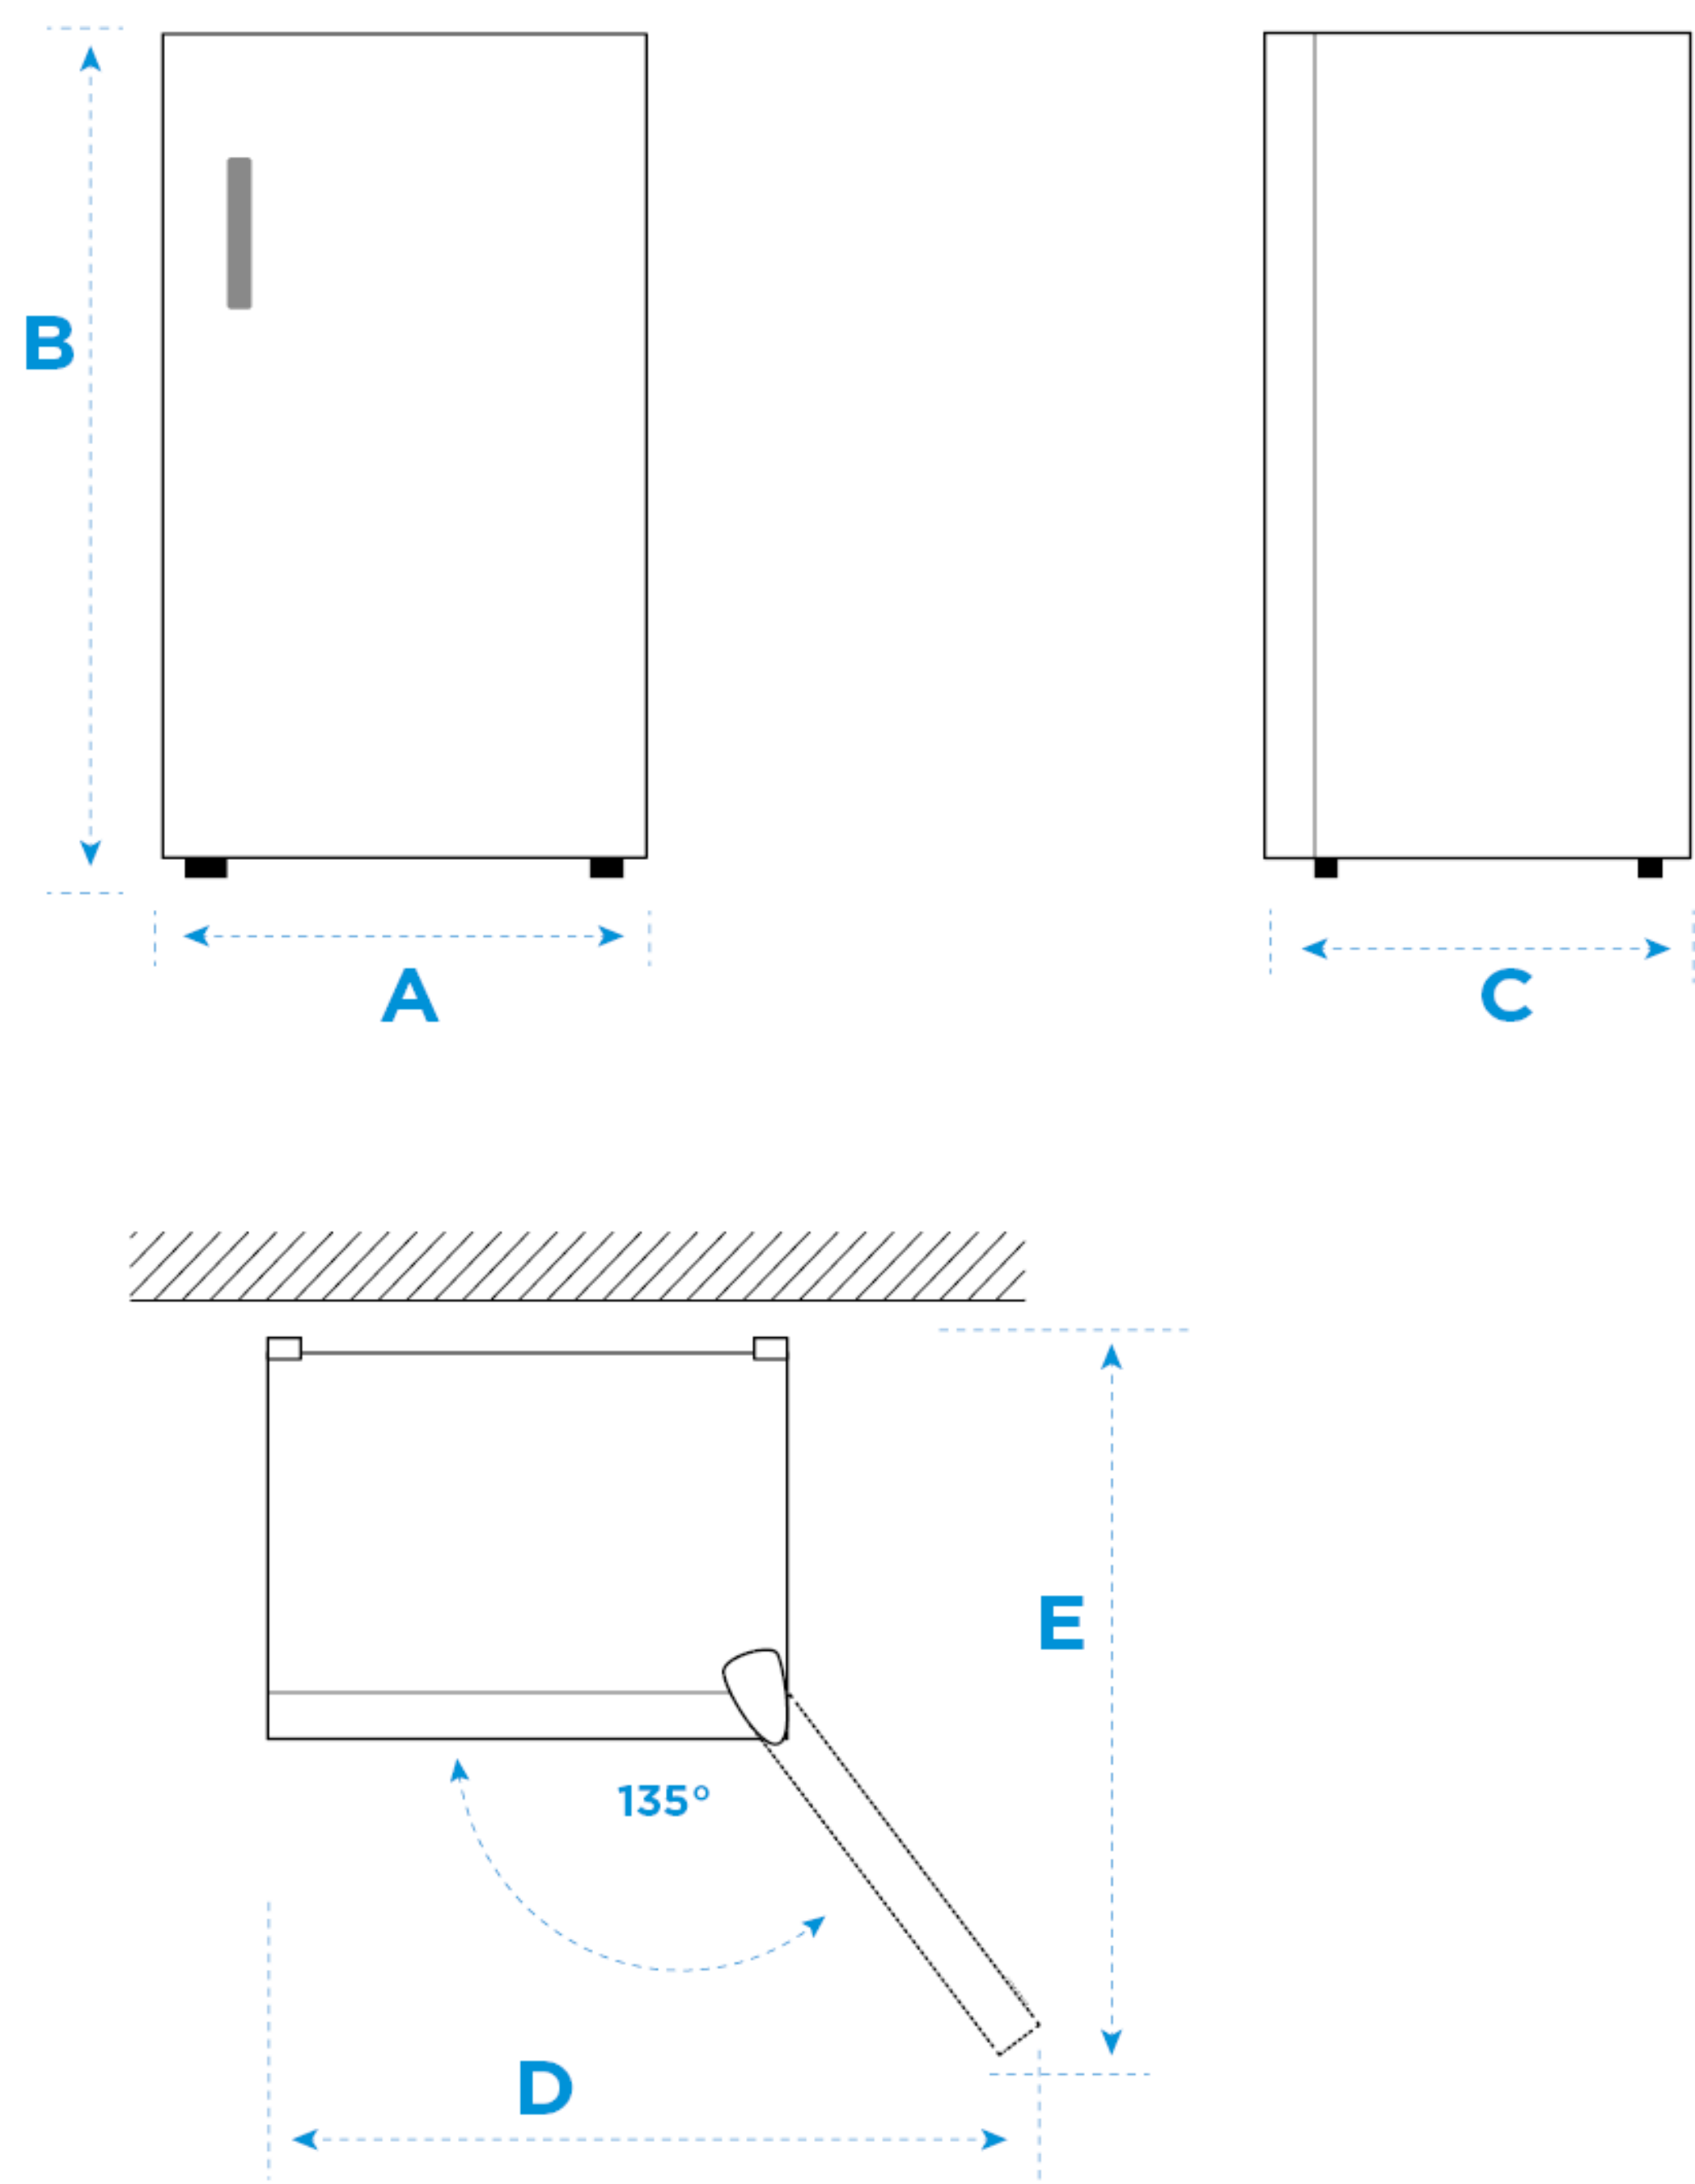


A	B	C	D	E
553	845	574	935	960

Notice: All dimensions in mm

## Connecting the appliance

After installing the product, please let it stay for more than 2 hours before turning on the power, otherwise it will lead to a decrease in cooling capacity or a damage to the product.

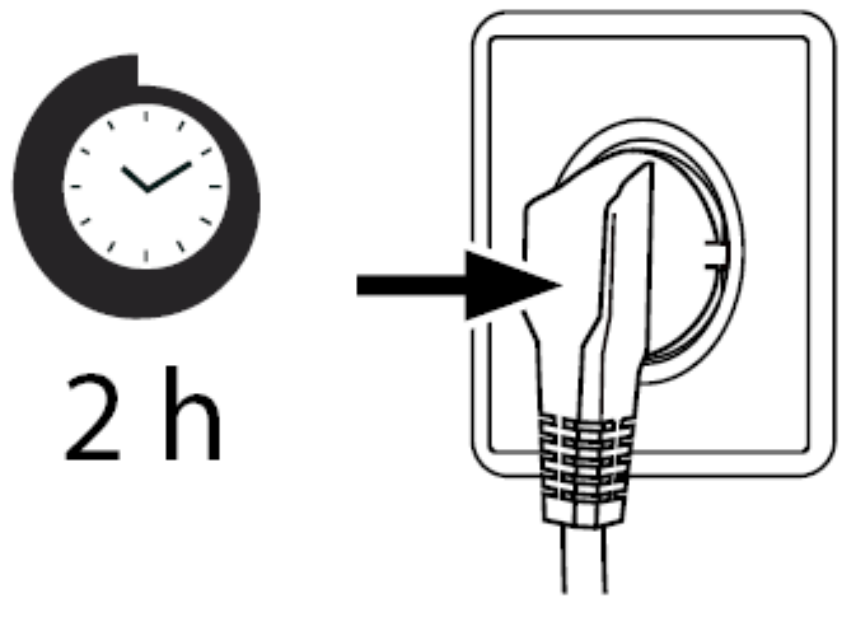

Allow the appliance to run empty for 24 hours so the compartment can cool to the appropriate temperature.

### • | CAUTION

The refrigerator should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating plate.

When positioning the appliance, ensure the supply cord is not trapped or damaged.

## Ambient Temperature

Depending on the climate class, this refrigerator is intended to be used at an ambient temperature range as specified in the following table.

The product may not operate properly at temperatures outside of the specific range.

You can find the climate class on the product label.

Climate Class	Ambient Temperature
SN	+10 °C to +32 °C
N	+16 °C to +32 °C
ST	+16 °C to +38 °C
T	+16 °C to +43 °C

**If you have any doubts regarding installation, please turn to the vendor, to our customer service or to the nearest Authorised Service Centre.**

### • | Tips



The cooling performance and power consumption of the refrigerator may be affected by the ambient temperature, the door-opening frequency, and the location of the refrigerator. We recommend adjusting the temperature settings as appropriate.



# Product Operation

## Operation Instruction


### a| Use and functions

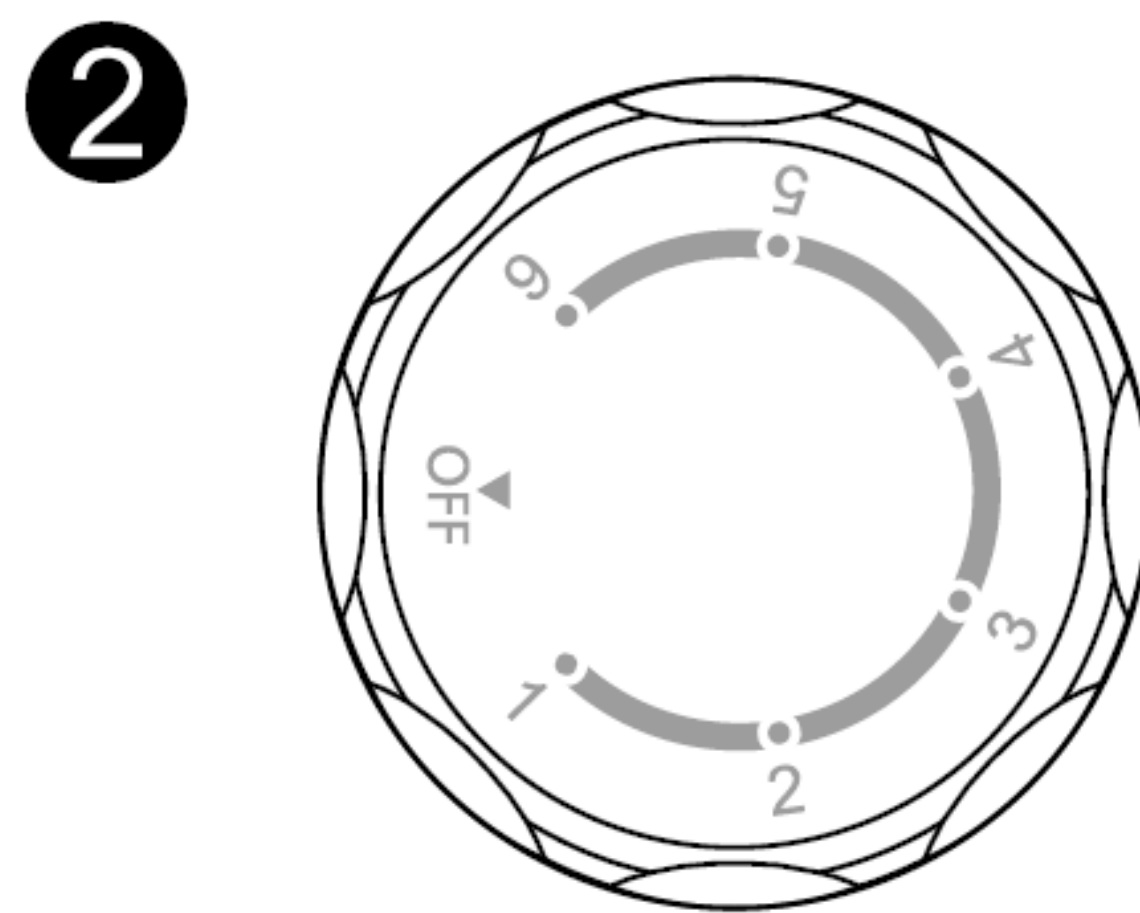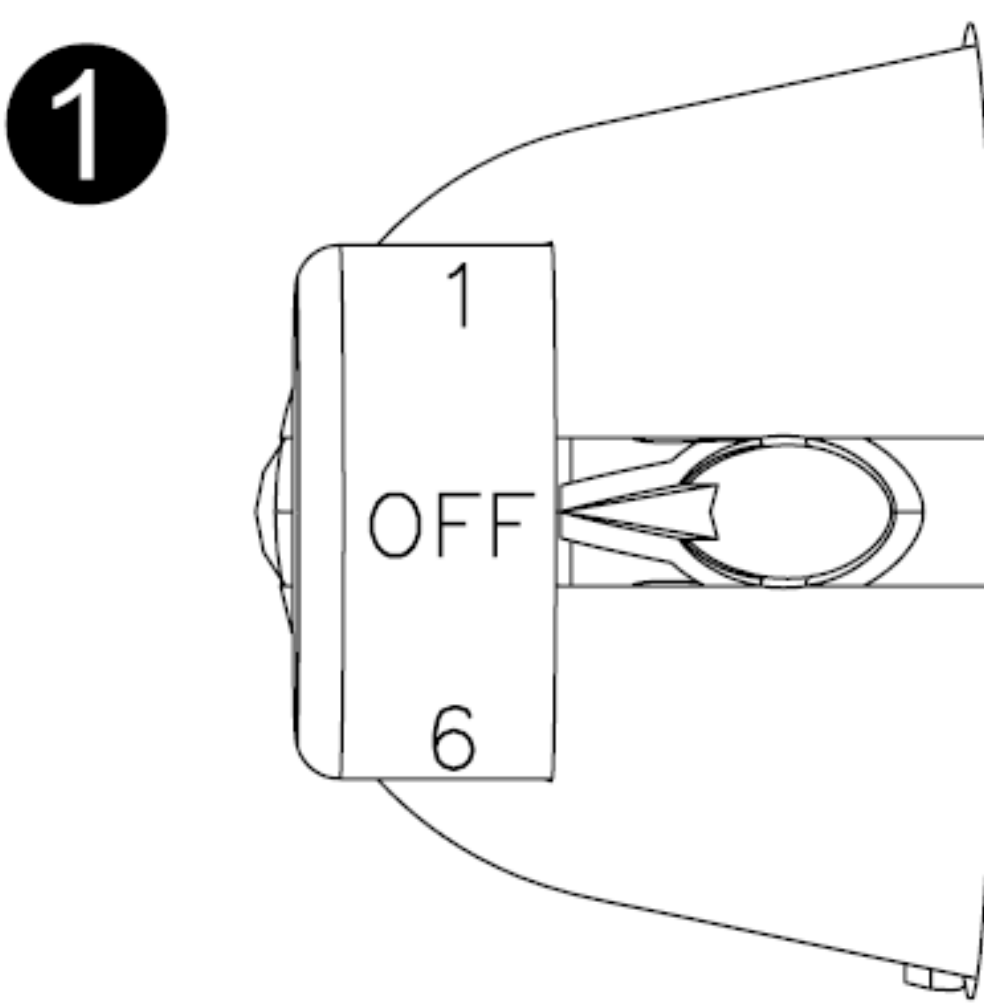

The figures do not mean specific set temperature, but temperature level.

- > “1” means the warmest setting.
- > “6” means the coldest setting.
- > The higher the figure is, the lower the actual temperature inside refrigerator shall be.
- > “OFF” means stop running.

**Recommended gear: “3”.**

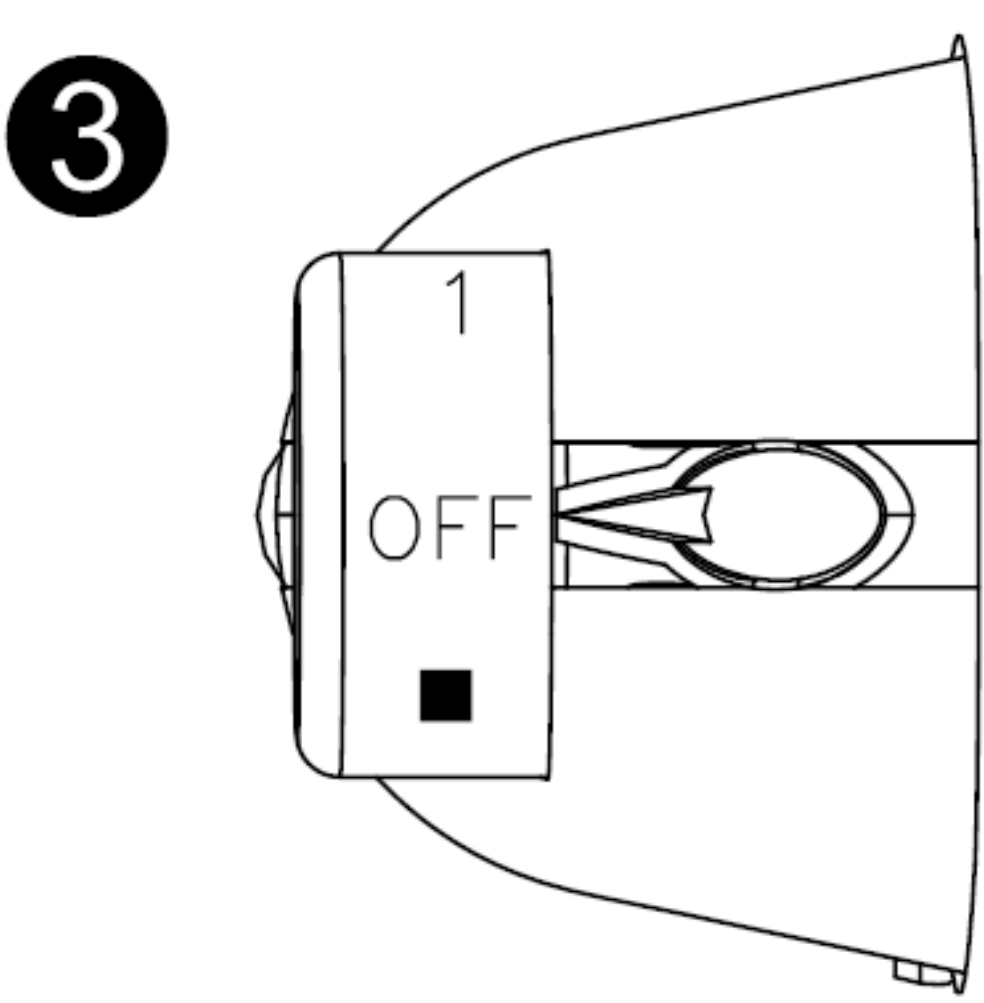

The figures do not mean specific set temperature, but temperature level.

- > “1” means the warmest setting
- > “4” means the coldest setting
- > The higher the figure is, the lower the actual temperature inside refrigerator shall be.
- > “OFF” means stop running.

**Recommended gear: “3”.**

### • | Tips

The actual control panel may differ from model to model.

### b| Changing the light

Any replacement or maintenance of the LED lamps is intended to be made by the manufacturer, its service agent or similar qualified person.



# Maintenance Tips

## Overall cleaning

- Disconnect the appliance from the electrical supply before undertaking any routine maintenance. Allow at least 5 minutes before restarting the appliance, as frequent starting may damage the compressor.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not try to repair, disassemble or modify the appliance by yourself. In case of repair please contact our customer service.
- Eliminate the dust on the back of the unit at least once in the year to avoid hazard by fire, as well as increased energy consumption.
- Check the door gasket regularly to make sure there are no debris. Clean the door gasket with a soft cloth dampened with soapy water or diluted detergent.
- The interior of the product should be cleaned regularly to avoid odor.
- Use a soft cloth or sponge to clean the inside of the product, with two tablespoons of baking soda and a quart of warm water. Then rinse with water and wipe clean. After cleaning, open the door and let it dry naturally before turning on the power.
- For areas that are difficult to clean in the product (such as narrow sandwiches, gaps or corners), it is recommended to wipe them regularly with a soft rag, soft brush, etc. and when necessary, combined with some auxiliary tools (such as thin sticks) to ensure no contaminants or bacterials accumulation in these areas.
- Wipe the outer surface of the product with a soft cloth dampened with soapy water, detergent, etc., and then wipe dry.
- Do not use hard brushes, clean steel balls, wire brushes, abrasives (such as toothpastes), organic solvents (such as alcohol, acetone, Isoamyl acetate, etc.), boiling water, acid or alkaline items, which may damage the fridge surface and interior. Boiling water and organic solvents such as benzene may deform or damage plastic parts.
- Do not rinse directly with water or other liquids during cleaning to avoid short circuits or affect electrical insulation after immersion.



### • | Notes:

The appliance shall run continuously once it is started. Generally, the operation of the appliance shall not be interrupted; otherwise the service life may be impaired

## Defrosting

### Refrigerator compartment defrosts fully automatically

- While the refrigerating unit is running, beads of condensation or hoarfrost form at the back of the refrigerator compartment. This is normal. It is not necessary to wipe off the condensation or frost. The rear panel defrosts automatically. The condensation runs into the condensation channel and is conveyed to the refrigerating unit where it evaporates.

### • | NOTE

Keep the condensation channel and drainage hole clean, so that the condensation can run out.

### Defrosting the freezer compartment

- The freezer compartment does not defrost automatically, otherwise the frozen food would start thawing.
- A layer of frost in the freezer compartment impairs refrigeration of the frozen food and increases power consumption. Remove the layer of hoarfrost regularly.

### • | WARNING


Do not scrape off hoarfrost or ice with a knife or pointed object. Doing this may damage the refrigerant tubes.

1. Remove the frozen food and place temporarily in a cool location.
2. Disconnect the mains plug from the mains socket.
3. To accelerate the defrosting process, place a pan of hot water on a stand in the freezer compartment.
4. Wipe up condensation with a cloth or sponge.
5. Wipe dry the freezer compartment.
6. Plug in the appliance and adjust the temperature control knob as desired.
7. Put the frozen food back in the freezer compartment.

## Cleaning of door tray

According to the direction arrow in the figure below, use both hands to squeeze the tray, and push it upward, then you can take it out.


After washing the tray having been taken out, you can adjust its installing height in accordance with your requirement.

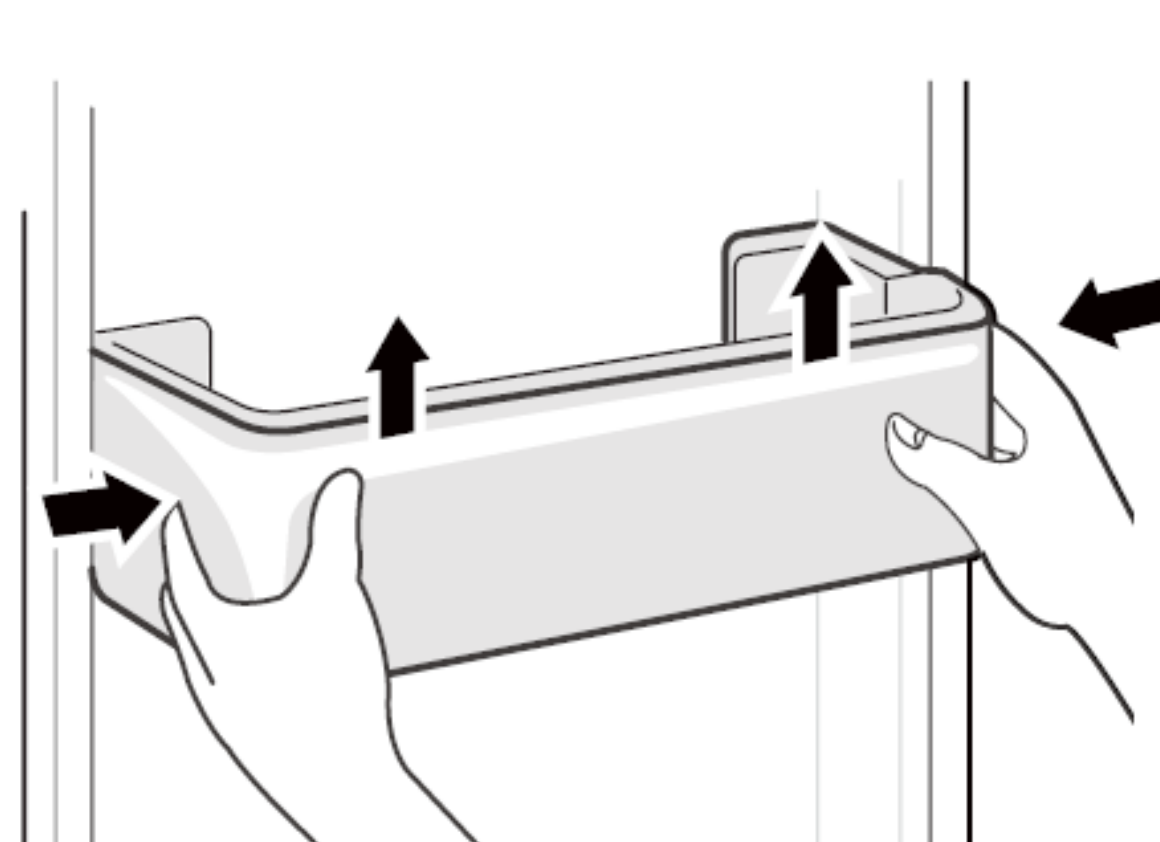

## Cleaning of glass shelf

As the innermost part of the refrigerator liner where contacting the shelves has a backstop, you shall raise the shelves upward, then you can be able to take it out.


Adjust or clean the shelves according to your requirement.

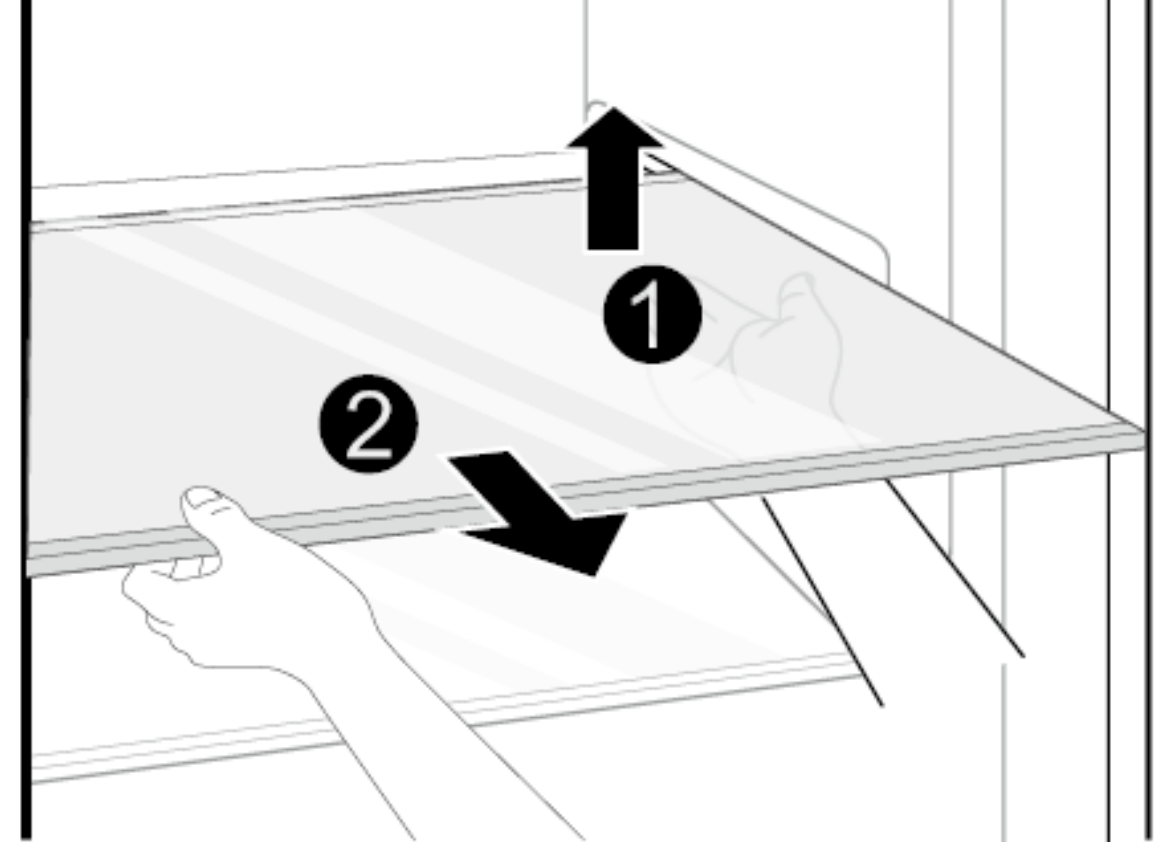

## Cleaning the vegetable drawer

Remove the contents of the drawer. Hold the handle of the vegetable drawer and pull it out completely until it stops.

Lift the vegetable drawer up and remove it by pulling it out.

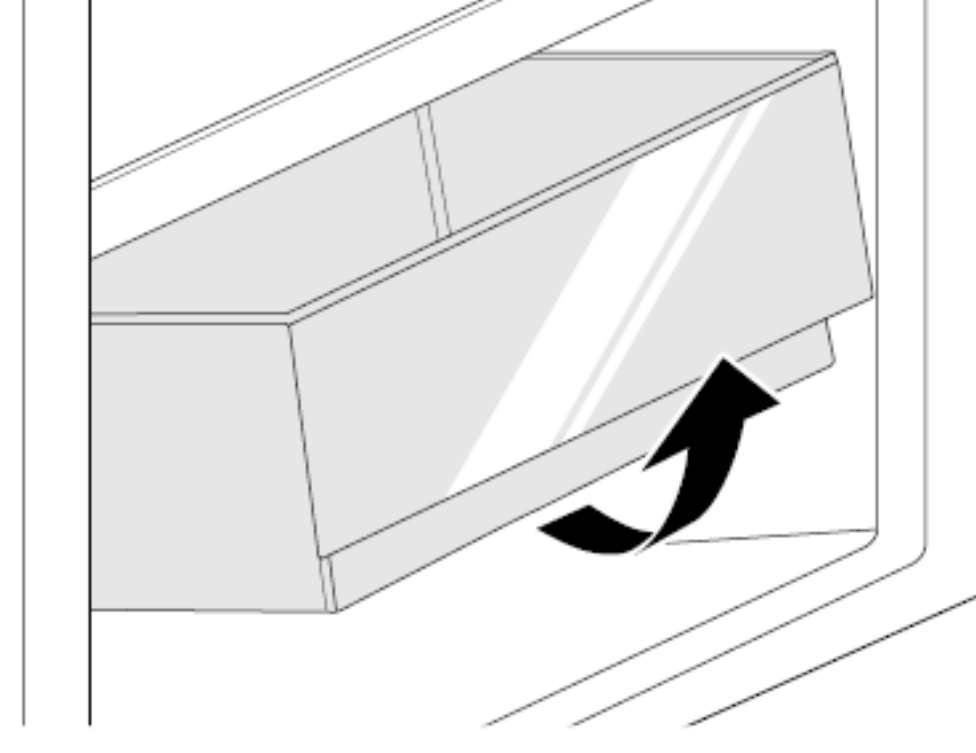

### • | Notes:

**Differences:** Due to technical changes and different models, some of the illustrations in this manual may differ from your model.




# Troubleshooting


**You may try to solve the following simple problems by yourself. If they cannot be solved, please contact the after-sales department.**

Failed operation	<ul style="list-style-type: none"><li>• Check whether the appliance is connected to power or whether the plug is in well contact</li><li>• Check whether the voltage is too low</li><li>• Check whether there is a power failure or partial circuits have tripped</li></ul>
Odor	<ul style="list-style-type: none"><li>• Odorous foods shall be tightly wrapped</li><li>• Check whether there is any rotten food</li><li>• Clean the inside of the refrigerator</li></ul>
Long-time operation of the compressor	<ul style="list-style-type: none"><li>• Long operation of the refrigerator is normal in summer</li><li>• when the ambient temperature is high It is not suggestible having too much food in the appliance at the same time</li><li>• Food shall get cool before being put into the appliance</li><li>• The doors are opened too frequently</li></ul>
Light fails to get lit	<ul style="list-style-type: none"><li>• Check whether the refrigerator is connected to power supply and whether the illuminating light is damaged</li><li>• Have the light replaced by a specialist</li></ul>
Door can not be properly closed	<ul style="list-style-type: none"><li>• The door is stuck by food packages Too much food is placed</li><li>• The refrigerator is tiltedr.</li></ul>
Loud noises	<ul style="list-style-type: none"><li>• Check whether the floor is level and whether the refrigerator is placed stably</li><li>• Check whether accessories are placed at proper locations</li></ul>
Door seal fails to be tight	<ul style="list-style-type: none"><li>• Remove foreign matters on the door seal</li><li>• Heat the door seal and then cool it for restoration</li><li>• (or blow it with an electrical drier or use a hot towel for heating)</li></ul>
Water pan overflows	<ul style="list-style-type: none"><li>• There is too much food in the chamber or food stored contains too much water,resulting in heavy defrosting</li><li>• The doors are not closed properly, resulting in frosting due to entry of air and increased water due to defrosting</li></ul>
Hot housing	<ul style="list-style-type: none"><li>• Heat dissipation of the built-in condenser via the housing, which is normal When housing becomes hot due to high ambient temperature, storage of too much food or shutdown of the compressor is shut down, provide sound ventilation to facilitate heat dissipation</li></ul>
Surface condensation	<ul style="list-style-type: none"><li>• Condensation on the exterior surface and door seals of the refrigerator is normal when the ambient humidity is too high. Just wipe the condensate with a clean towel.</li></ul>
Abnormal noise	<ul style="list-style-type: none"><li>• Buzz: The compressor may produce buzzes during operation, and the buzzes are loud particularly upon start or stop. This is normal.</li><li>• Creak: Refrigerant flowing inside of the appliance may produce creak, which is normal.</li></ul>


**Do you hear these abnormal sounds as below? Usually these sounds are normal.**

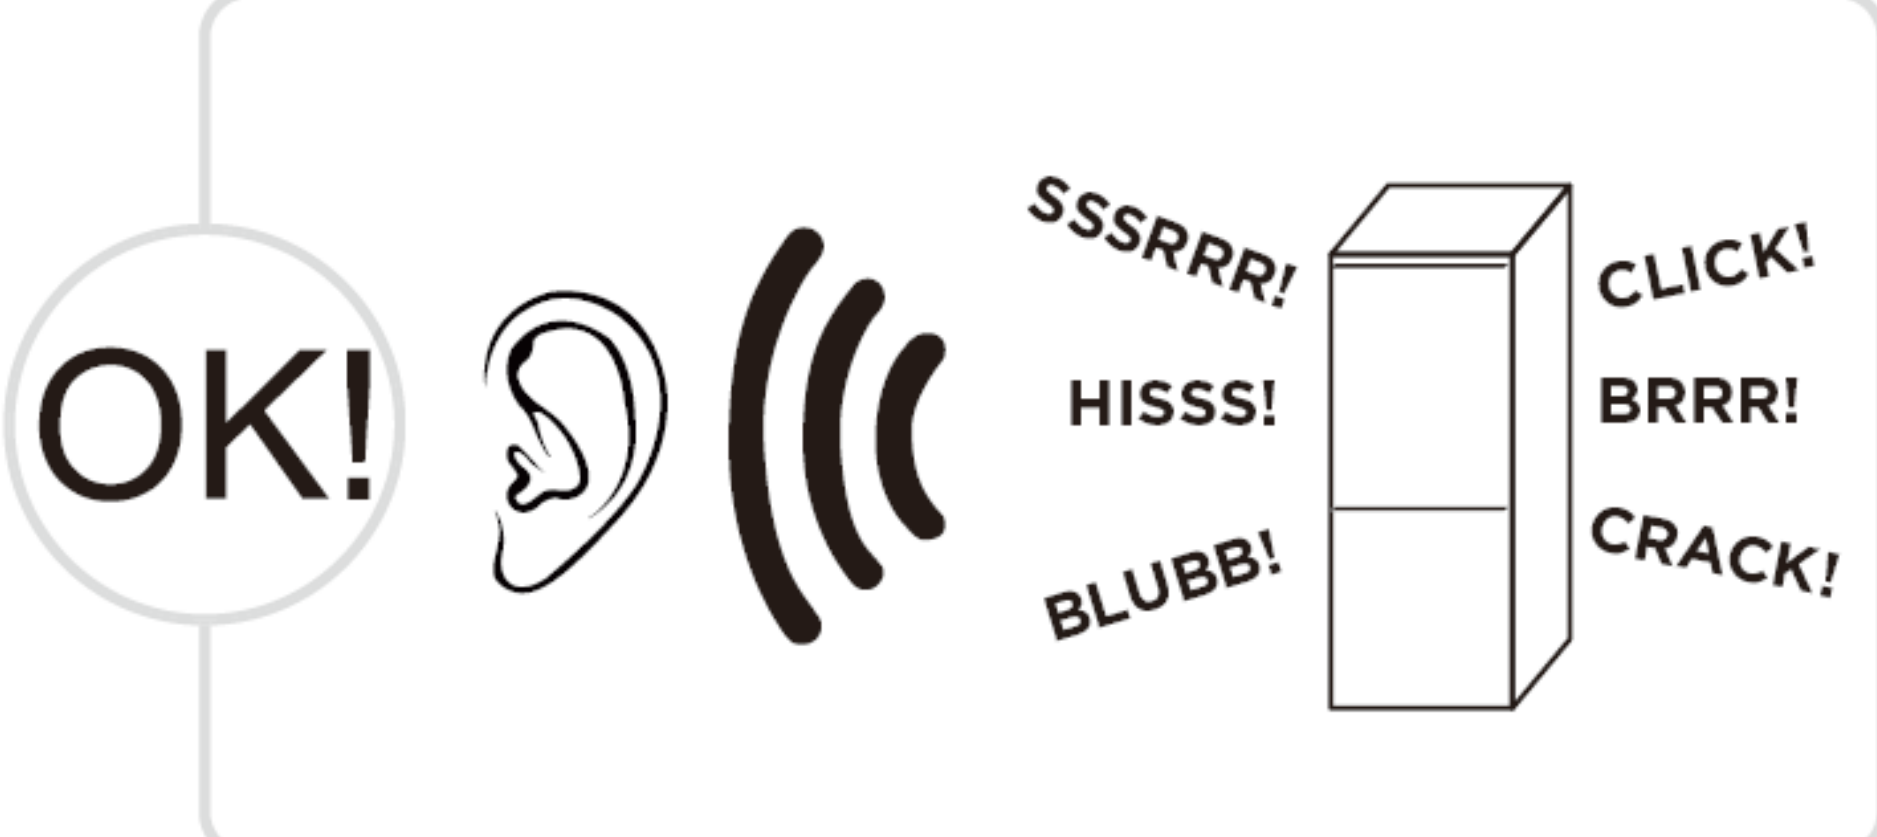


**CLICK:** Some electrical parts in the refrigerator, such as electric valve will make this noise when working. This is normal.

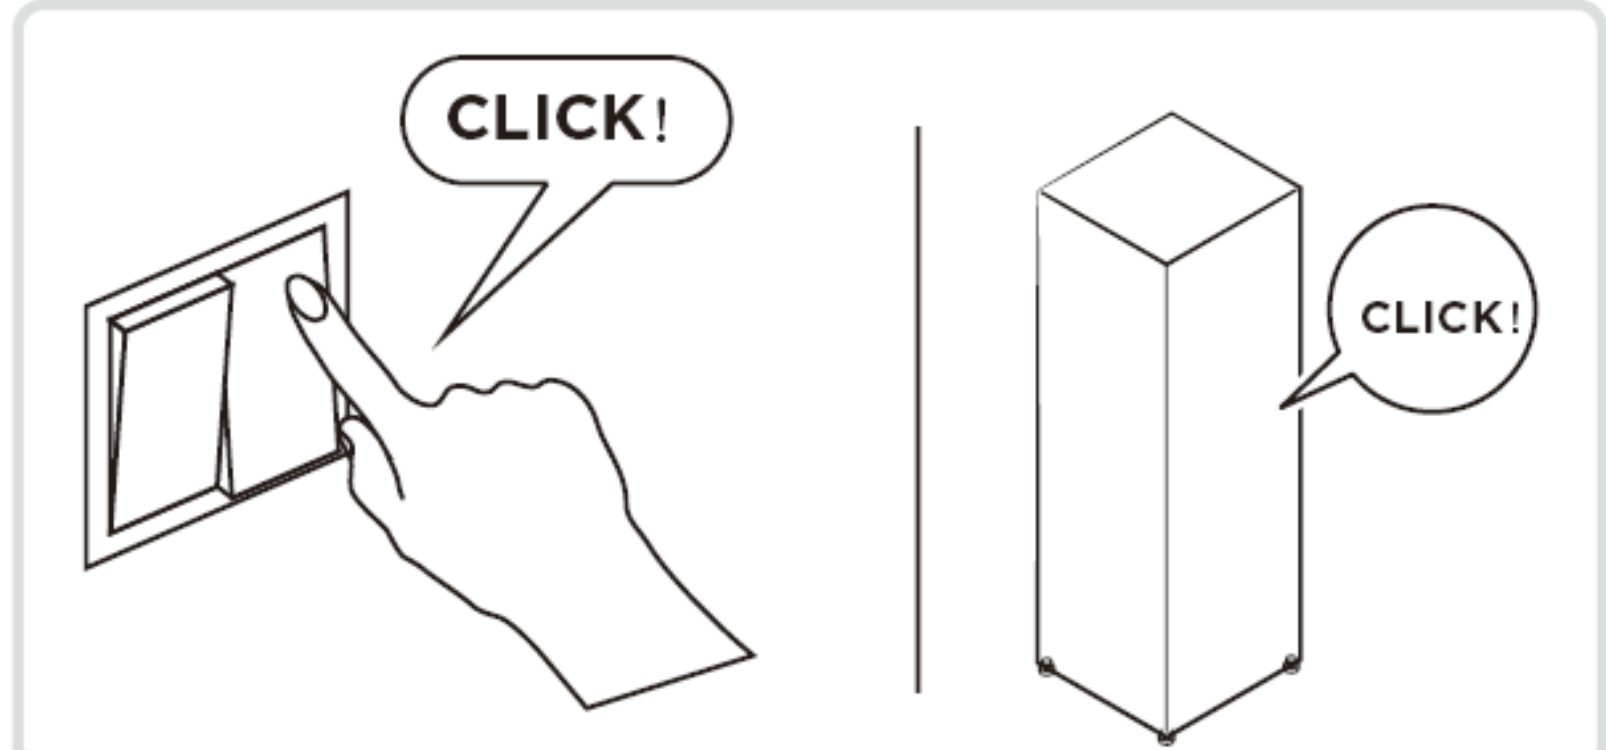


**HISS:** When the refrigerant flows into the evaporator, it will make this noise. This is normal.

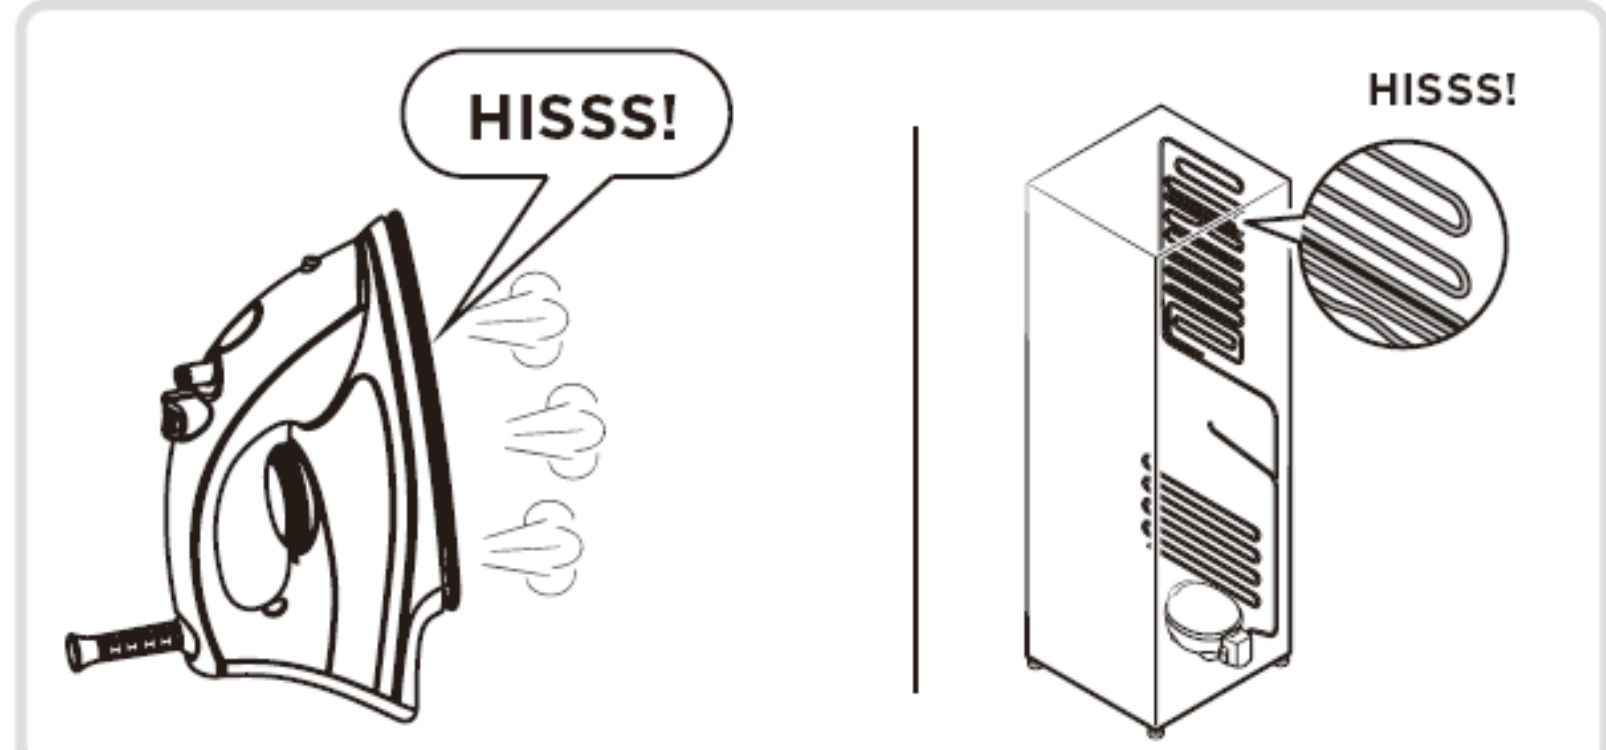


**BRRR:** The compressor will make this noise when working, and the buzzes are loud particularly upon start or stop. This is normal.

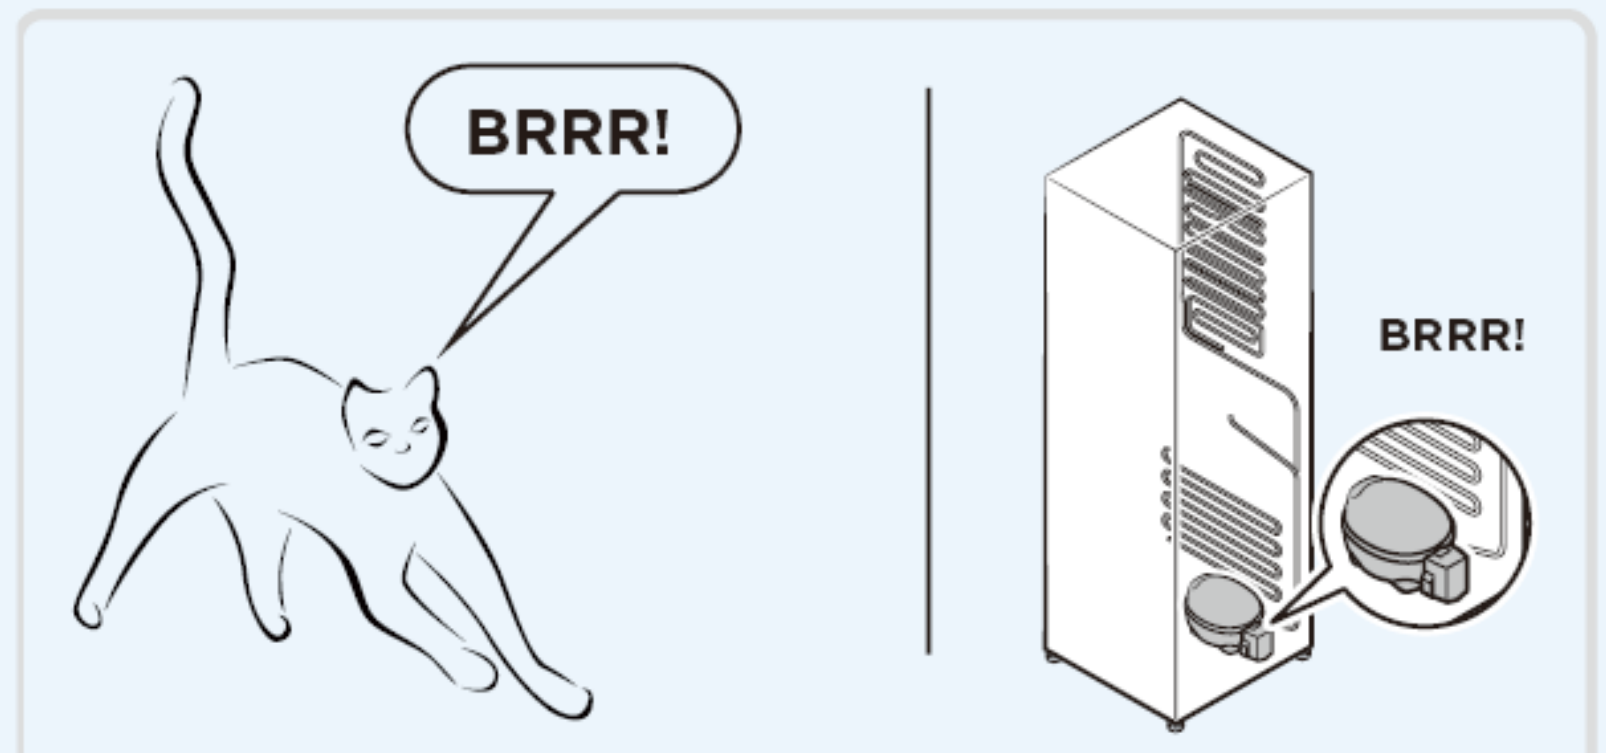


**SSSRRR:** The fan motor in the No frost refrigerator will make this noise when working. This is normal.

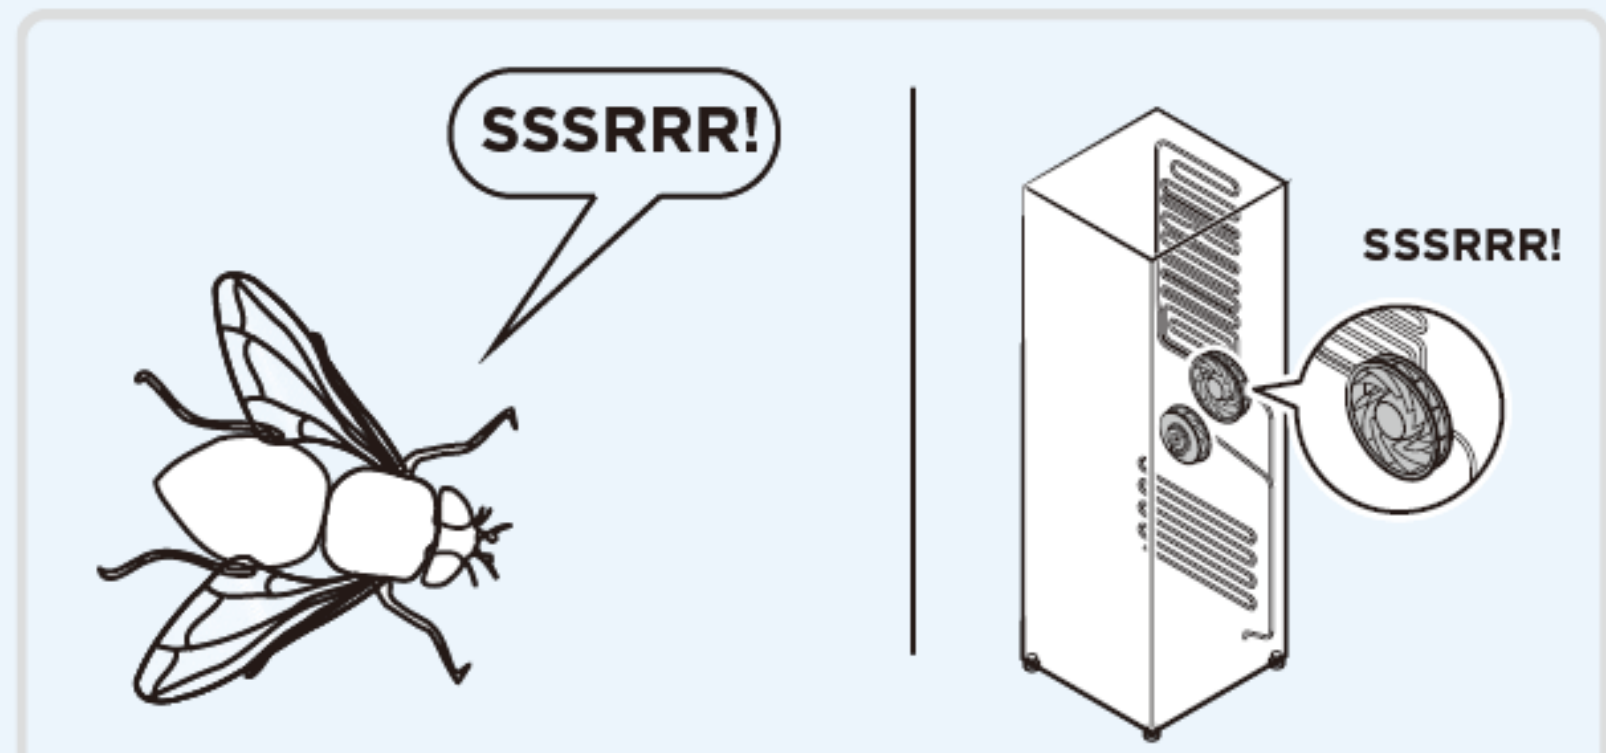

**BLUBB:** Refrigerant flowing through the pipes in the refrigerator will make this noise. This is normal.

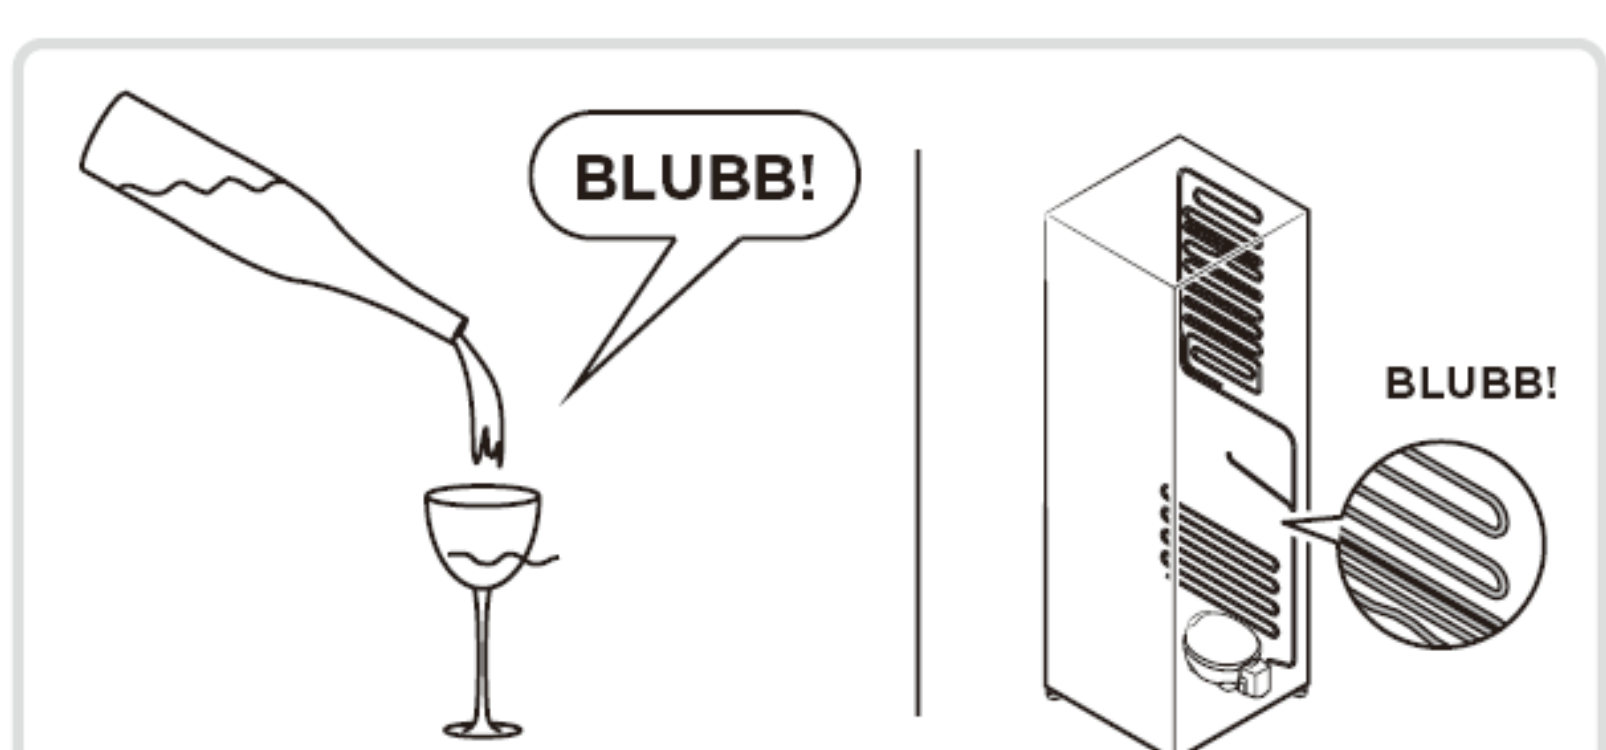

**CRACK:** Cracking sound or broken ice sound: the overall structure of the refrigerator, air duct frost will be with the thermal expansion and contraction of the expansion sound, these are also normal physical phenomenon.

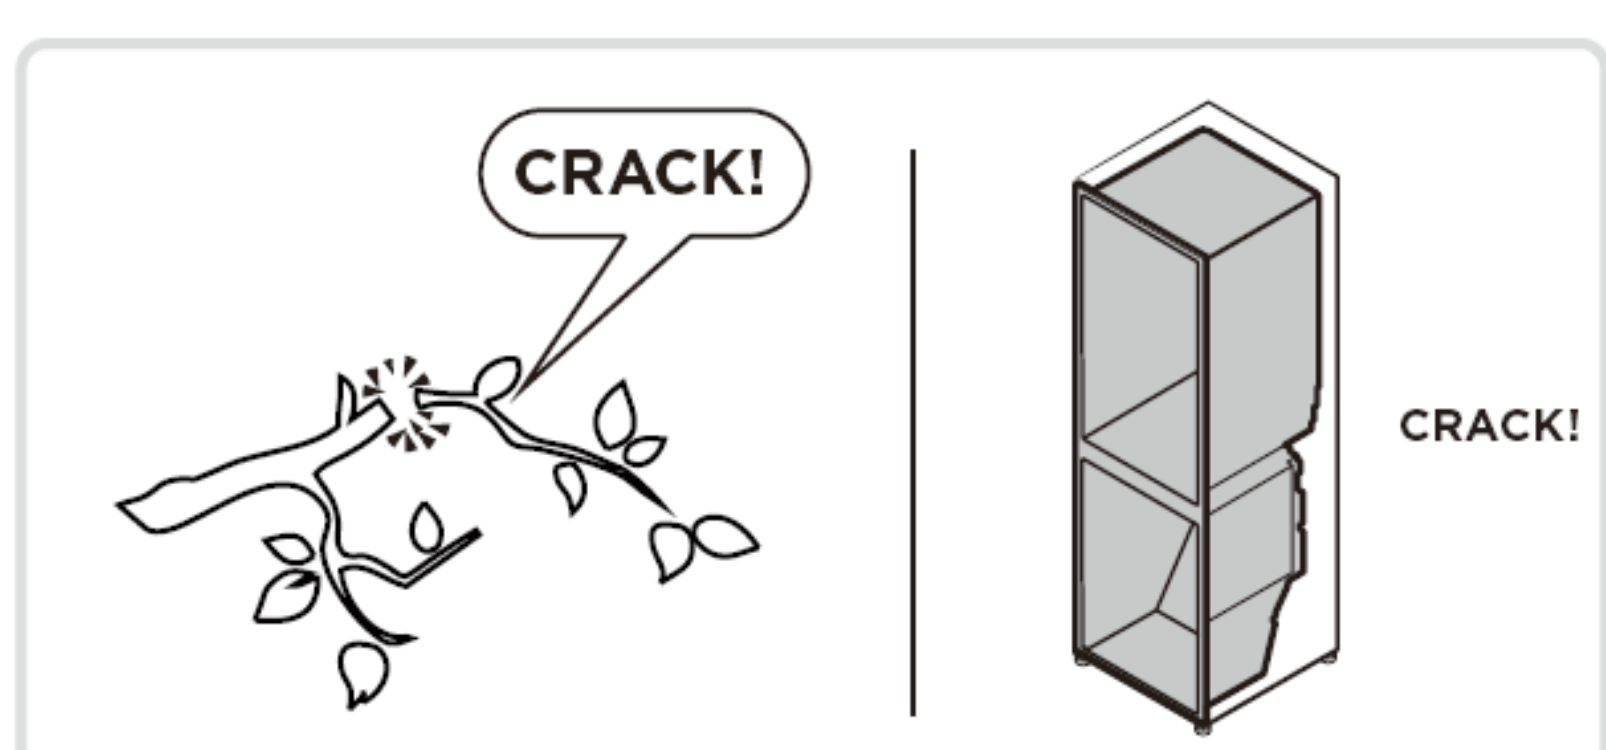



# Tips & Tricks

## Storing food

### Freezer compartment

The freezer compartment is designated for the low-temperature freezing of food, long-term storage of frozen food, and for the production of ice cubes.

Do not put fresh and frozen food next to each other. The frozen food may thaw.

When freezing large amounts of fresh food (such as meat, fish or chopped meat), please divide them into several small pieces before putting in, so that they can be quickly frozen and pick up easily.

Abide by the storage times recommended by food manufacturers on the packages, there is no information on the packaging, food should not be stored frozen for longer than three months from the date of purchase.

When purchasing frozen food, make sure that it was frozen at a suitable temperature and that the packaging is not damaged.

Frozen food should be kept in suitable individual packages to ensure that adjacent food cannot be contaminated. Consume thawed and defrosted foods immediately, do not refreeze them.

In case of prolonged power failure or malfunction of the appliance, remove the stored frozen food and check whether they are still edible, then store them in a sufficiently cool place or in another appliance.

To defrost food, remove it from the freezer and let it defrost at room temperature or in the refrigerator. To defrost food quickly, you can use the defrost function on your microwave, for example.

If you only want to defrost part of a pack, remove the portion you need and immediately close the rest of the pack. In this way, you will avoid “freezer burn” and will reduce ice formation on the remaining foods.

### Refrigerator compartment

The Refrigerator compartment is the ideal storage location for ready meals, cakes and pastries, preserved food, condensed milk, milk, cheese, spreads, sauces, dips and eggs.

The freshness at point of purchase is important for the shelf-life of your food. In principle, the fresher the produce when placed in the crisper drawers, the longer it stays fresh. Therefore, when buying food, always pay attention to the degree of freshness.

Never put warm foods in the fridge compartment. These should first cool down at room temperature and then be placed so as to ensure adequate air circulation in the fridge compartment.

Meat and clean fish (packed in a package or plastic foil) can be placed in the fridge compartment, which can be used in 1-2 days.

Fruit and vegetables without packaging can be placed in the part designated for fresh fruit and vegetables.

### • | Notes:

Storage of too much food during operation after the initial connection to power may adversely affect the freezing effect of the refrigerator.

### Storage times and temperature

**Note:** Overlong storage or storage at inappropriate freezing temperature may cause a quality loss or spoiled foods, which causes food waste, is inedible and may cause food poisoning. The minimum temperature in most cases should be -18°C or colder. Follow the maximum recommended storage times below:

- Stew, ice cream, sausages, bread: 2-6 months.
- Fish, shrimp, lamb, meat: 4-8 months.
- Vegetables, fruits, poultry, beef: 6-12 months.

## Tips for energy saving

Do not place the appliance near cookers, radiators or other heat sources. If the ambient temperature is high, the compressor will run more frequently and for longer, resulting in increased energy consumption.

Ensure that there is sufficient ventilation at the base of the appliance, on the sides of the appliance and at the back of the appliance.

Please also observe the spacing dimensions in the chapter “**Installation**”.

An evenly filled refrigerator/freezer compartment contributes to optimal energy use.

Allow warm food to cool before placing it in the refrigerator/freezer compartment. Food that has already cooled down increases energy efficiency.

Allow frozen food to defrost in the refrigeration compartment The coldness of the frozen food reduces the energy consumption in the refrigerator compartment and thus increases the energy efficiency.

Setting the temperature no colder than necessary contributes to optimal energy use.

The door gaskets of your appliance must be perfectly intact so that the doors close properly and energy consumption is not increased unnecessarily.



# Doors Reversal

Based on the location where you plan to use your refrigerator, you may find it more convenient to reverse the position of the door.

## • | ⚠ CAUTION


To avoid injury to yourself or your property, we recommend that someone assist you during the door reversal process.

### Preparing to reverse the door position


- Make sure that your refrigerator is unplugged and empty.
- Have someone available to assist you in the process.
- Keep all of the parts you remove to reuse them later.

### Steps:


1. Power off the refrigerator, and remove all objects from the door trays.

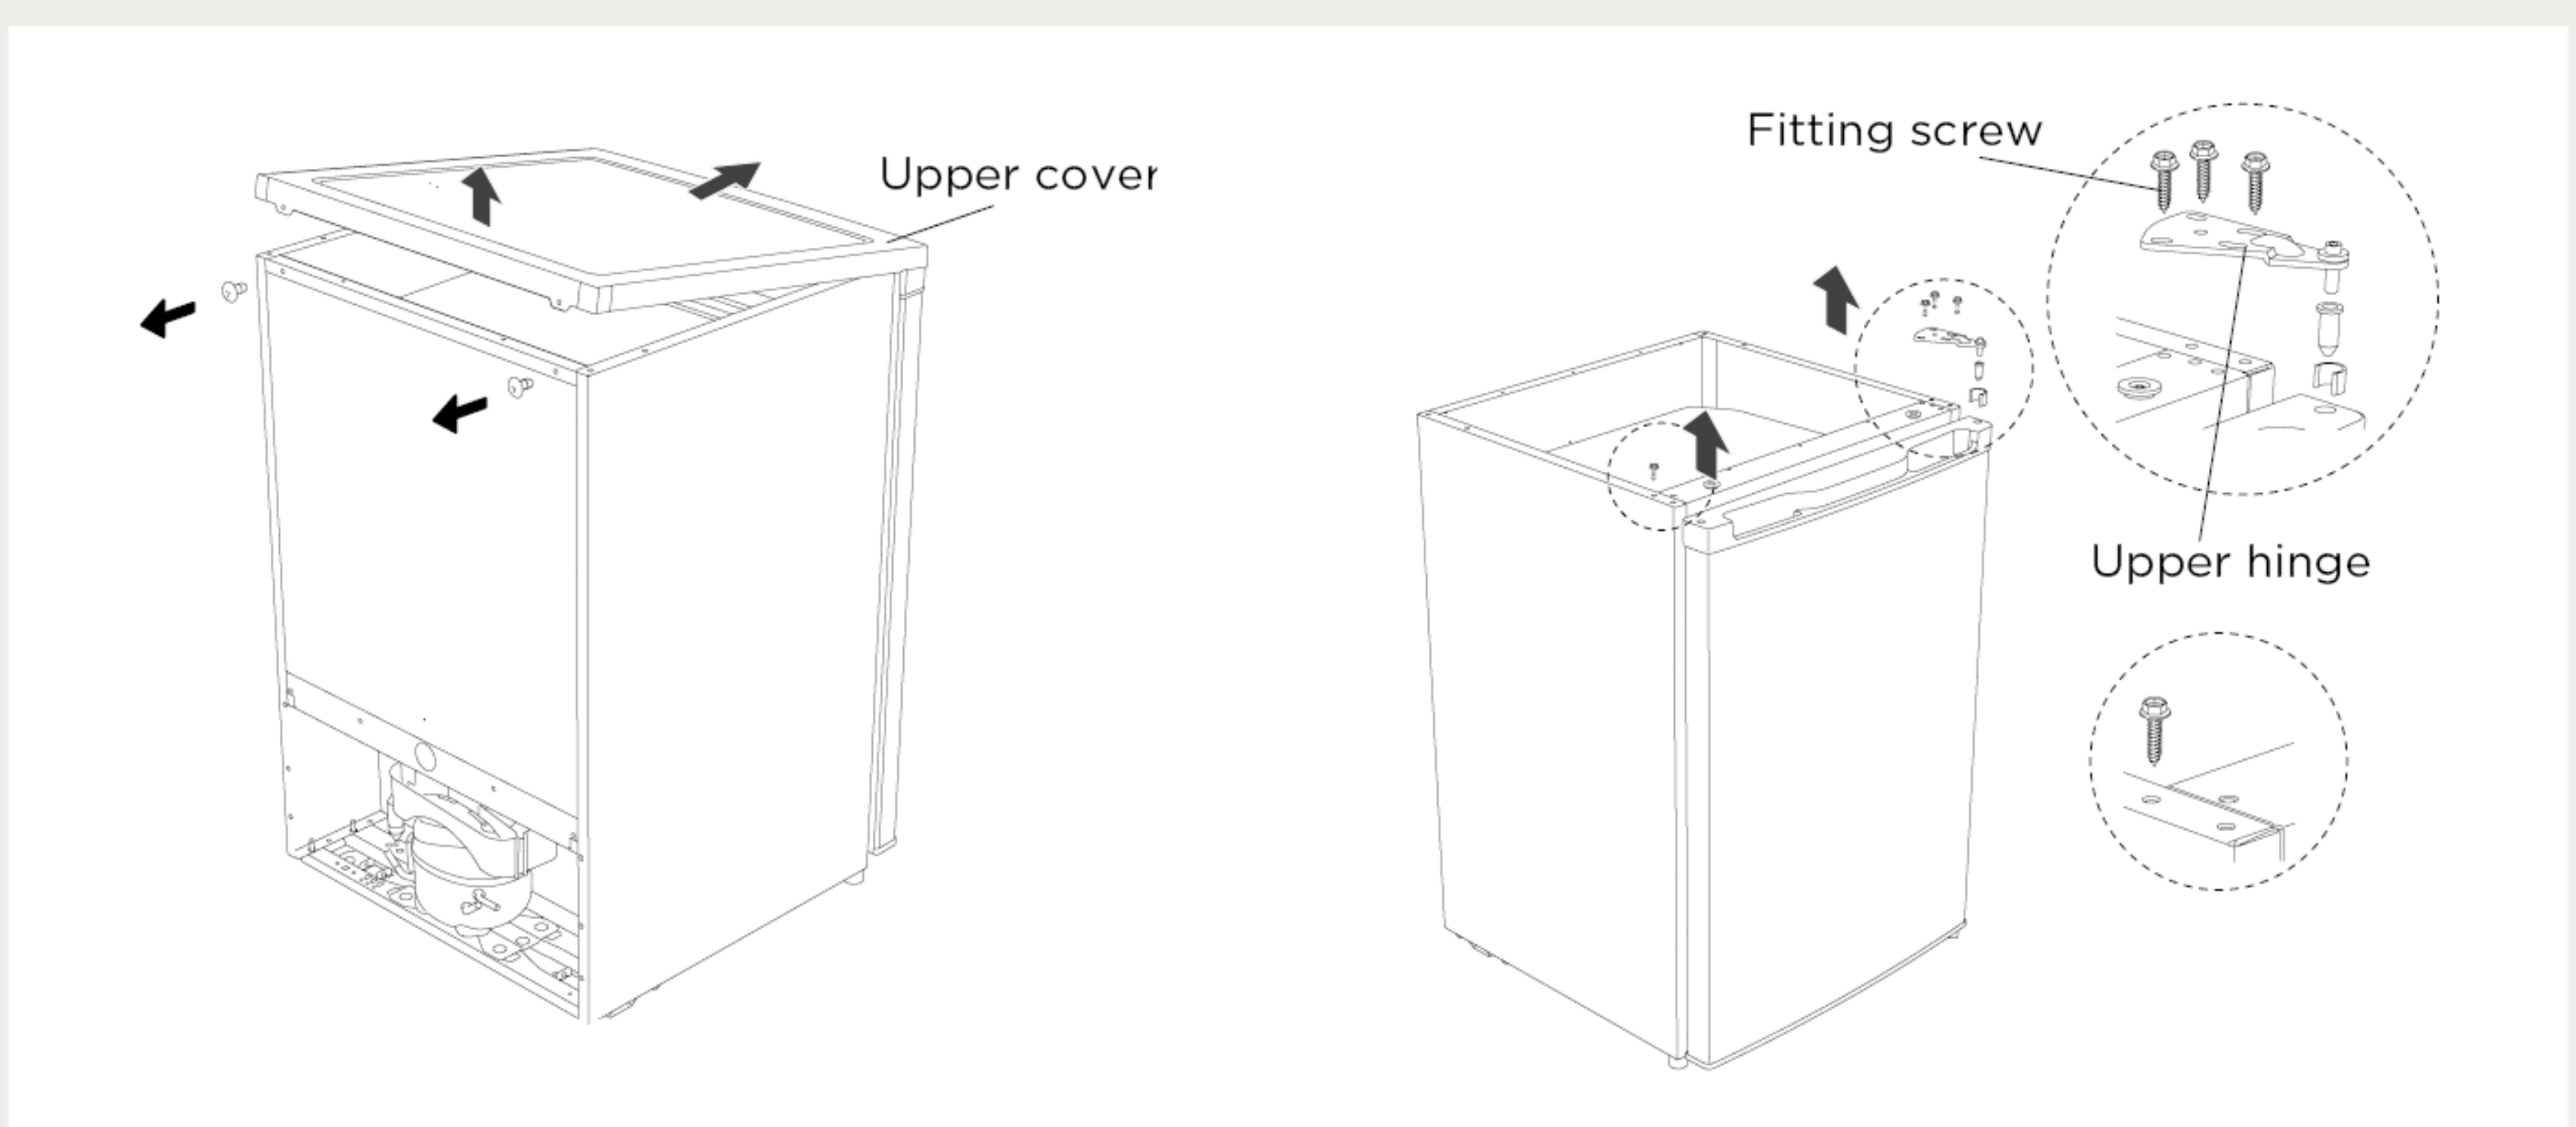

2. Dismantle the upper cover, fitting screws of upper hinge, and remove the upper hinge, please keep the door vertical in whole process for avoiding falling down.
3. Dismantle the door and the bottom hinge assembly and adjustable foot, then assemble the bottom hinge assembly and adjustable foot on other side.

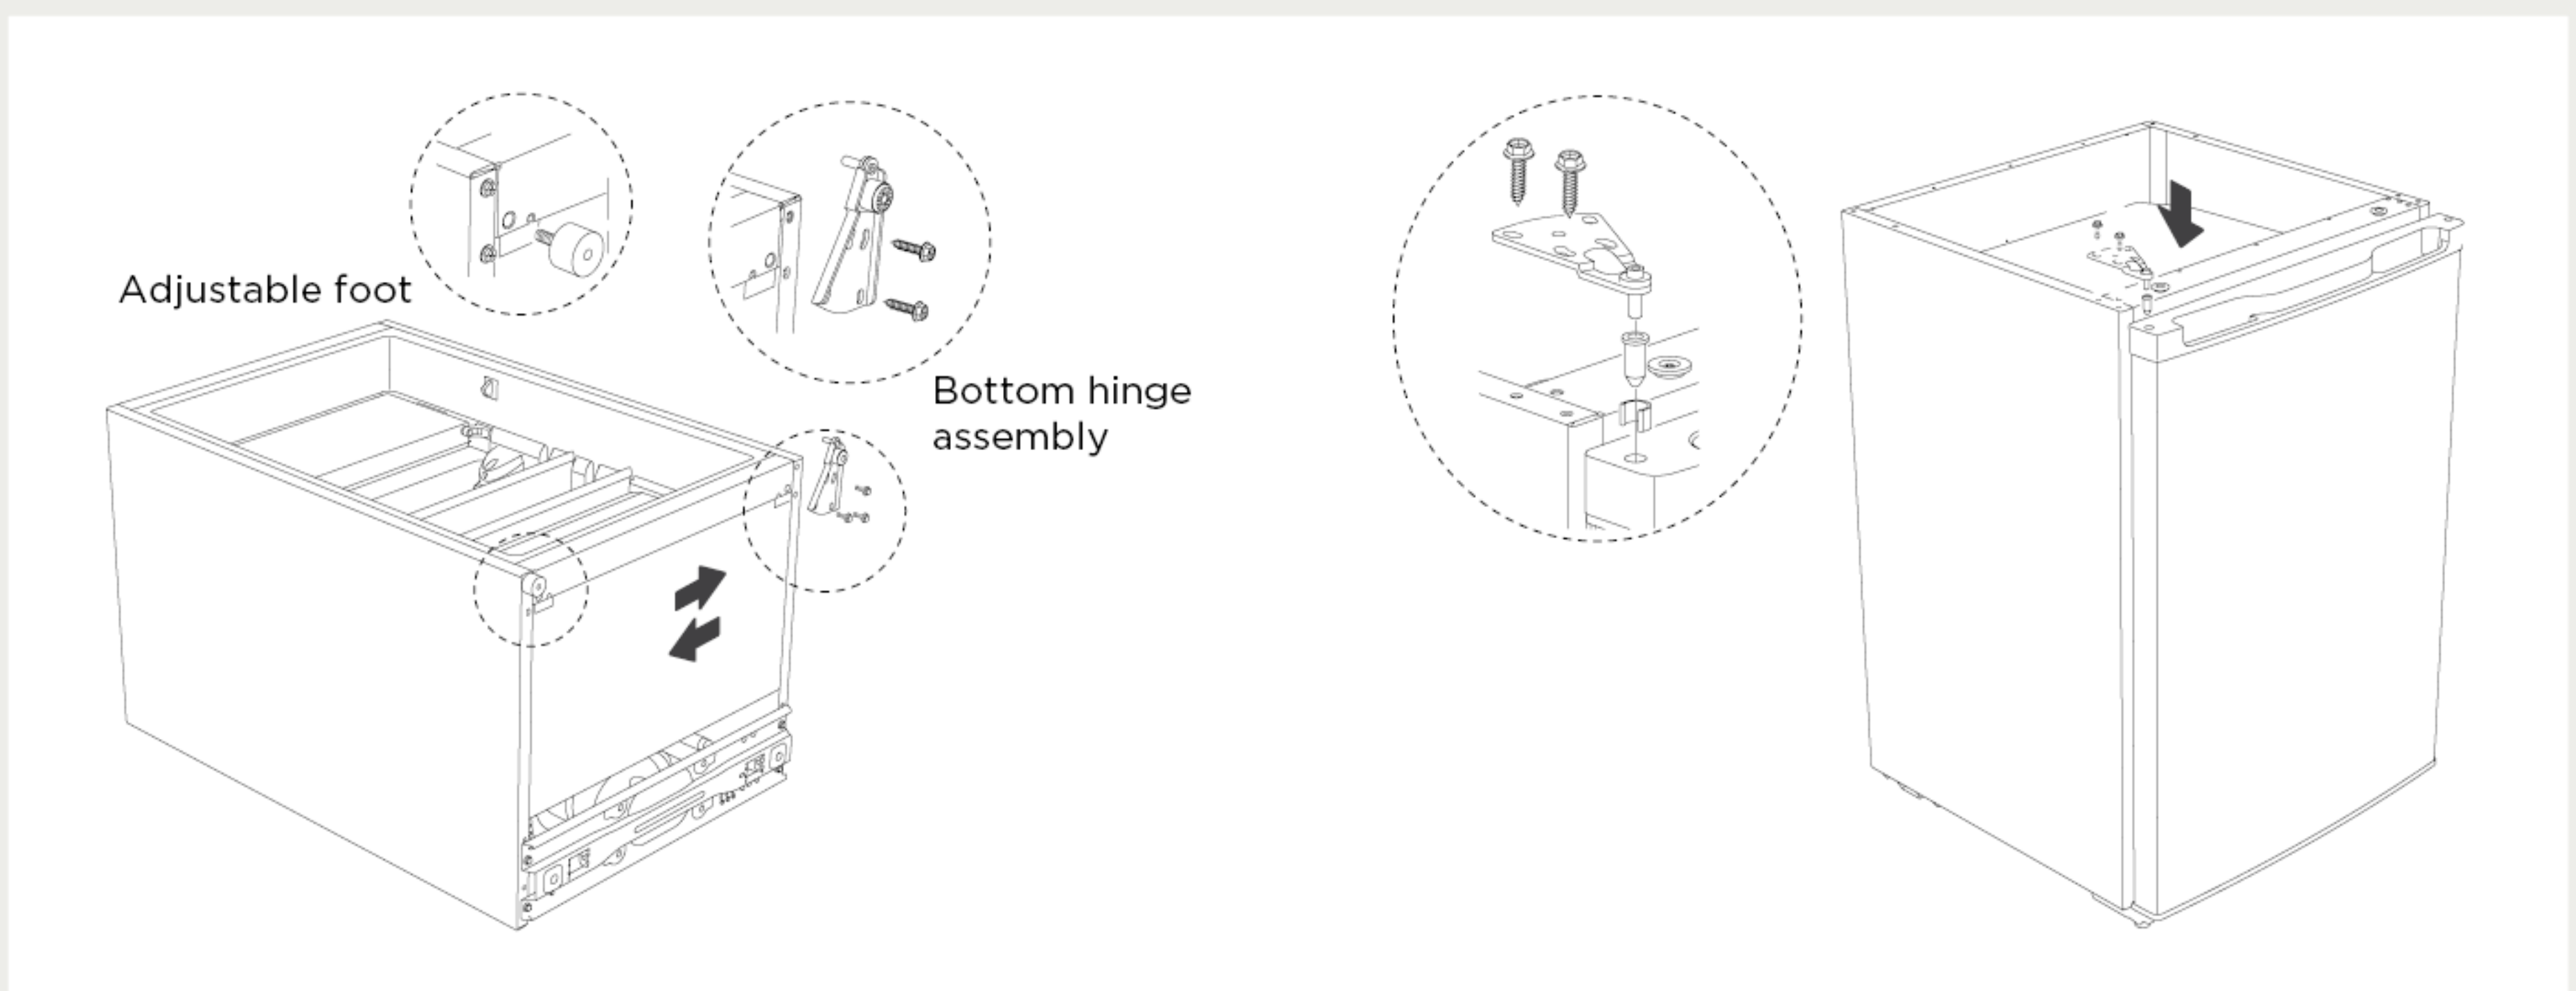

4. Put the door on bottom hinge and assemble the upper hinge, screws, and upper cover.

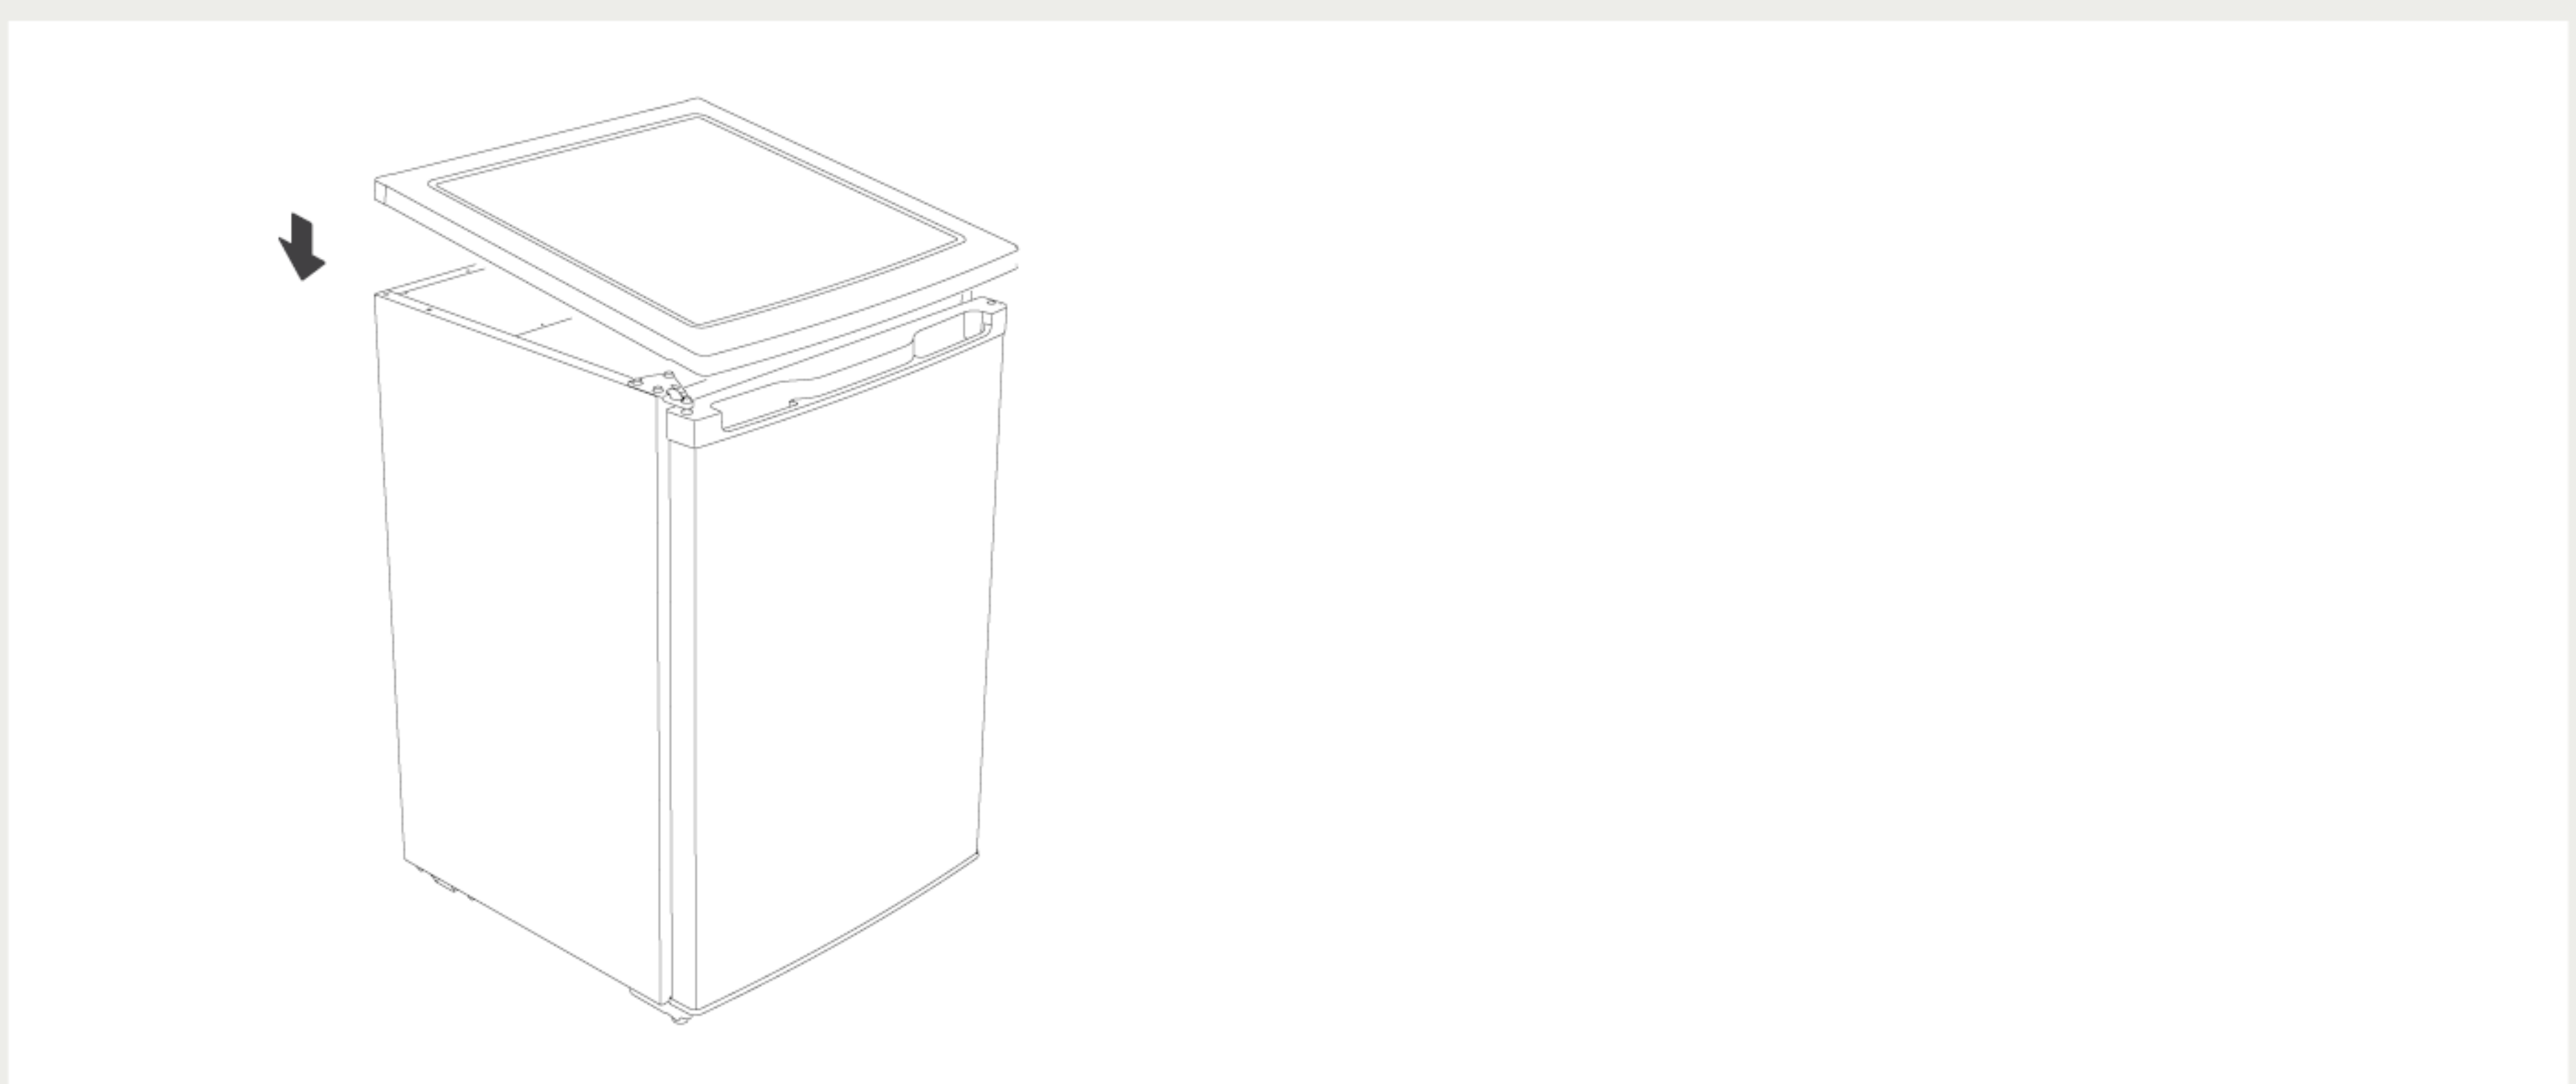

## • | NOTE

**Differences:** Due to technical changes and different models, some of the illustrations in this manual may differ from your model.