


Before using your air conditioner, please read this manual carefully and keep it for future reference.

# WINDOW/WALL-TYPE ROOM AIR CONDITIONER



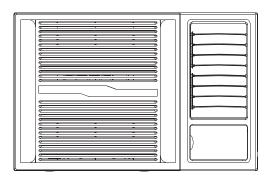

Prior to installation this air-conditioning unit must be submitted for approval by the utility service which provides electricity.

When using this air conditioner in the European countries, the following information must be followed:

<u>DISPOSAL</u>: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

It is prohibited to dispose of this appliance in domestic household waste.

For disposal, there are several possibilities:

- A) The municipality has established collection systems, where electronic waste can be disposed of at least free of charge to the user.
- B) When buying a new product, the retailer will take back the old product at least free of charge.
- C) The manufacture will take back the old appliance for disposal at least free of charge to the user.
- D) As old products contain valuable resources, they can be sold to scrap metal dealers.

Wild disposal of waste in forests and landscapes endangers your health when hazardous substances leak into the ground-water and find their way into the food chain.



## **CONTENTS**

1.	SAFETYINSTRUCTIONS	.2
2.	UNIT PARTS IDENTIFICATION	.5
3.	AIR CONDITIONER FEATURES	.6
4.	CARE AND CLEANING	.8
5.	INSTALLATION	.9
6.	TROUBLESHOOTING TIPS	12
7.	SPECIFICATIONS	13

## Read This Manual

Inside you will find many helpful hints on how to use and maintain your air conditioner properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your air conditioner. You'll find many answers to common problems in the chart of troubleshooting tips. If you review our chart of Troubleshooting Tips first, you may not need to call for service at all.

## /!\ CAUTION

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play the appliance. Cleaning and user maintenance shall not be made by children without supervision. ( be applicable for the European Countries )
- This appliance is not intended for use by persons (including children) with reduced physical ,sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. (be applicable for other countries except the European Countries )
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The appliance shall be installed in accordance with national wiring regulations.
- Do not operate your air conditioner in a wet room such as a bathroom or laundry room.
- The appliance with electric heater shall have at least 1 meter space to the combustible materials.
- Contact the authorised service technician for repair or maintenance of this unit.
- Contact the authorised installer for installation of this unit.

## **SAFETY PRECAUTIONS**

To prevent injury to the user or other people and property damage, the following instructions must be followed. Incorrect operation due to ignoring of instructions may cause harm or damage. The seriousness is classified by the following indications.

WARNING	This symbol indicates the possibility of death or serious injury.
<b>A</b> CAUTION	This symbol indicates the possibility of injury or damage to property.

Meanings of symbols used in this manual are as shown below

= meanings or symbols accam and mandar are as chemic solution		
	Never do this.	
0	Always do this.	

#### **⚠** WARNING ODo not operate or stop the unit by inserting or pulling out the power plug. Do not damage or use an unspecified power cord. Otherwise, it may cause electric • It may cause electric shock or fire • It may cause electric shock or fire. shock or fire due to excess heat due to heat generation. If the power cord is damaged, it generation. must be replaced by the manufacturer or an authorised service centre or a similarly qualified person in order to avoid a hazard. Do not modify power cord length or share the outlet with other appliances. ODo not operate with wet hands or in damp environment. It may cause electric shock or It may cause electric shock. This could damage your health. fire due to heat generation. Always install circuit breaker and a dedicated power circuit. ODo not allow water to run • Incorrect installation may cause · Incorrect earthing may cause It may cause failure of machine electric shock. or electric shock. fire and electric shock. ©Unplug the unit if strange sounds, smell, or smoke ○Do not use the socket if it is loose or damaged. It may cause fire and electric It may cause fire and electric • It may cause electric shock. shock. ①Leave the door closed while the air conditioner is running. ODo not use the power cord close to heating appliances • It is not designed to cool the • It may cause fire and electric • It may cause an explosion or fire. entire house. shock.

- It may cause explosion, fire and, burns.
- . It may cause failure and electric shock.



- When the air filter is to be removed, do not touch the metal parts of the unit.
- It may cause an injury.
- conditioner with water.
- Water may enter the unit and degrade the insulation. It may cause an electric shock.
- Ventilate the room well when used together with a stove, etc.
- An oxygen shortage may occur.

- When the unit is to be cleaned, switch off, and turn off the circuit breaker.
- Do not clean unit when power is on as it may cause fire and electric shock, it may cause an injury.
- Stop operation and close the window in storm or burricane
- Operation with windows opened may cause wetting of indoor and soaking of household furniture.
- O Do not place obstacles around air-inlets or inside of air-outlet
- It may cause failure of appliance or accident.
- O Do not use strong detergent such as wax or thinner but use a soft cloth
- Appearance may be deteriorated due to change of product color or scratching of its surface.

- O Do not put a pet or house plant where it will be exposed to direct air flow
- This could injure the pet or plant.
- Hold the plug by the head of the power plug when taking it out
- It may cause electric shock and damage.
- ·
- If bracket is damaged, there is concern of damage due to falling of unit.
- Do not place heavy object on the power cord and ensure that the cord is not compressed.
- There is danger of fire or electric shock.

- O Do not use for special purposes.
- Do not use this air conditioner to preserve precision devices, food, pets, plants, and art objects. It may cause deterioration of quality, etc.
- Turn off the main power switch when not using the unit for a long time.
- It may cause failure of product or fire.
- Always insert the filters securely. Clean filter once every two weeks.
- Operation without filters may cause failure.
- O Do not drink water drained from air conditioner.
- It contains contaminants and could make you sick.

- O Use caution when unpacking and installing. Sharp edges could cause injury.
- ① If water enters the unit, turn the unit off at the power outlet and switch off the circuit breaker. Isolate supply by taking the power-plug out and contact a qualified service technician.

## **SAFETY PRECAUTIONS**(prior to operation)

## Preparing for operation

- 1. Contact an installation specialist for installation.
- 2. Plug in the power plug properly.
- 3. Do not use a damaged or non-standard power cord.
- 4. Do not share the same outlet with other appliances.
- 5. Do not use an extension cord.
- 6. Do not start/stop operation by plugging/unplugging the power cord.

#### Usage

- Exposure to direct airflow for an extended period of time could be hazardous to your health. Do not expose occupants, pets, or plants to direct airflow for extended periods of time.
- 2. Due to the possibility of oxygen deficiency, ventilate the room when used together with stoves or other heating devices.
- Do not use this air conditioner for non-specified special purposes (e.g. Preserving precision devices, food, pets, plants, and art objects). Usage in such a manner could harm such property.

## Cleaning and maintenance


- 1. Do not touch the metal parts of the unit when removing the filter. Injuries can occur when handling sharp metal edges.
- 2. Do not use water to clean inside the air conditioner. Exposure to water can destroy the insulation, leading to possible electric shock.
- When cleaning the unit, first make sure that the power and circuit breaker are turned off.


## **Operating Temperature**

Cooling operation	Outdoor temp: Indoor temp:	18-43°C (1 8-52°C for special tropical models)
Heating operation	Outdoor temp:	-5-24℃
ricating operation	Indoor temp:	0 -27 °C

Note: Performance may be reduced outside of these operating temperatures.


- 1. Power cord conductors are distinguished according to color as follows (see Fig.1)
- For your safety and protection, this unit is earthed through the power cord (see Fig.2) Please contact the manufacturer or its service agent or a similar qualified person if you want to replace it.
- Be sure that the unit being correctly grounded. The wall outlet (Air-break switch)should be provided with reliable earth wire.
- 4. The unit should be provided with an individual circuit and the circuit breaker/fuse rating should be the same as that of the power cord and wall outlet.

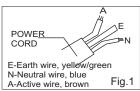

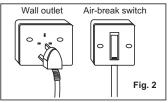



## **UNIT PARTS IDENTIFICATION**


NOTE: The front panel and cabinet may be slightly different according to the models, but the functions are the same. The following illustration is for explanation purpose only, the actual shape of the machine you purchased may be slightly different.

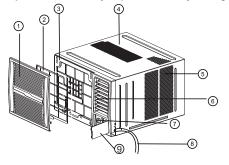

- 1. Front panel
- 2. Air filter
- 3. Frame
- 4. Cabinet
- 5. Air inlet grille (outdoor side)
- 6. Air outlet grille
- 7. Operation knob
- 8. Power supply cord
- 9. Control panel cover

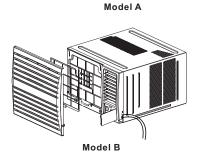

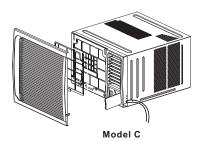


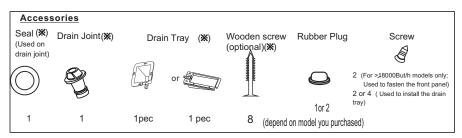

NOTE: Optional parts(\*), depending on model you purchased.


**NOTE**:All the illustrations in the manual are for explanation purpose only. Your air conditionar may be slightly different. The actual shape shall prevail.

## **AIR CONDITIONER FEATURES**

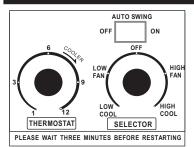


**NOTE**:Do not rotate the knob from HIGH COOL to LOW COOL and from 12 to 1 in the clockwise direction.

**NOTE:** The outline of the operation panel is based on typical model, the function is the same with your air conditioner while some difference may exist in appearance.

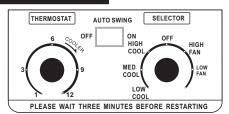


**NOTE**:Do not rotate the knob from LOW FAN to LOW COOL and from 12 to 1 in the clockwise direction.

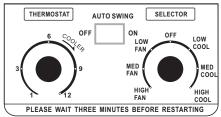

**NOTE**:Do not rotate the knob from LOW COOL to HIGH FAN and from 12 to 1 in the clockwise direction.

#### **SELECTOR**

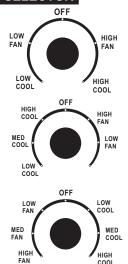

The controls featured in this manual are representative of many available models. Your model may offer slightly different features

#### Cool Mode

The desired cool setting is selected by rotating the knob to the appropriate location.

"HIGH COOL" has maximum cooling effect and airflow.

"LOW COOL" has minimum cooling effect and airflow.

"MED COOL" has the intermediate cooling effect and airflow.

"OFF" will completely shut off the unit.

#### Fan Mode

Rotate the knob to select your choice of fan speeds for air circulation.


**Note:** When selecting a fan speed, the compressor will not run.

#### Note

When turning the SELECTOR knob from "LOW COOL" to "HIGH COOL", keep your speed slow as far as possible. Do not change the operation mode between "LOW COOL" and "HIGH COOL" too often.

## **THERMOSTAT**

## **THERMOSTAT**

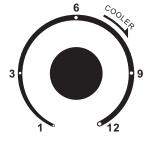

#### **Thermostat**

The thermostat is used to set the desired room temperature when the unit is being operated in the COOL MODE.

To set the desired room temperature, rotate the thermostat switch to the desired setting. After the set temperature is achieved the thermostat will automatically start and stop the compressor in order to maintain the desired set temperature. Rotate the thermostat selector clockwise for higher cool settings. Higher cool settings will provide lower room temperature. Rotate the thermostat selector counter clockwise for lower cool settings. Lower cool settings will provide higher room temperature.

NOTE: During the cooling operation of the unit, when the thermostat knob is rotated clockwise, allow at least three minutes before turning back the knob to the "COOLER" direction. Otherwise the fuse may blow due to an overload of the unit.

## AUTO SWING(on some models)

Horizontal air flow adjustment (automatically)

#### **AUTO SWING**

OFF




ON



When the AUTO SWING switch is turned to "ON" position, the vertical louvers automatically oscillate right and left sweeping the cold air alternately to obtain comfortable cooling. The vertical louvers may be stopped at any position when the AUTO SWING switch is turned "OFF".

## Vertical air flow adjustment (manually)

Up horizontal louver

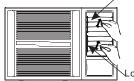

To adjust vertical air flow direction of the up or low horizontal louvers, adjust any one of the up or low horizontal louver blades.

Low horizontal louver

#### Vent Control

The vent control is located above the control knobs. The operation method is different on different models (see the following figures).

For maximum cooling efficiency, CLOSE the vent. This will allow internal air circulation. OPEN the vent to discharge stale air.



To open the vent, pull the lever toward you To close it, push it in.



CLOSE --- OPEN

To open the vent, set the lever to the right position To close it, set the lever in the left position.

**NOTE:** The VENTILATION LEVER should normally be kept in the CLOSED position during cooling for maximum cooling effect. The "OPEN" position is used only for ventilation.

## **CARE AND CLEANING**

- CAUTION -

Clean your air conditioner occasionally to keep it looking new. Be sure to unplug the unit before cleaning to prevent chock or fire hazards.

## Air Filter

The air filter behind the inlet grille should be checked and cleaned at least once every 2 weeks (or as necessary) to maintain optimal performance of the air conditioner.

#### How to remove the air filter

- 1. Hold the tabs under the front panel, then uplift it outwards, and remove the front panel.
- Pinch the handle under the air filter and make the air filter arched, remove it from the slot from underside to upside.
- 3. Clean the filter with warm, soapy water. The water should be below 40°C to prevent distortion of the filter.
- Rinse off and gently shake off excess water from the filter. Allow the filter to dry before replacing it. To prevent distortion of the filter, do not dry in direct sunlight.



#### How to install the air freshen filter

- 1. Remove the air filter as the steps above.
- 2. Install the air freshen filter to the positions you desired as shown in the right picture.





The air freshen filter can be installed at any place of the four positions.



## **CARE AND CLEANING (CONTINUED)**

- Hold the slot under the front panel, then uplift it onwards, and remove the front panel.
- Pinch the handle under the air filter and make the air filter arched, remove it from the underside to upside.
- Wash the filter using liquid dishwashing detergent and warm water. Rinse filter thoroughly.
- Gently shake excess water from the filter. Be sure the filter is thoroughly dry before replacing.
- Or, instead of washing you may vacuum the filter clean.

**Note:** Never use hot water over 40°C(104°F) to clean the air filter. Never attempt to operate the unit without the air filter.

#### Cabinet Cleaning

- Be sure to unplug the air conditioner to prevent shock or fire hazard. The cabinet
  and front may be dusted with an oil-free cloth or washed with a cloth dampened in
  a solution of warm water and mild liquid dishwashing detergent. Rinse thoroughly
  and wipe dry.
- Never use harsh cleaners, wax or polish on the cabinet front.
- Be sure to wring excess water from the cloth before wiping around the controls.
- Excess water in or around the controls may cause damage to the air conditioner.
- · Plug in air conditioner.

**NOTE:** Never use water over 50 °C, alcohol, gasoline, acid, solvent or brush to clean the front panel as this will damage the surface of the part.

#### Winter Storage

If you plan to store the air conditioner during the winter, remove it carefully from the window according to the installation instructions. Cover it with plastic or return it to the original carton.

## **INSTALLATION**


#### & Select The Best Location

Install the unit at a place having sufficient strength to support the unit securely. For maximum efficiency, install the air conditioner on a side of a house or building which favors more shade than direct sunlight.

Provide sufficient clearance or space around the air inlet and air outlet so that air flow will not be obstructed, following figures give detailed requirements.

Only trained and qualified service personnel should install, repair or service air conditioning equipment. Users should not install the air conditioner by themselves.

## **INSTALLATION(CONTINUED)**

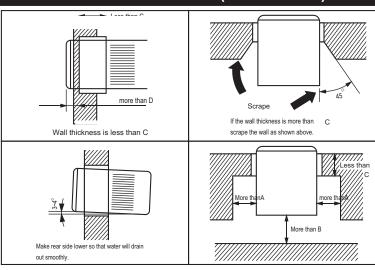

	Size(mm)
Α	400
В	500
С	210
D	60


## The Treatment of Condensed Water

To meet different requirement of different type of air conditioner, therea re two kinds of methods for your choice to treat the condensed water.

You can choose bottom drainage ,See the following procedures to perform bottom drainage:

- Remove the rubber plug from the bottom of the cabinet and attach to the back drain hole (on some models the rubber plug provided with your air conditioner accessory). For the units without the bottom rubber plug and the back drain hole, just install the drain tray.
- 2. Take out the drain tray and screws (which provided with your air conditioner accessory).
- Install the drain tray at the bottom of the unit and secure with screws provided.
- Connect the drain hose to the outlet located at one side of the drain tray. You can purchase the drain hose or tubing locally to satisfy your particular needs (Drain hose is not supplied).


<u>Suggestion:</u> To ensure the condensed water drain off smoothly, always keep the drain oulet of the the drain tray downward when install the drain tray.

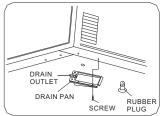

You can choose back drainage (on models with back drain hole).

See the following procedures to perform back drainage:


- 1. Fit the seal onto the drain joint (which provided with your air conditioner accessory).
- Remove the rubber plug from the back of the unit. (If applicable),and insert the rubber plug(on some models the rubber plug provided with your air conditioner accessory) into the bottom drain hole of the unit.
- Attach the drain joint to the back of the cabinet where you remove the plug and rotate 90° to securely assemble them.
- 4. Connect the drain joint with a extension drain hose (Locally purchased)

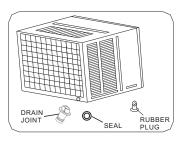

## Installation Steps

#### Step 1. Remove the front panel and the air filter

- 1. Hold the slot under the front panel, then uplift it outwards, and remove the front panel (See Fig.1).
- 2. Pinch the handle under the air filter and make the air filter arched, remove it from the slot from underside to upside (See Fig.2).

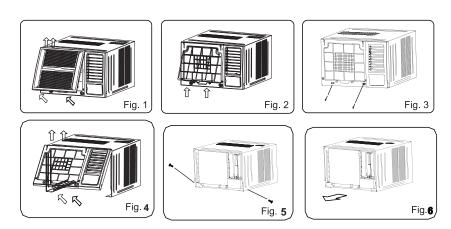


Step 2. Remove the frame.


- 1. Remove the two fixed screws from the frame. (see Fig.3)
- 2. Grasp the left corner in the frame's underside, the loosen the frame. (see Fig.4)




#### Step 3. Installation

- 1. Remove the screws fix the chassis-fixing board and cabinet. some Models have two more screws on the back of the cabinet. (see Fig.5)
- 2. Grasp the handle on the chassis and carefully slide the air conditioner out of the cabinet. (see Fig.6)
- 3. When need to drain off water, intall the drain plug on the Chassis board. Then fix the cabinet on the supporter (provide for yourself or contact the dealer)(see Fig.7).
- 4. Push the unit chassis into the cabinet. (see Fig.8)
- 5. Fix the chassis and cabinet. (see Fig.5)

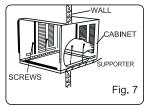

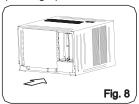

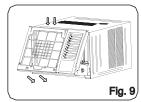


#### Step 4. Install the frame

- 1. Install the frame. (see Fig.9)
- 2. Fix the screws on the frame. (see Fig.3)

#### Step 5. Install the front panel and the air filter.

- 1. Install the air filter into the frame's slot from upside to underside. (see Fig.2)
- Hang the front panel on the frame's buckle, then press the front panel into the frame's slot until hear a click. (see Fig.10)

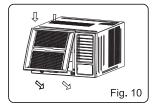

## TROUBLESHOOTING TIPS

Before calling for service, review this list. It may save you time and expense. This list includes common occurrences that are not the result of defective workman-ship or materials in this appliance.

Problem	Solution	
Air conditioner	Wall plug disconnected. Push plug firmly into wall outlet.	
does not start	House fuse blown or circuit breaker tripped. Replace fuse with time delay type or reset circuit breaker.	
	Selector Control in OFF position. Turn selector to the desired FAN or COOL setting.	
	Unit turned off by moving thermostat to a higher number and then immediately turning back to a colder number. Wait approximately 3 minutes. Listen for compressor to start.	
	Unit turned off and then on too quickly. Turn unit off and wait 3 minutes before restarting.	
	Thermostat set too low. Adjust thermostat to higher number for cooling.	

Problem	Solution
	Turn selector to a higher COOL position.
Air from unit does	Thermostat set too warm. Set thermostat to colder temperature.
not feel cold enough	Room temperature below 18°C(64°F). Cooling may not occur until room temperature rises above 18°C(64°F).
	Temperature sensing tube touching cold coil, located behind air filter. Straighten tube away from coil.
Air conditioner	Outdoor temperature below 18 °C(64°F). To defrost the coil, set selector to FAN position. Then, set thermostat to warmer position.
is too warm- ice forming on cooling	Air filter may be dirty. Clean filter. Refer to Care and Cleaning section. To defrost, set selector to FAN.
coil behind decorative front.	Thermostat set too cold for night-time cooling. To defrost the coil, set selector to a FAN position. Then, set thermostat to a warmer position.
Air conditioner	Dirty air filter- air restricted. Clean air filter. Refer to Care and Cleaning section.
cooling, but room is too warm- NO	Thermostat set too warm. Turn thermostat clockwise to a colder setting.
is too warni- NO ice forming on	Air directional louvers positioned improperly. Position louvers for better air distribution.
cooling coil behind decorative front.	Front of units is blocked by drapes, blinds, furniture, etc restricts air distribution. Clear blockage in front of unit.
	Doors, windows, registers, etc. Open- cold air escapes. Close doors, windows, register
	Unit recently turned on in hot room. Allow additional time to remove "Stored heat" from walls, ceiling, floor and furniture.
Air conditioner turns o	n Dirty air filter- air restricted. Clean air filter.
and off rapidly	Outside temperature extremely hot. Set to high cool to bring air past cooling coils more frequently.
Noise when unit is cooling	Air movement sound. This is normal . If too loud, turn selector to lower FAN setting.
coomig	Sound of fan hitting water-moisture removal system. This is normal when humidity is high. Close doors, windows and registers.
	Window vibration - poor installation. Refer to installation instructions or check with installer.
Water dripping INSIDE when unit is cooling.	Improper installation. Tilt air conditioner slightly to the outside to allow water drainage. Refer to installation instructions - check with installer.
Water dripping OUTSIDE when unit is cooling.	Unit removing large quantity of moisture from humid room. This is normal during excessively humid days.

## SPECIFICATIONS

## Unit dimensions:

MODEL (Btu/h)	BODY DIMENSION(mm) (W X H X D)
5000 0000	445X320X415
5000~6000	450X346X535
7000~9000	450X346X535
9000~12000	560X400X640
9000~12000	600X380X560
15000~16000	660X434X620
15000~24000	660X428X680
10000 24000	660X428X780

NOTE: Value of D is only referenced.

#### Minimum norminal cross-sectional area of conductors:

Rated current of appliance (A)	Nominal cross-sectional area (mm²)
>3 and <6	0.75
>6 and <10	1
>10 and <16	1.5
>16 and <25	2.5

## Suggest Minimum Wire Size(AWG:American Wire Gage):

Appliance Amps	AWG Wire Size
10	18
13	16
18	14
25	12
30	10

